


HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

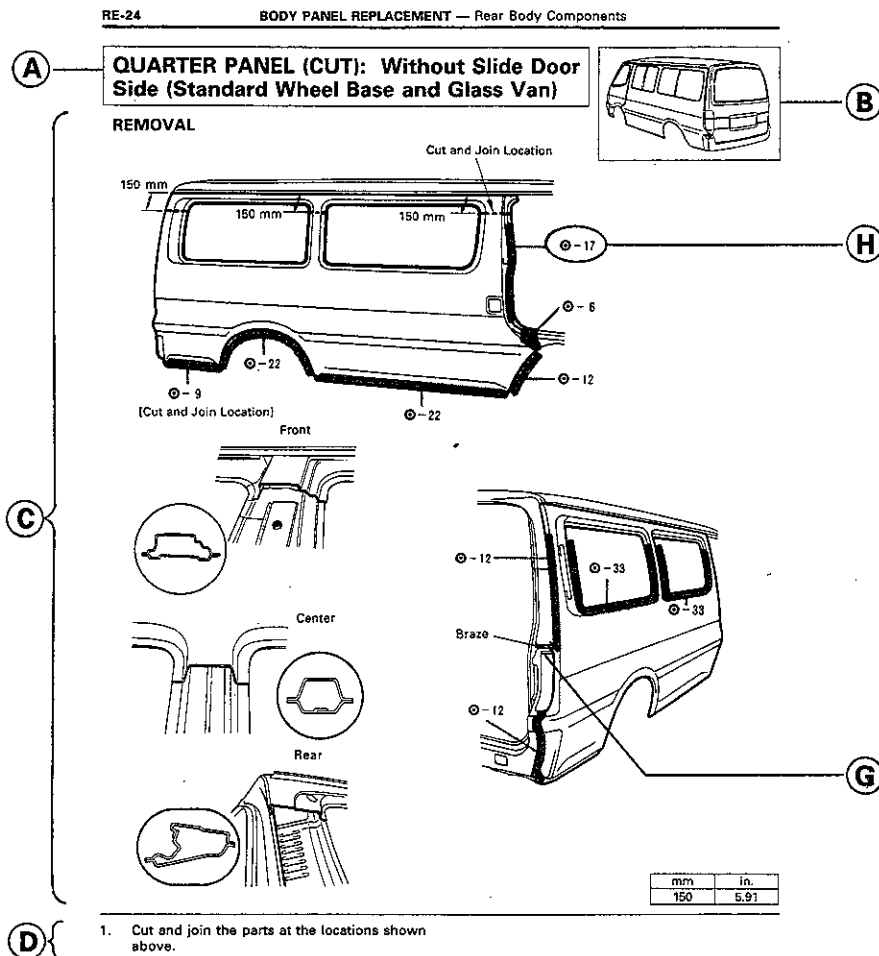

(A) : REPLACEMENT PARTS AND METHOD

QUARTER PANEL (CUT)

Replacement method

- (ASSY) Assembly replacement
- (CUT) Major cutting (less than 1/2 of parts used)
- (CUT-H) Half cutting (about 1/2 of parts used)
- (CUT-P) Partial cutting (most of parts used)

Replacement parts

(B) : PARTS LOCATION

(C) : REMOVAL DIAGRAM

Describes in detail removal of the damaged parts involving repair by cutting.


(D) : REMOVAL GUIDE

Provides additional information to more efficiently help you perform the removal.

BODY PANEL REPLACEMENT — Rear Body Components

RE-25

INSTALLATION

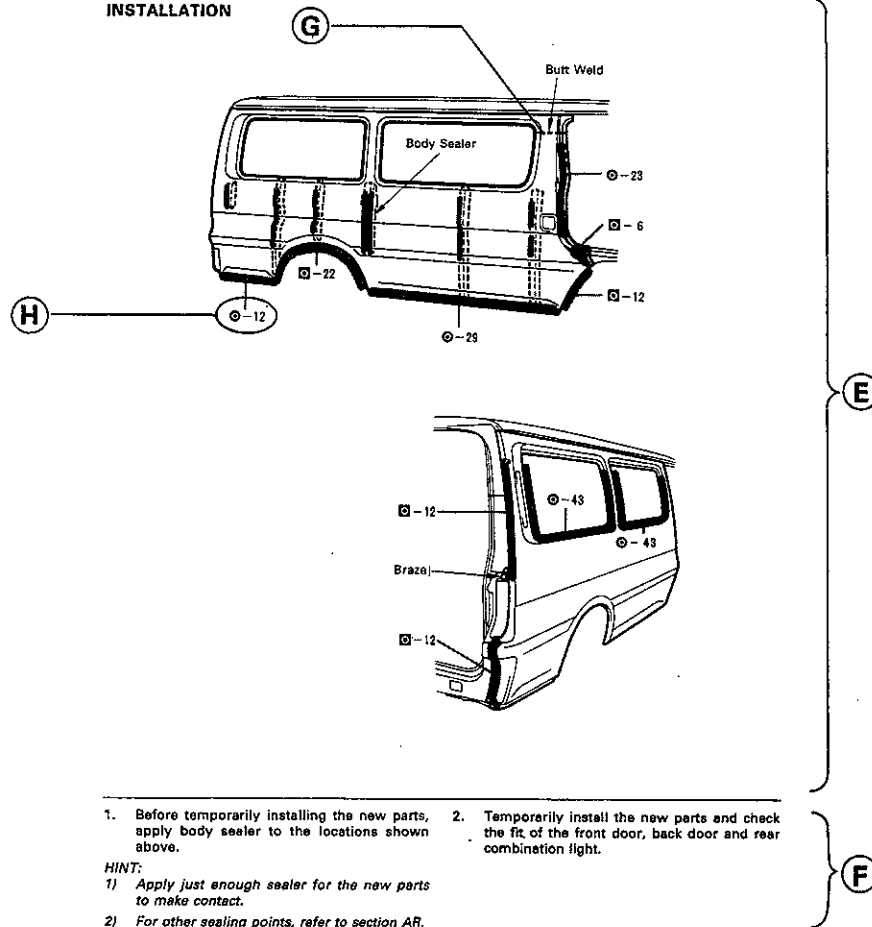**E : INSTALLATION DIAGRAM**

Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.

F : INSTALLATION GUIDE

Provides additional information to more efficiently help you perform the installation.

G : SYMBOLS

See page IN-4.

H : ILLUSTRATION OF WELD POINTS

Weld method and panel position symbols.

See page IN-5.