
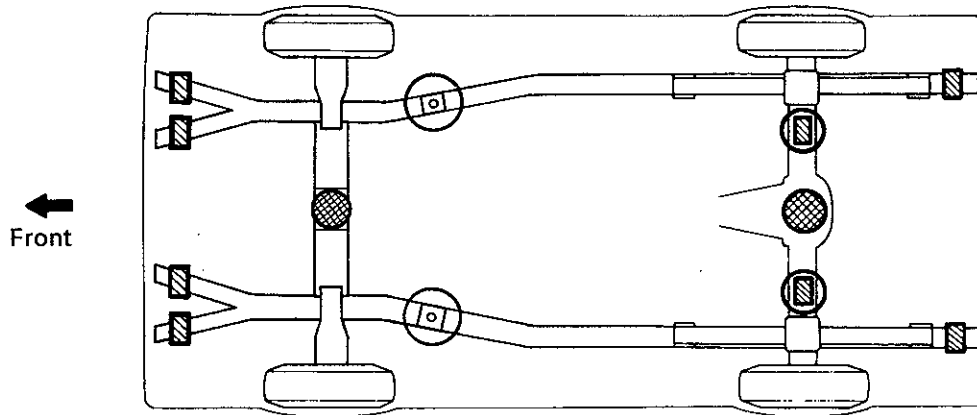
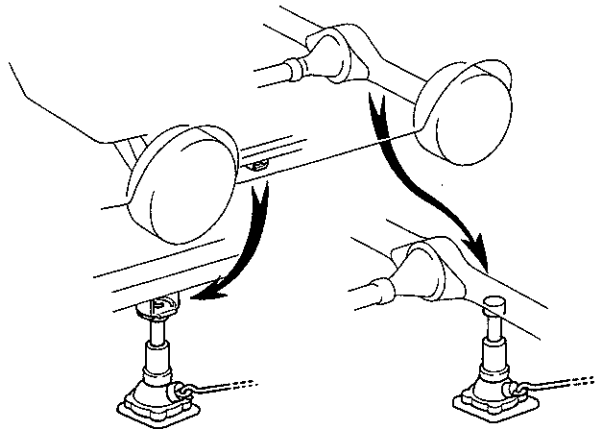


VEHICLE LIFT AND SUPPORT LOCATIONS

2WD

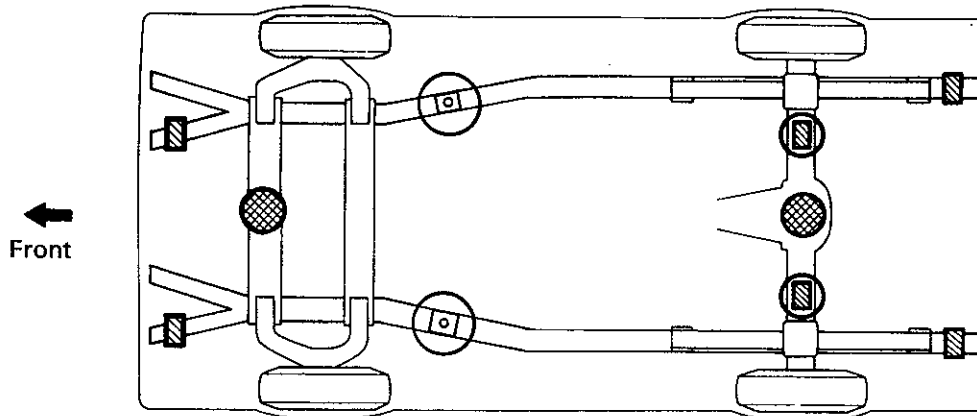

4WD


**JACK POSITION**

Front Center of front suspension crossmember
 Rear Center of rear axle housing


**SCREW TYPE JACK POSITION
SUPPORT POSITION**

Safety stand

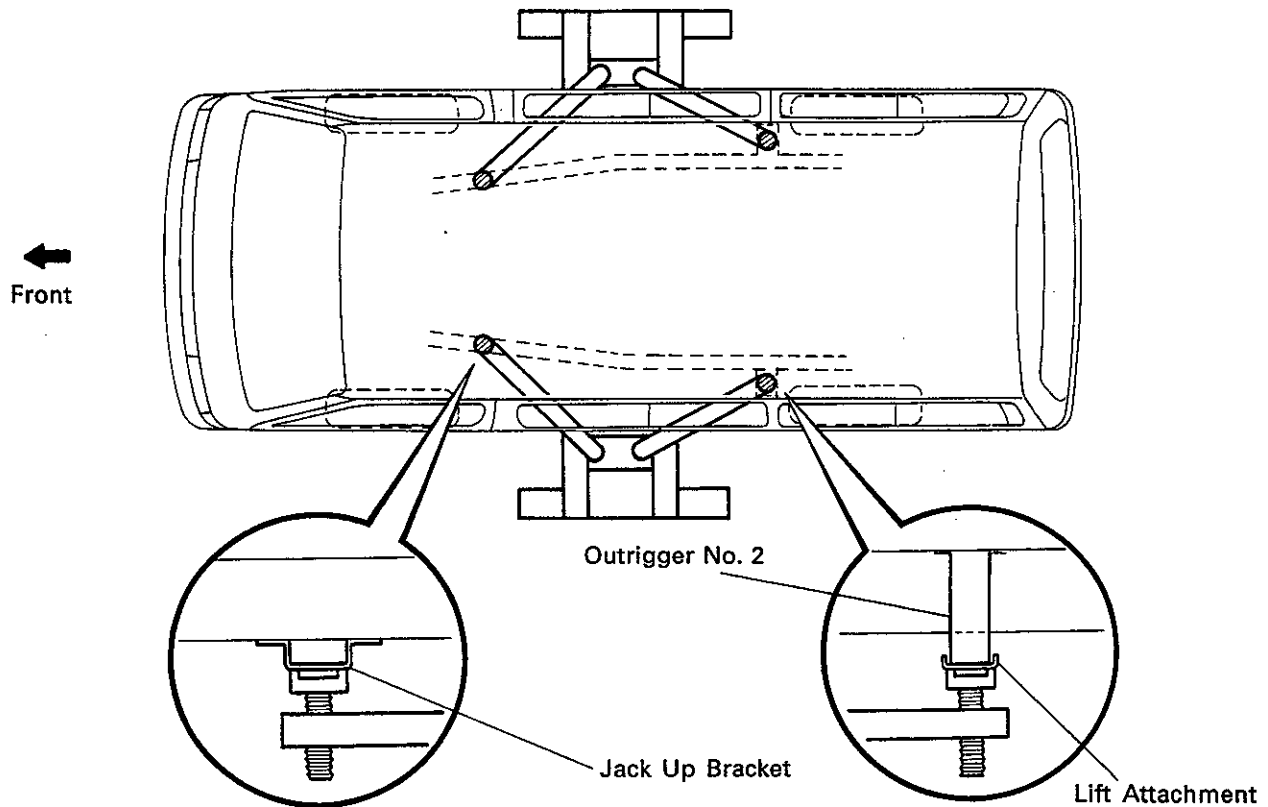

VEHICLE LIFT AND SUPPORT LOCATIONS (Cont'd)**SWING ARM TYPE LIFT**

NOTICE: When lifting the vehicle, place the supports correctly at the positions shown above.

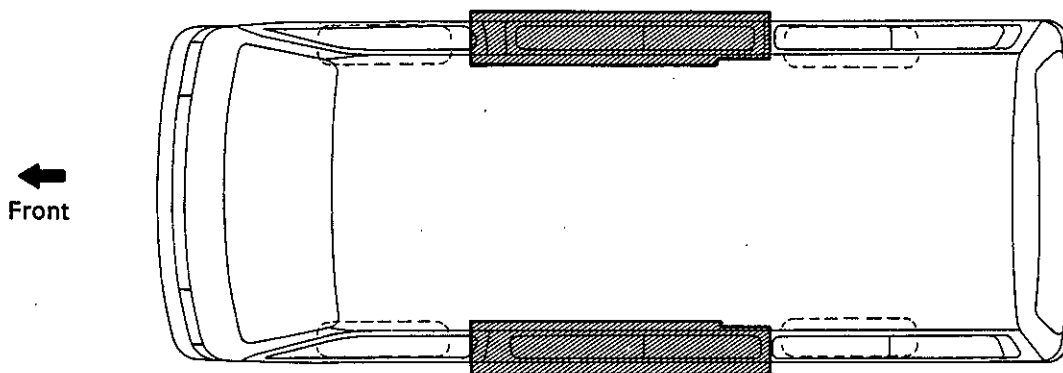PLATE TYPE LIFT (Do NOT use.)

NOTICE: Never use the plate type lift – using it to lift up the vehicle will cause the body shape to warp.