
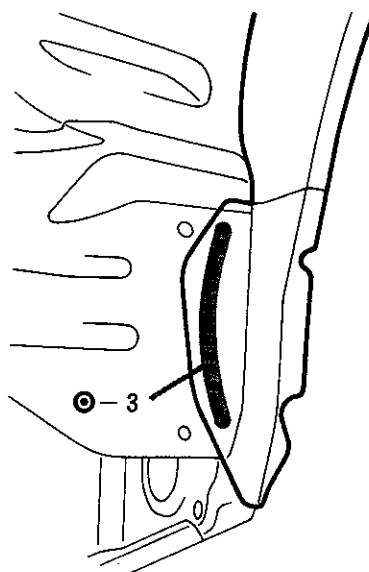
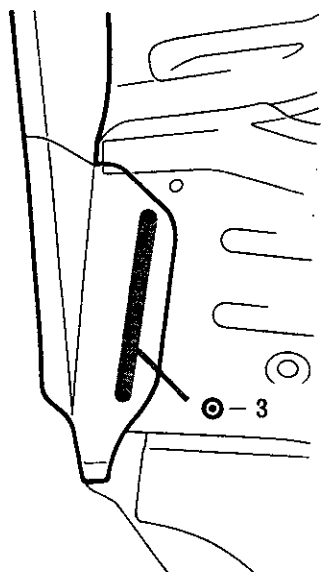
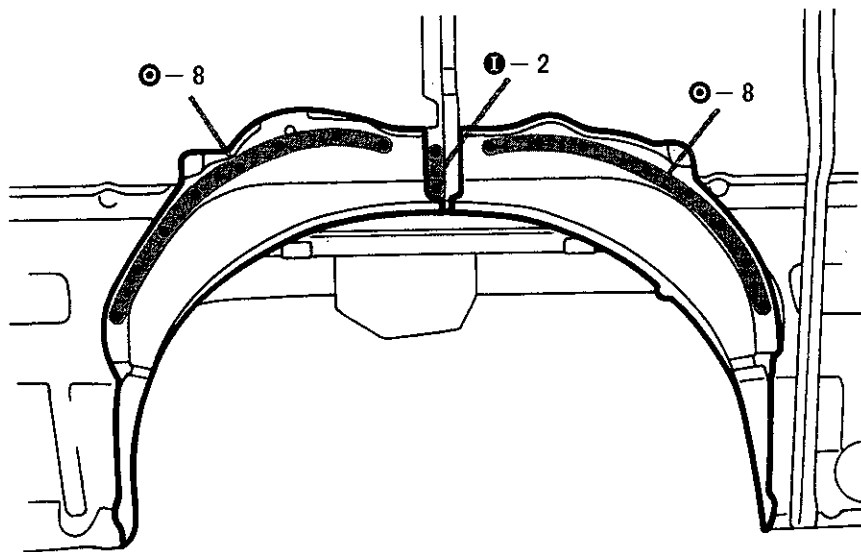
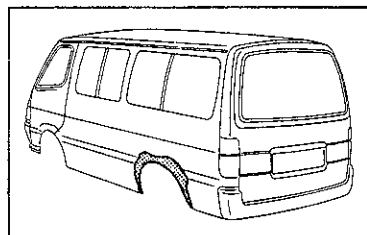
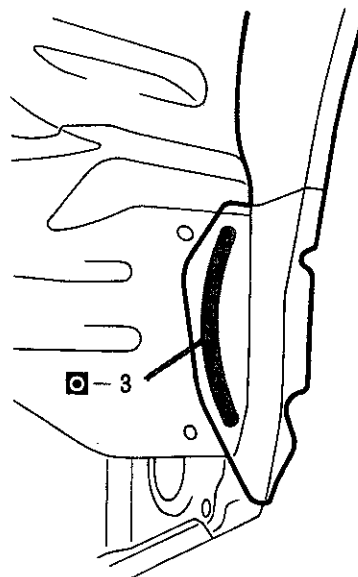
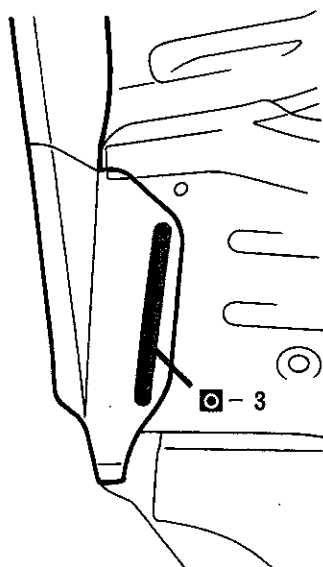


QUARTER WHEEL HOUSING OUTER PANEL (ASSY)

REMOVAL (With the quarter panel removed.)

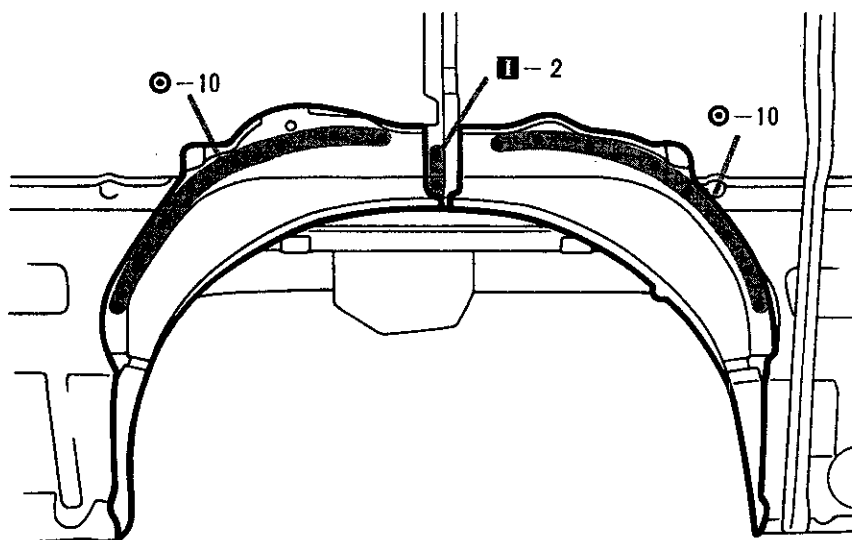

INSTALLATION

1. Before welding the new parts, temporarily install the quarter panel and check the fit.