
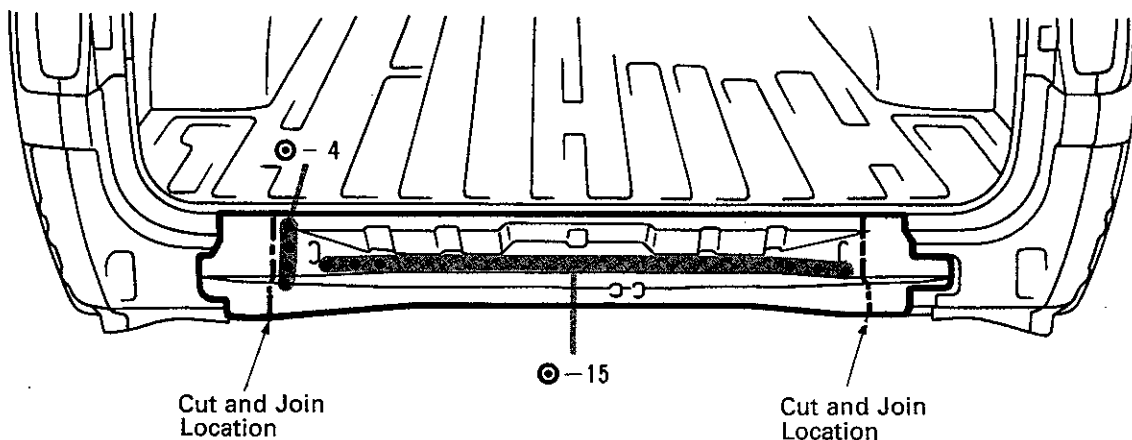



REAR FLOOR REAR CROSSMEMBER INNER (CUT)

REMOVAL (With the rear floor rear crossmember outer removed.)

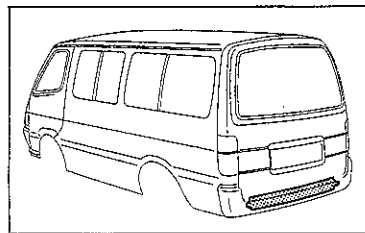

1. Cut and join the parts at the locations shown above.

INSTALLATION

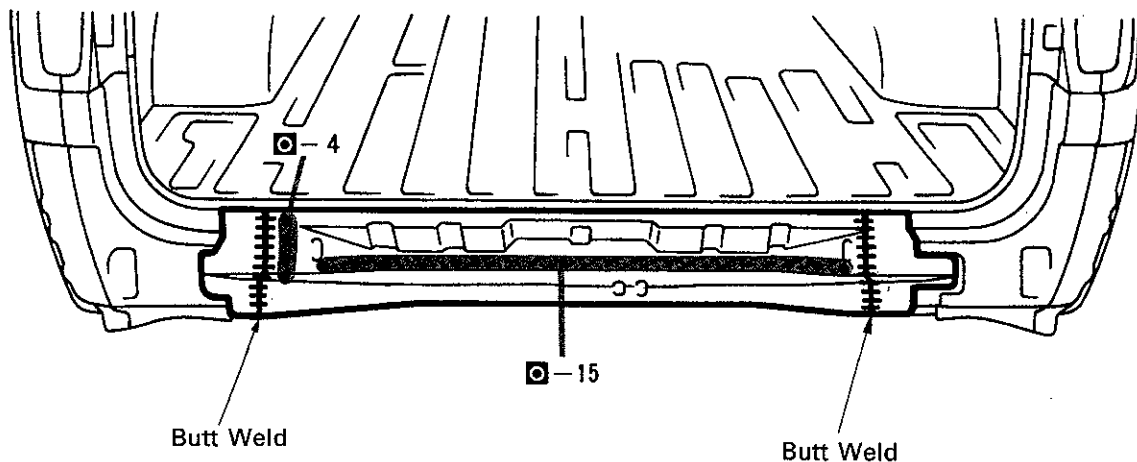

1. Before welding the new parts, temporarily install the rear floor rear crossmember outer and check the fit of the back door.

