

ABBREVIATIONS

The following abbreviations are used in this manual.

A/C	= Air Conditioner
A/T	= Automatic Transmission
CB	= Circuit Breaker
COMB.	= Combination
ECU	= Electronic Control Unit
EFI	= Electronic Fuel Injection
EGR	= Exhaust Gas Recirculation
Ex.	= Except
FL	= Fusible Link
IIA	= Integrated Ignition Assembly
J/B	= Junction Block
LH	= Left-Hand
LHD	= Left-Hand Drive
M/T	= Manual Transmission
O/D	= Overdrive
R/B	= Relay Block
RH	= Right-Hand
RHD	= Right-Hand Drive
SW	= Switch
TEMP.	= Temperature
VSV	= Vacuum Switching Valve
w/	= With
w/o	= Without
2WD	= Two Wheel Drive Vehicles
4WD	= Four Wheel Drive Vehicles

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.