


D RELAY LOCATIONS



R/B (LHD)

Instrument Panel Center (See Page 22)

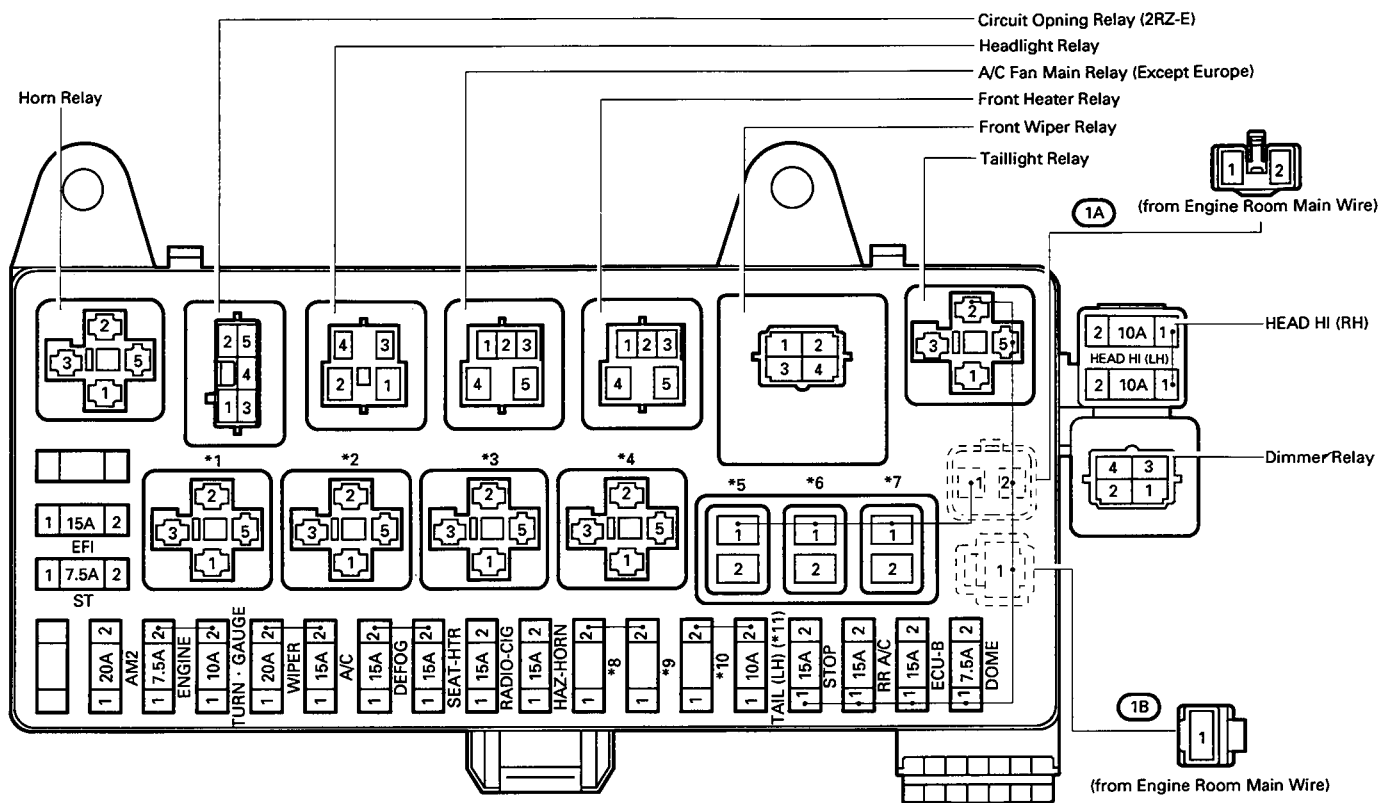

- *1: EFI Main Relay
- *2: Rear Heater Relay
- *3: Defogger Relay
- *4: Rear Fog Light Relay
- *5: 30A P/W (for Medium Current)

- *6: 30A A/C (for Medium Current)
- *7: 40A FR HTR (for Medium Current)
- *8: 15A HEAD (LH) (Except w/ Daytime Running Light and Germany) or 10A HEAD LO (LH) (w/ Daytime Running Light and Germany)

- *9: 15A HEAD (RH) (Except w/ Daytime Running Light and Germany) or 10A HEAD LO (RH) (w/ Daytime Running Light and Germany)
- *10: 15A TAIL (Except Germany) or 10A TAIL (RH) (Germany)
- *11: Germany