


D RELAY LOCATIONS

| | |
|---|--|
| <p>○ : R/B (LHD)</p> <p>① : Instrument Panel Center (See Page 22)</p> | |
|---|--|

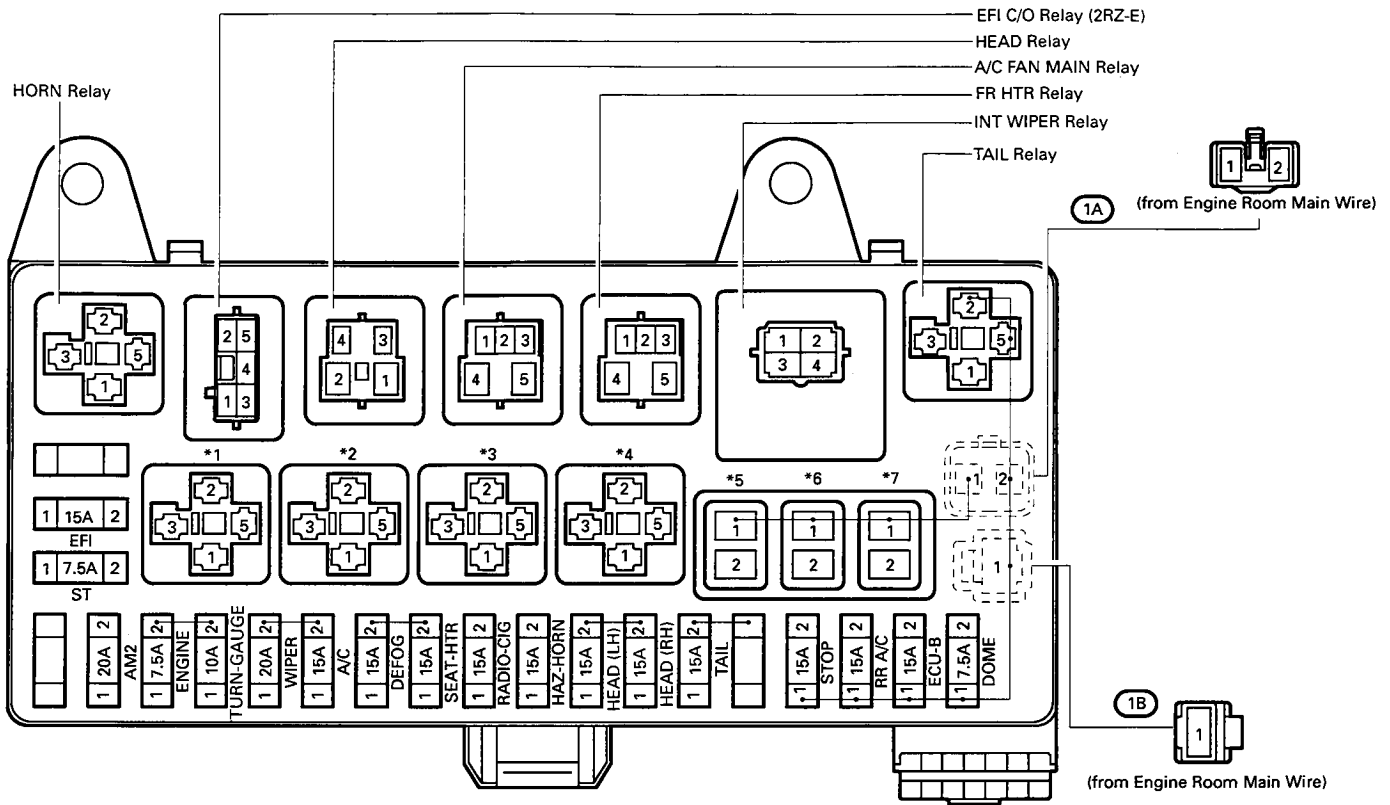

- *1: EFI MAIN Relay
- *2: RR HTR Relay
- *3: DEFOG Relay
- *4: POWER Relay
- *5: 30A P/W
(for Medium Current)

- *6: 30A A/C
(for Medium Current)
- *7: 40A FR-HTR
(for Medium Current)