

## Position of Parts in Engine Compartment

Code	English	Deutsch
A 1	A/C Magnetic Clutch	A/C-Magnetkupplung
A 3	Alternator	Generator
A 4	Alternator	Generator
B 1	Back-Up Light SW (M/T)	Rückfahrleuchtschalter (M/T)
C 1	Check Connector	Prüfstecker
E 1	EFI Water Temp. Sensor	EFI-Kühlmitteltemperatursensor
E 2	Engine Oil Level SW	Motorölstandscharter
E 7	Exhaust Gas Temp. Sensor	Abgastemperaturfühler
F 5	Fusible Link Box	Schmelzsicherungskasten
F 17	Fuel Pump Control Relay	Kraftstoffpumpensteuerrelais
F 18	Fuel Pump Resistor	Kraftstoffpumpenwiderstand
F 19	Fusible Link Box	Schmelzsicherungskasten
F 20	Fuel Sedimentary Buzzer	Wasserabscheiderwarnsignalgeber
I 1	IIA	IIA
I 2	IIA	IIA
I 8	Injector No. 1	Einspritzventil Nr. 1
I 9	Injector No. 2	Einspritzventil Nr. 2
I 10	Injector No. 3	Einspritzventil Nr. 3
I 11	Injector No. 4	Einspritzventil Nr. 4
I 12	Intake Air Temp. Sensor	Ansauglufttemperatursensor
N 2	Noise Filter (Ignition System)	Störschutzfilter (Zündanlage)
O 3	Oil Pressure SW	Öldruckschalter
O 6	Oxygen Sensor	Lambdasonde
P 1	Parking Brake SW	Handbremsschalter
R 1	Radiator Fluid Level Sensor	Kühlmittelstandsensor
S 2	Starter	Anlasser
S 3	Starter	Anlasser
S 9	Starter Relay	Anlasserrelais
S 19	Speed Sensor	Geschwindigkeitssensor
T 1	Throttle Position Sensor	Drosselklappenpositionssensor
V 1	Vacuum Sensor	Unterdruckfühler
V 8	VSV (A/C Idle-Up)	VSV (A/C-Schnelleerlauf)
V 10	VSV (EVAP)	VSV (EVAP)
W 1	Water Temp. Sender	Kühlmitteltemperaturgeber