

### ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	= Anti-Lock Brake System
A/C	= Air Conditioner
A/T	= Automatic Transmission
CIS	= Commonwealth of Independent States
COMB.	= Combination
ECT	= Electronically Controlled Transmission
ECU	= Electronic Control Unit
EFI	= Electronic Fuel Injection
EGR	= Exhaust Gas Recirculation
G.C.C.	= Gulf Cooperation Council
IIA	= Integrated Ignition Assembly
J/B	= Junction Block
LH	= Left-Hand
LHD	= Left-Hand Drive
M/T	= Manual Transmission
O/D	= Overdrive
R/B	= Relay Block
RH	= Right-Hand
RHD	= Right-Hand Drive
SRS	= Supplemental Restraint System
SW	= Switch
TEMP.	= Temperature
VSV	= Vacuum Switching Valve
w/	= With
w/o	= Without

\* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.