



CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

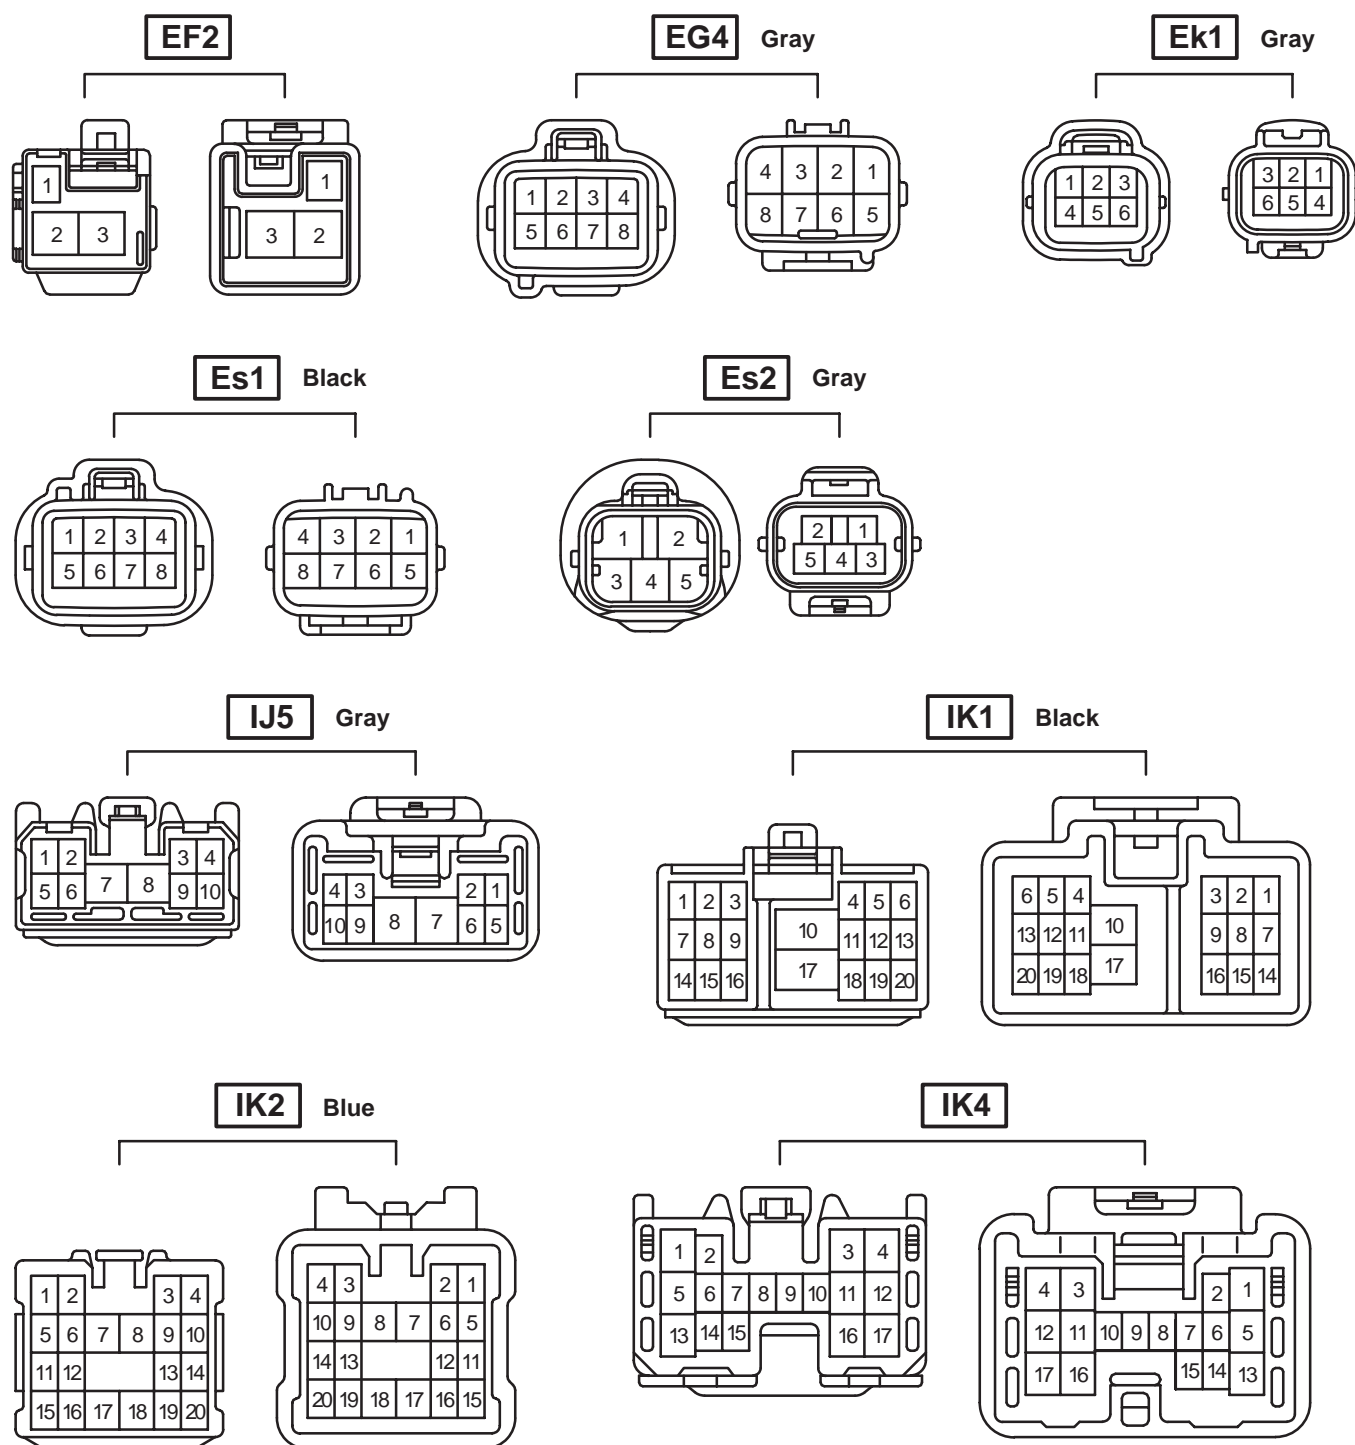


Code	Joining Wire Harness and Wire Harness
EF2	Engine Room No.2 Wire and Engine Room Main Wire
EG4	Engine Wire and Engine Room Main Wire
Ek1	Engine Room Main Wire and Frame No.3 Wire
Es1	Cowl to Headlight Wire and Front Side Wire
Es2	
IJ5	Cowl to Headlight Wire and Cowl Wire
IK1	Cowl Wire and Engine Room Main Wire
IK2	Engine Room Main Wire and Cowl Wire
IK4	Cowl Wire and Engine Room Main Wire

CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

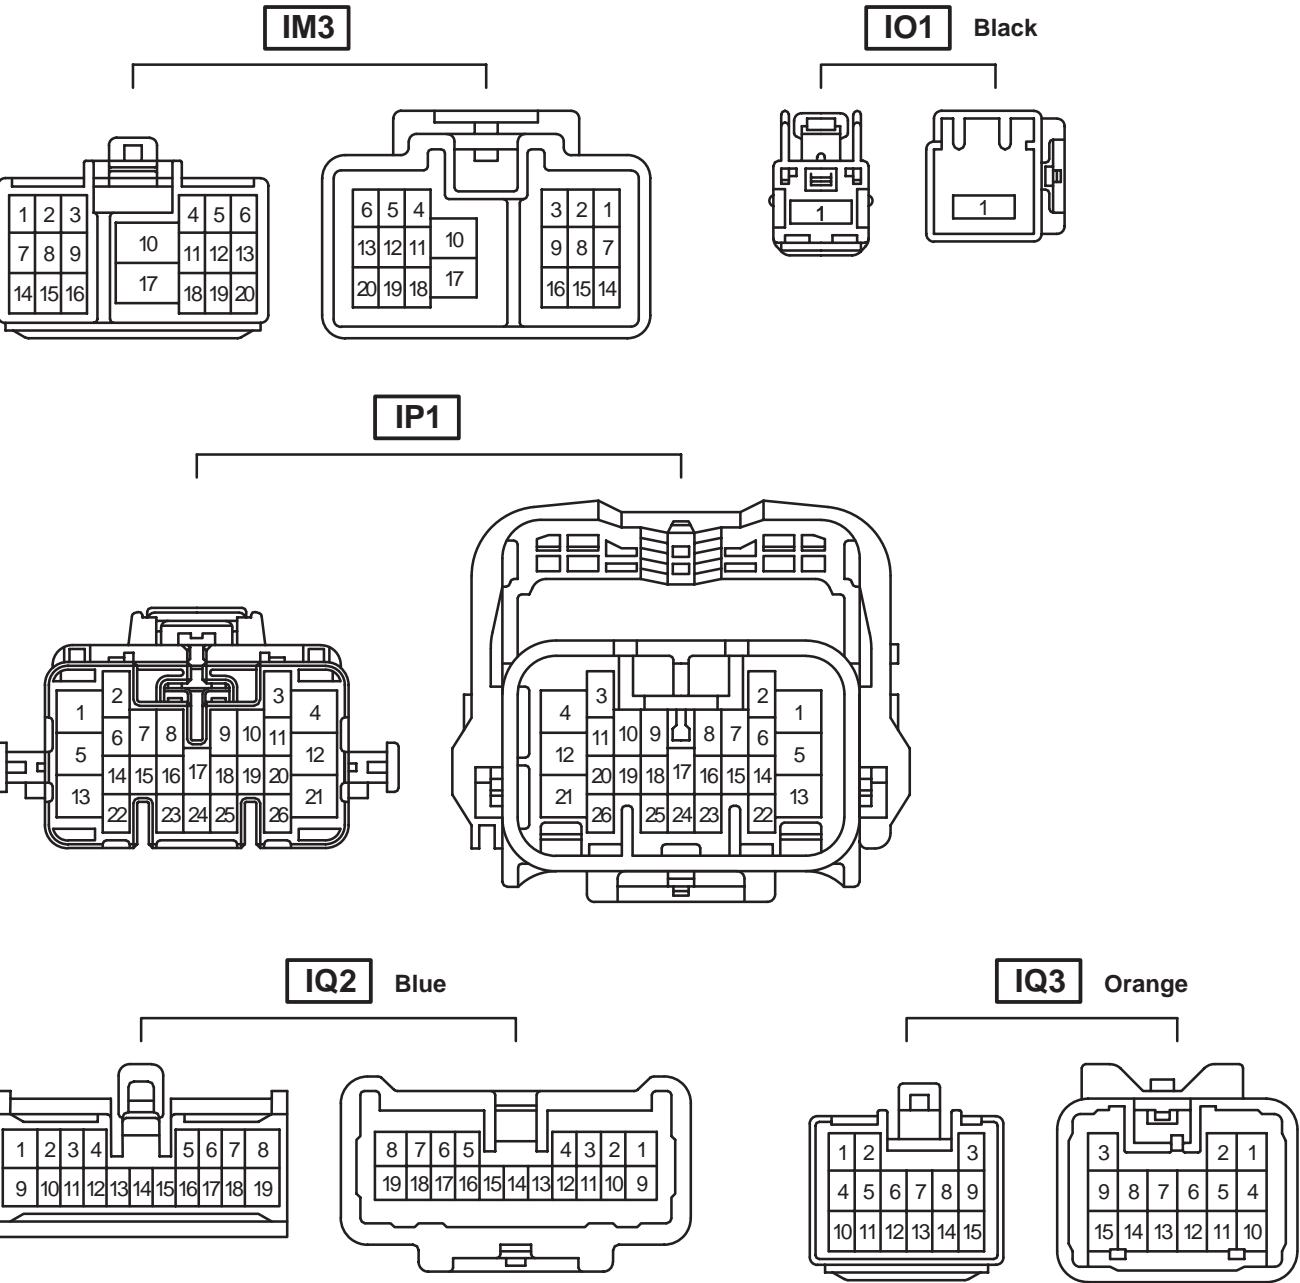


Code	Joining Wire Harness and Wire Harness
IM3	Cowl Wire and Engine Room Main Wire
IO1	
IP1	
IQ2	
IQ3	

CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

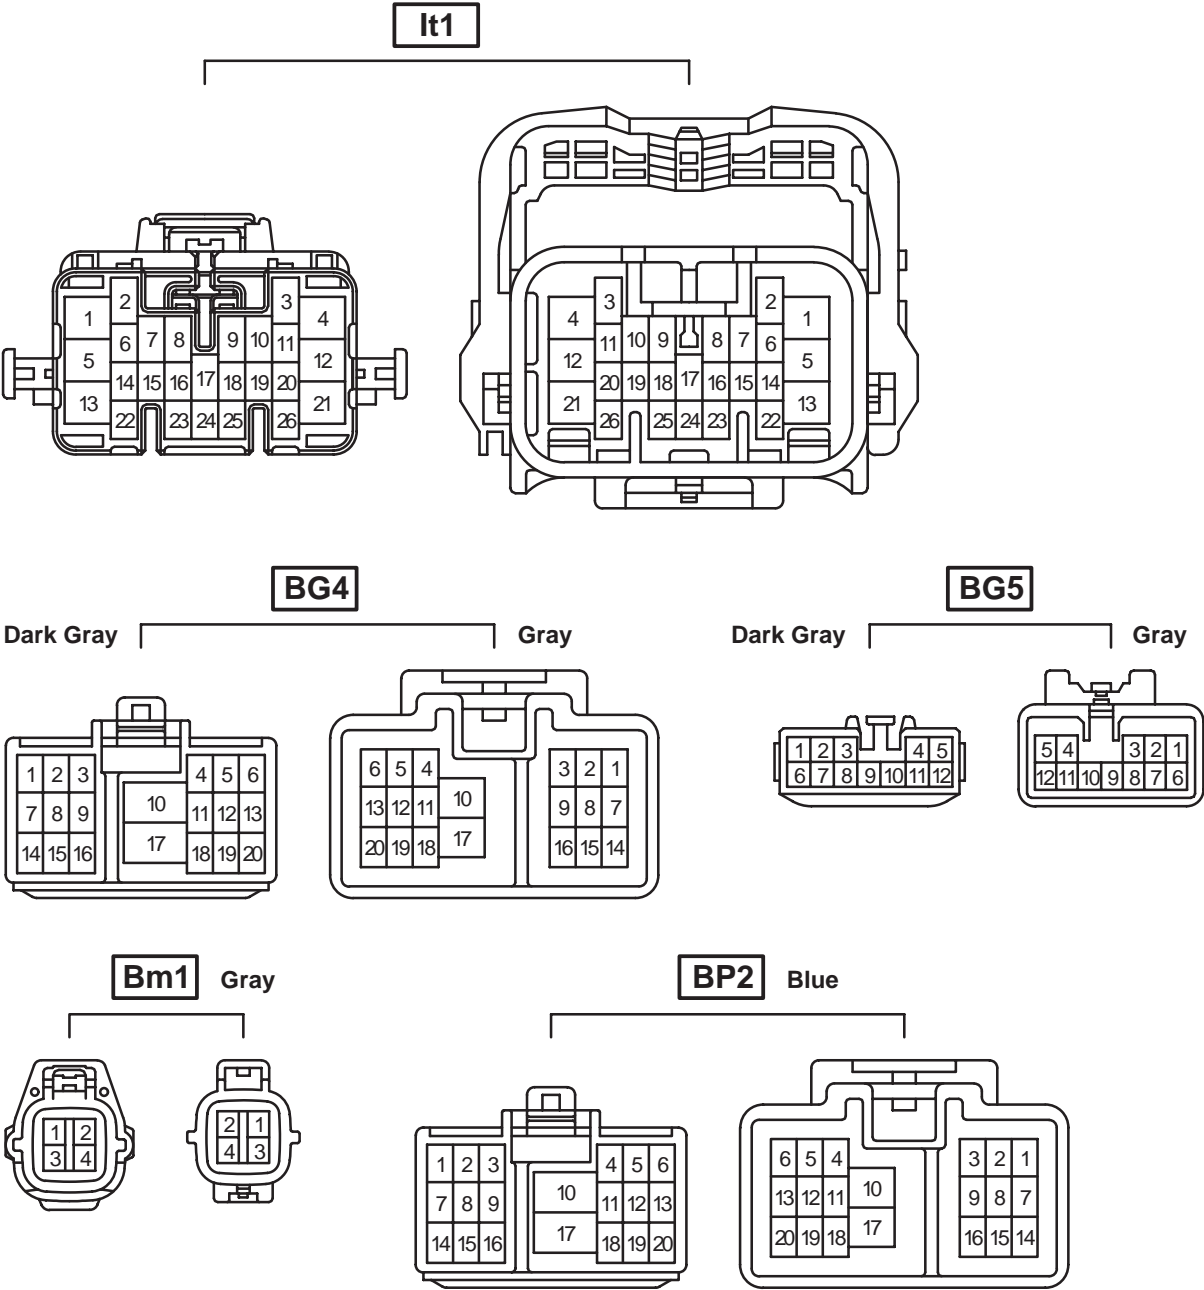

















Code	Joining Wire Harness and Wire Harness
It1	Engine Room Main Wire and Cowl Wire
BG4	Engine Wire and Engine Room Main Wire
BG5	
Bm1	Frame No.3 Wire and ABS Speed Sensor Wire
BP2	Roof Wire and Engine Room Main Wire

CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

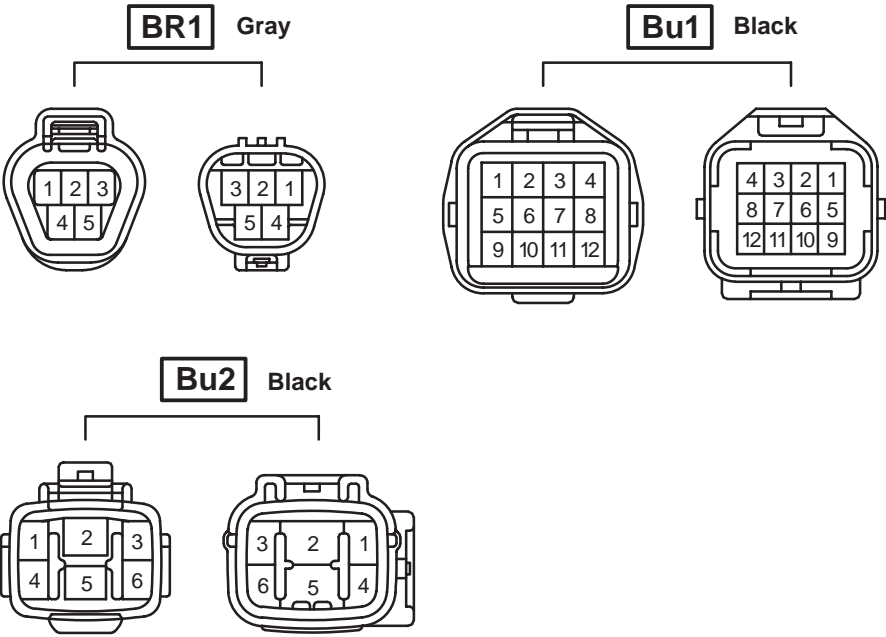

Code	Joining Wire Harness and Wire Harness
BR1	Frame Wire and Roof Wire
Bu1	Engine Room Main Wire and Frame No.3 Wire
Bu2	

CONNECTOR LIST

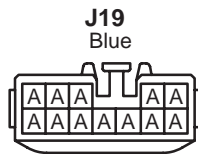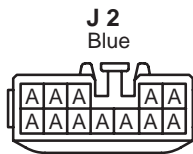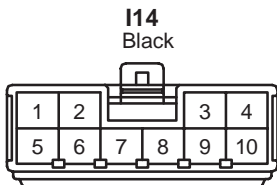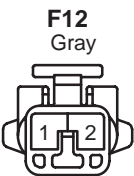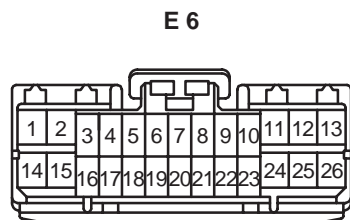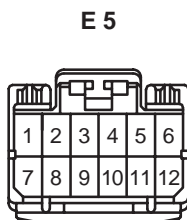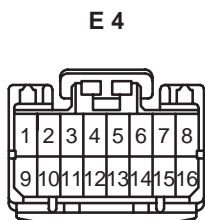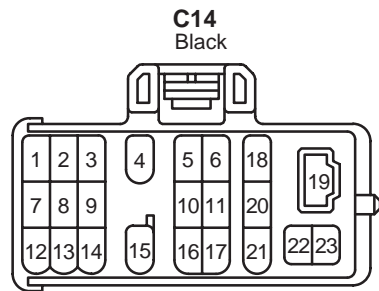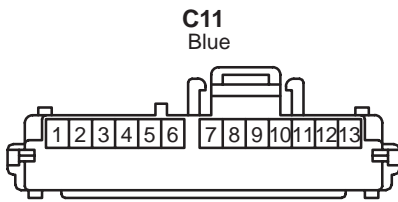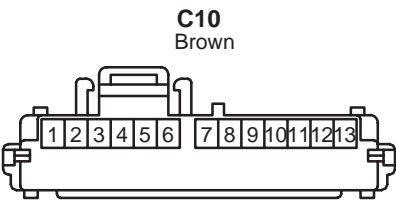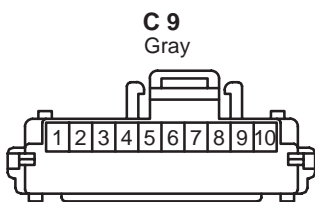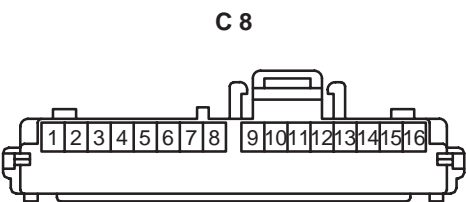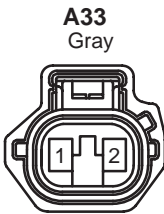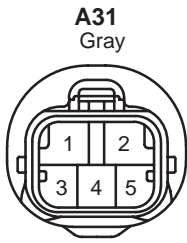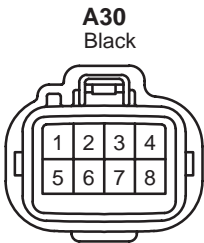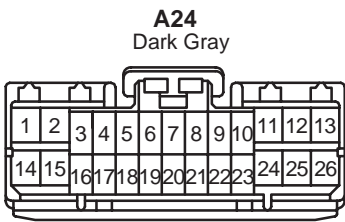

CONNECTOR LIST

