
 
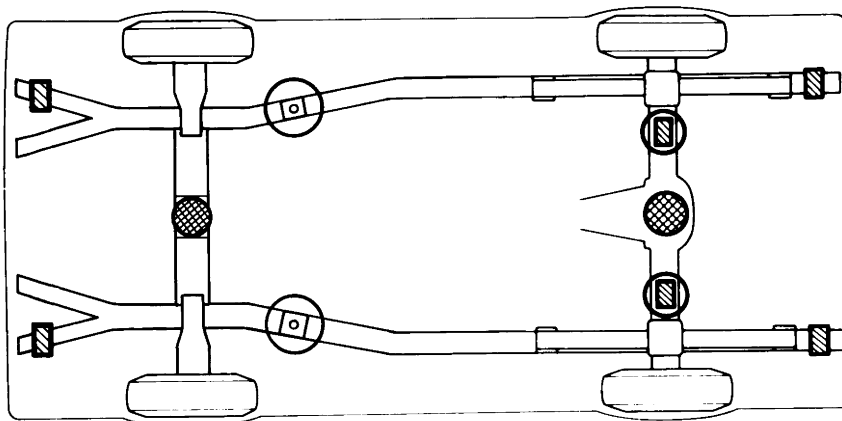

 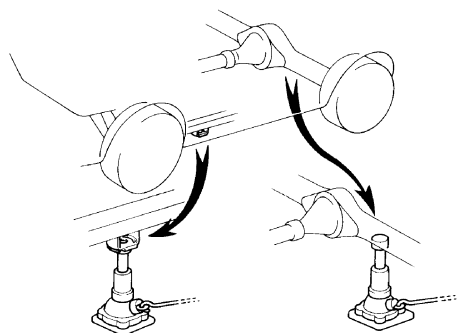


# VEHICLE LIFT AND SUPPORT LOCATIONS

2WD

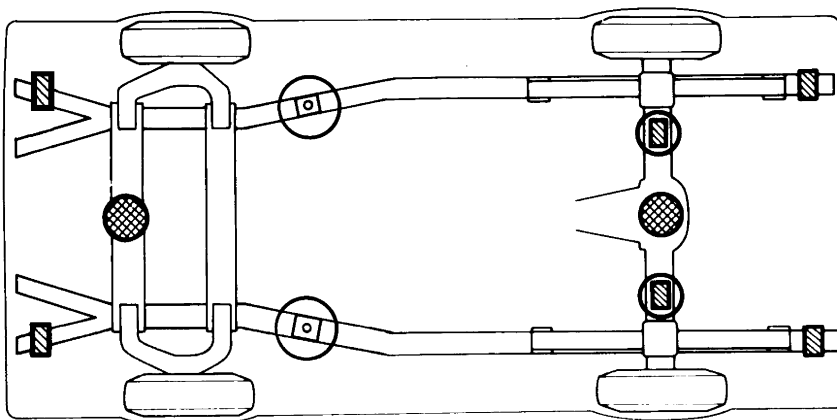

4WD



## JACK POSITION

Front ..... Center of front suspension crossmember

Rear ..... Center of rear axle housing


## SCREW TYPE JACK POSITION

## SUPPORT POSITION


Safety stand .....

B06919  
B06920  
B06921

B06922

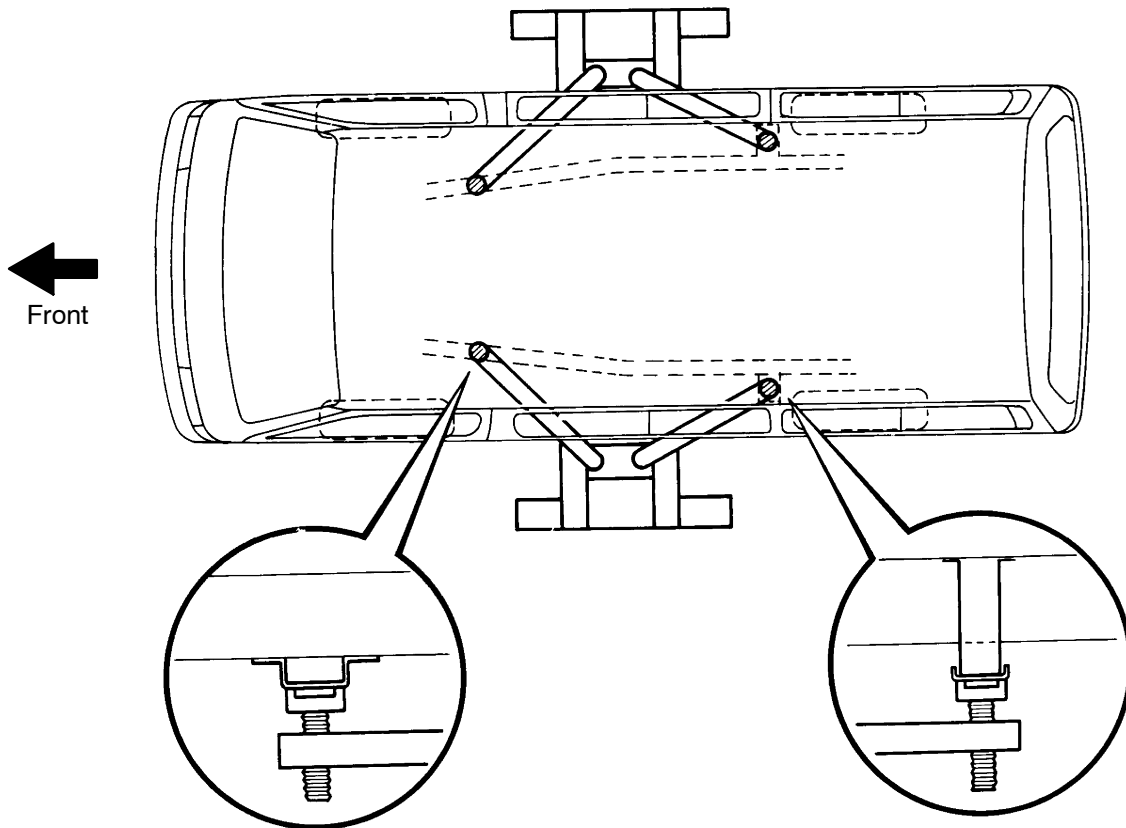**SWING ARM TYPE LIFT****NOTICE:**

When lifting the vehicle, place the supports correctly at the positions shown above.

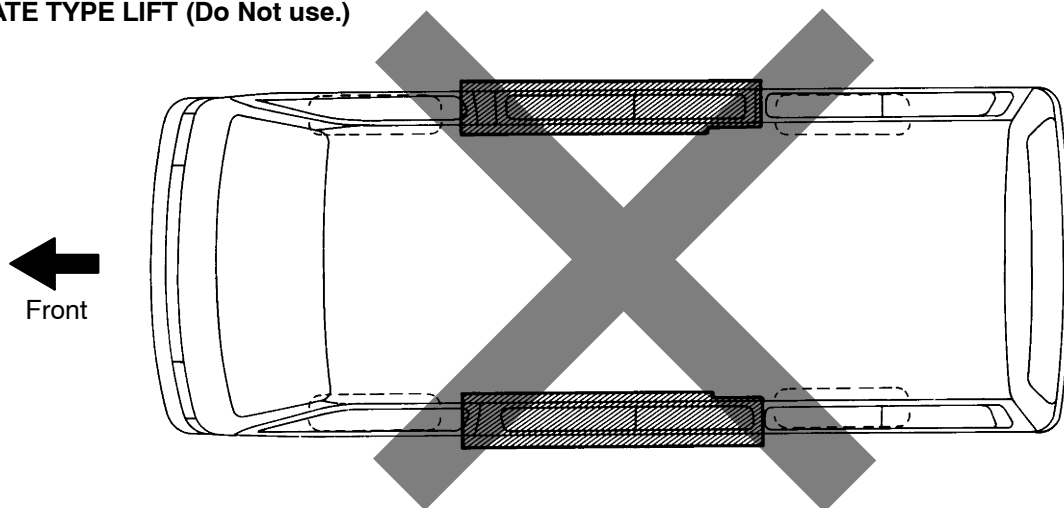**PLATE TYPE LIFT (Do Not use.)****NOTICE:**

Never use the plate type lift – using it to lift up the vehicle will cause the body shape to warp.