
 
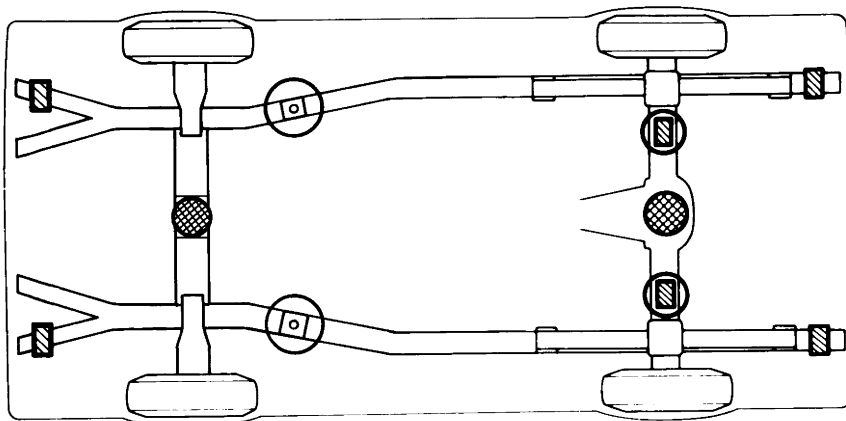

 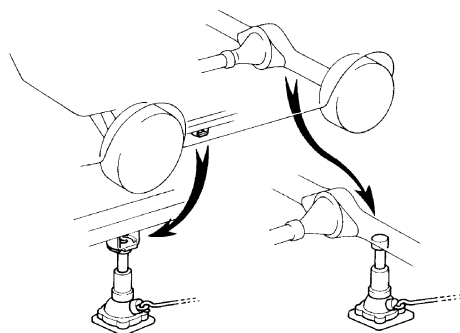


VEHICLE LIFT AND SUPPORT LOCATIONS

2WD

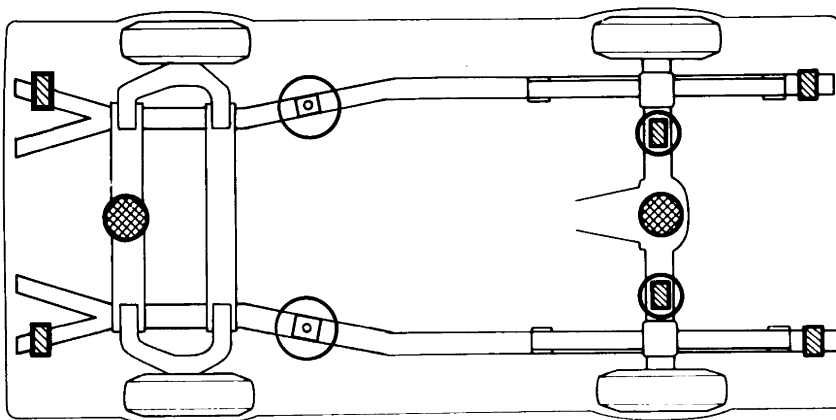

4WD



JACK POSITION

Front Center of front suspension crossmember

Rear Center of rear axle housing


SCREW TYPE JACK POSITION

SUPPORT POSITION


Safety stand

B06919
B06920
B06921

B06922

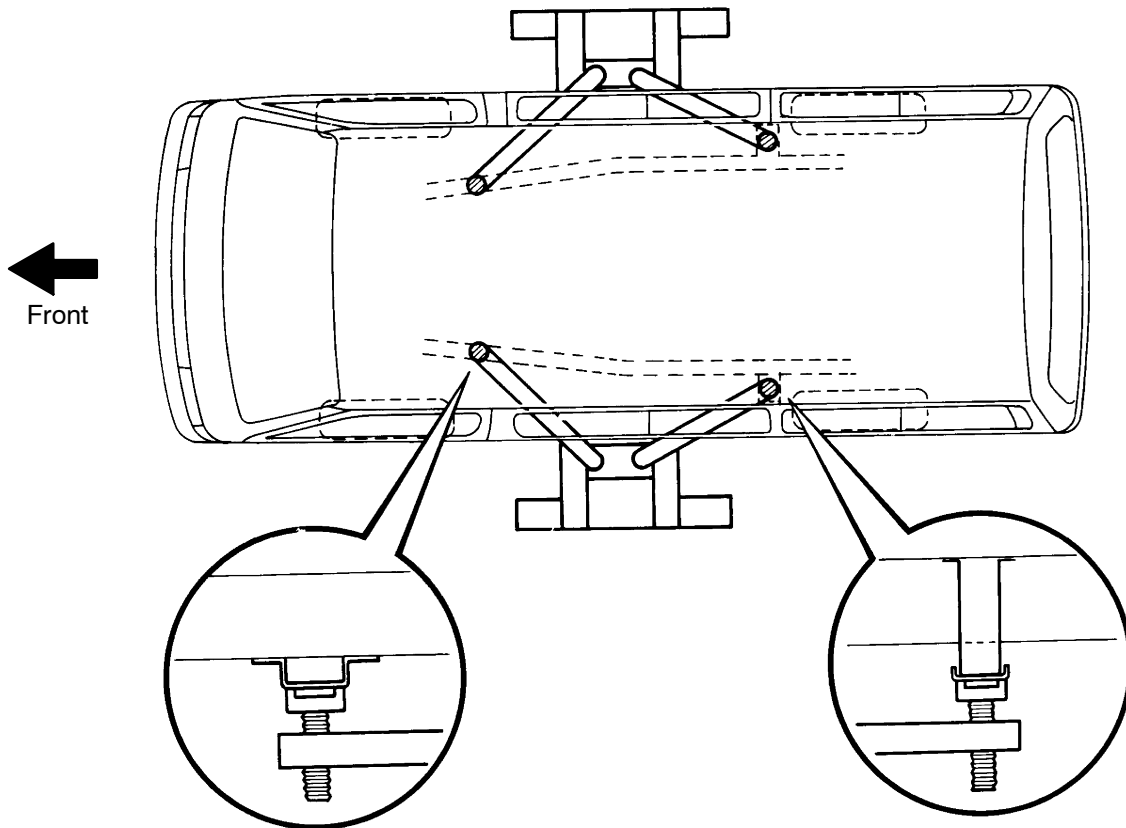SWING ARM TYPE LIFT

NOTICE:
When lifting the vehicle, place the supports correctly at the positions shown above.

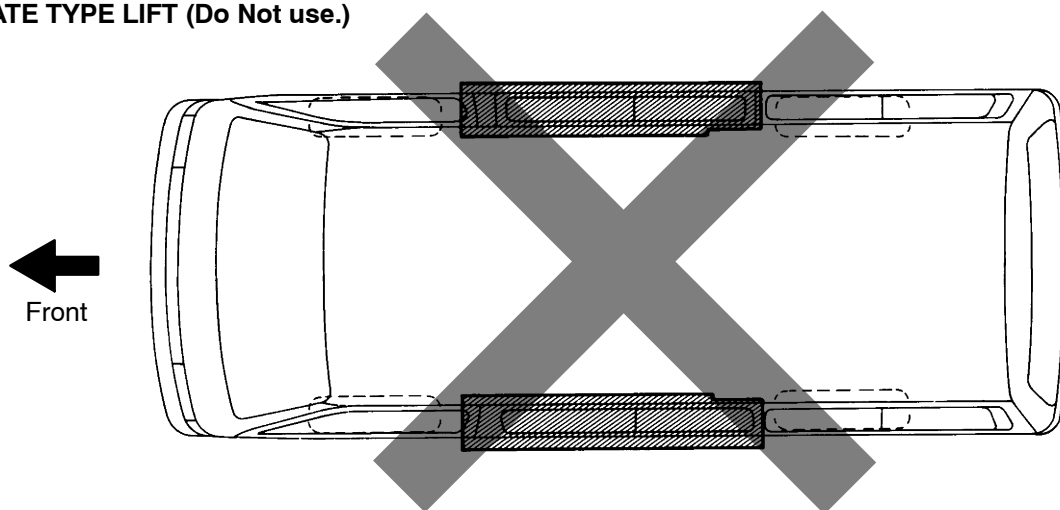PLATE TYPE LIFT (Do Not use.)

NOTICE:
Never use the plate type lift – using it to lift up the vehicle will cause the body shape to warp.