


VEHICLE LIFT AND SUPPORT LOCATIONS



2WD

←
Front

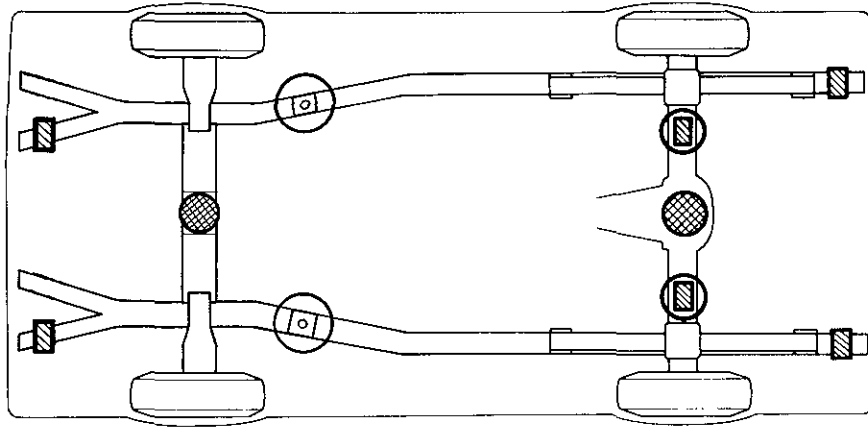

4WD

←
Front

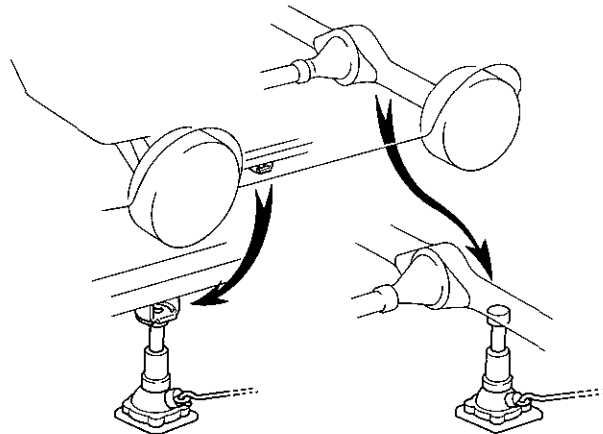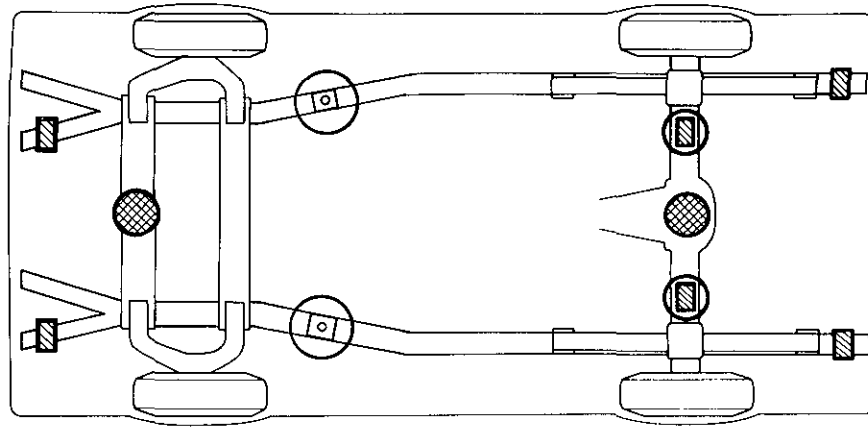


JACK POSITION ————— ●


Front Center of front suspension crossmember
Rear Center of rear axle housing

SCREW TYPE JACK POSITION ————— ○
SUPPORT POSITION

Safety stand ▨

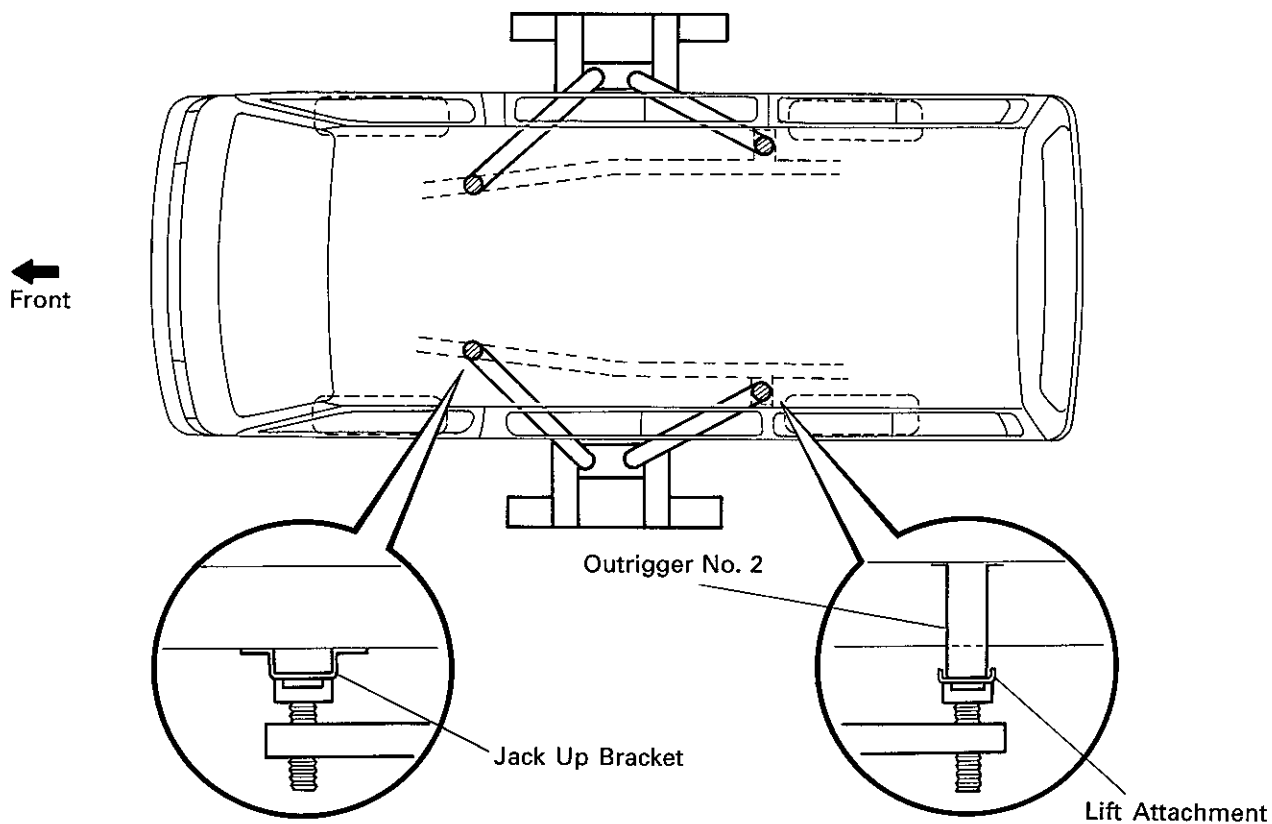VEHICLE LIFT AND SUPPORT LOCATIONS (Cont'd)**SWING ARM TYPE LIFT**

NOTICE: When lifting the vehicle, place the supports correctly at the positions shown above.

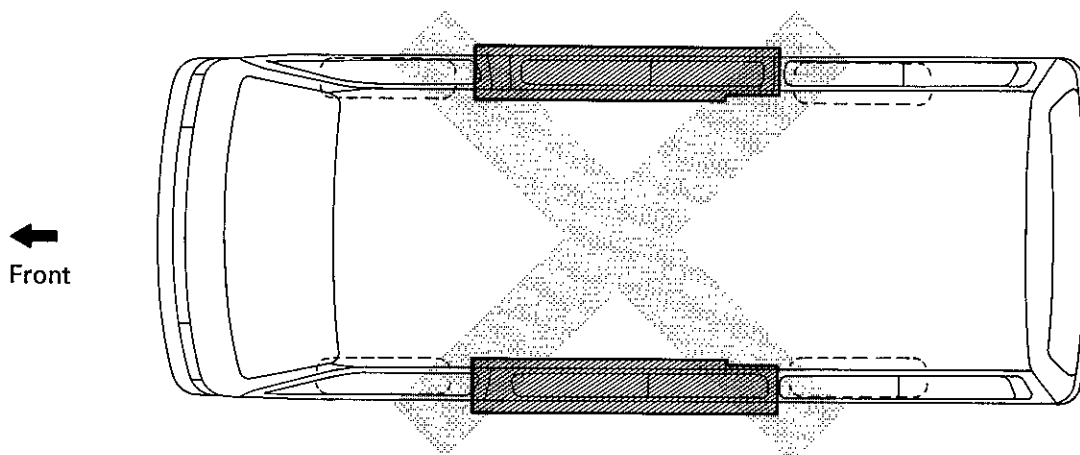PLATE TYPE LIFT (Do NOT use.)

NOTICE: Never use the plate type lift – using it to lift up the vehicle will cause the body shape to warp.