



IGNITION SWITCH

Parts Location

LHD Vehicle

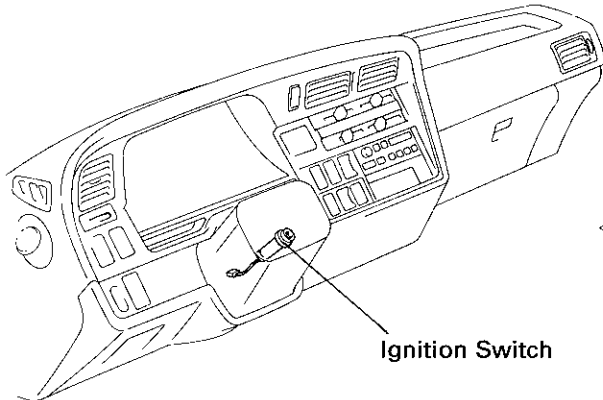


RHD Vehicle

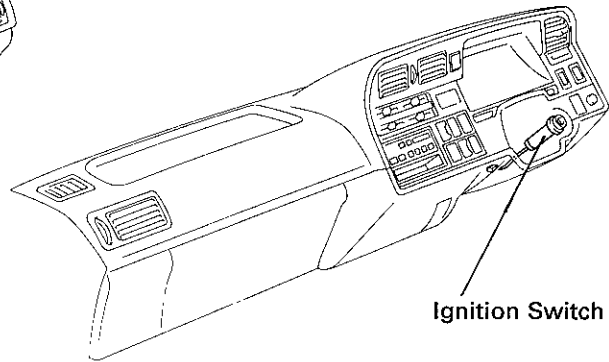

BE4141 BE4142

Wiring and Connector Diagrams

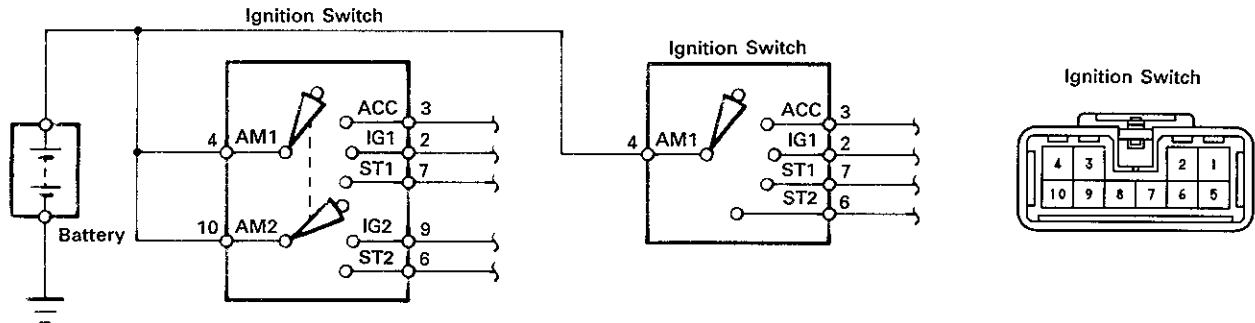

The POWER SOURCE CIRCUIT has been simplified. For full details, see page BE-10.

BE4143 e-10-2-B

Parts Inspection

Ignition System

INSPECT SWITCH (Ignition Switch/Continuity)

Terminal		2	3	4	6	7	9	10
Switch position								
LOCK								
ACC			○	○				
ON		○	○	○			○	○
START		○		○	○	○	○	○

If continuity is not as specified, replace the switch.