


BACK DOOR WINDOW GLASS

PREPARE ITEMS LISTED


(See page BO-32)

COMPONENTS

Lift Up Type

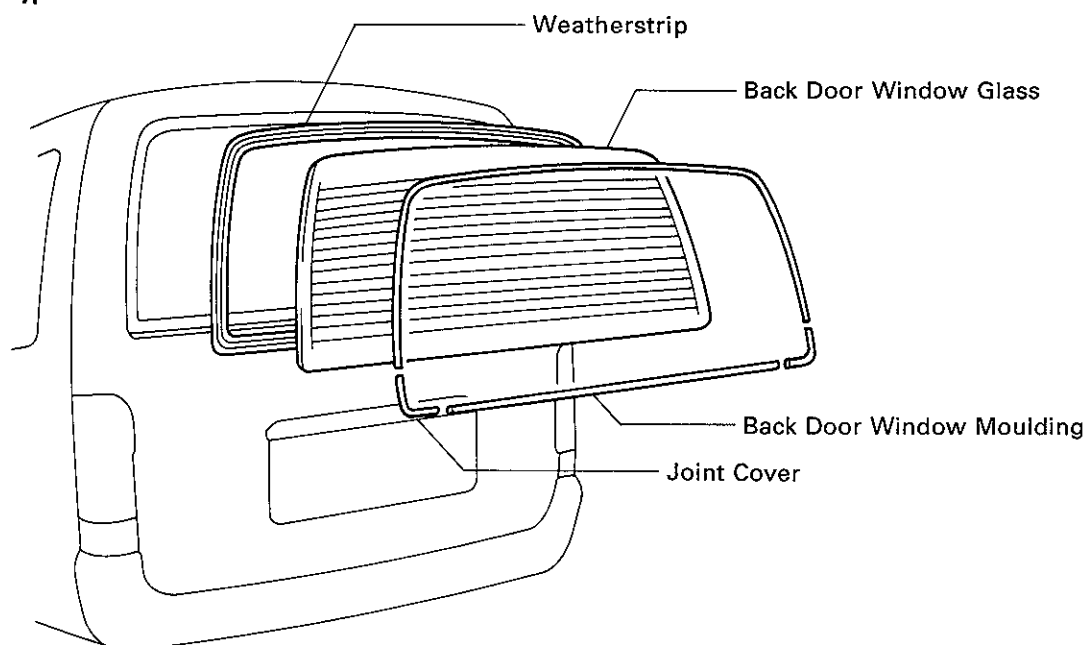

Swing Out Type

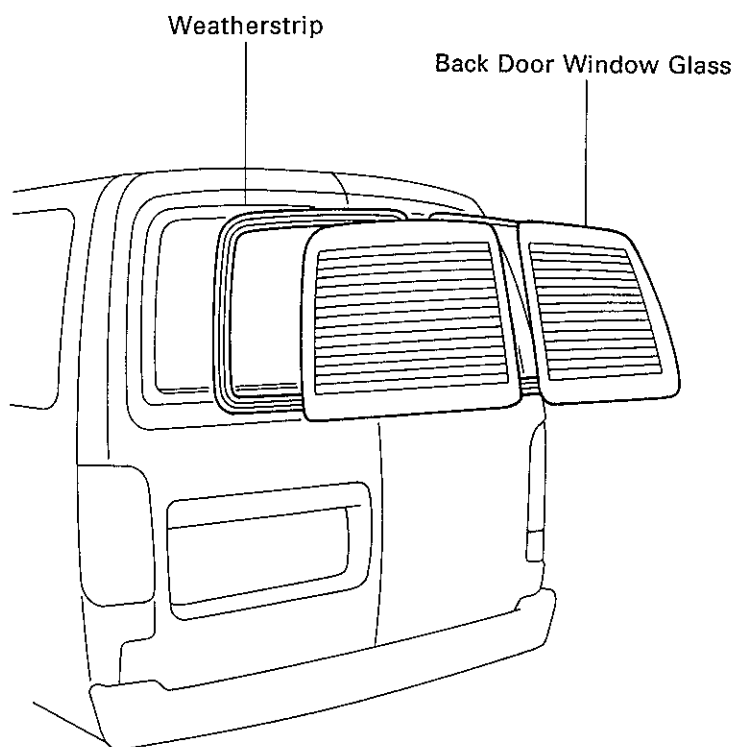

BO4680
BO5659

REMOVAL AND INSTALLATION OF BACK DOOR WINDOW GLASS

Remove and install the back door window glass in the same manner as the windshield. (See pages BO-32 to 35)