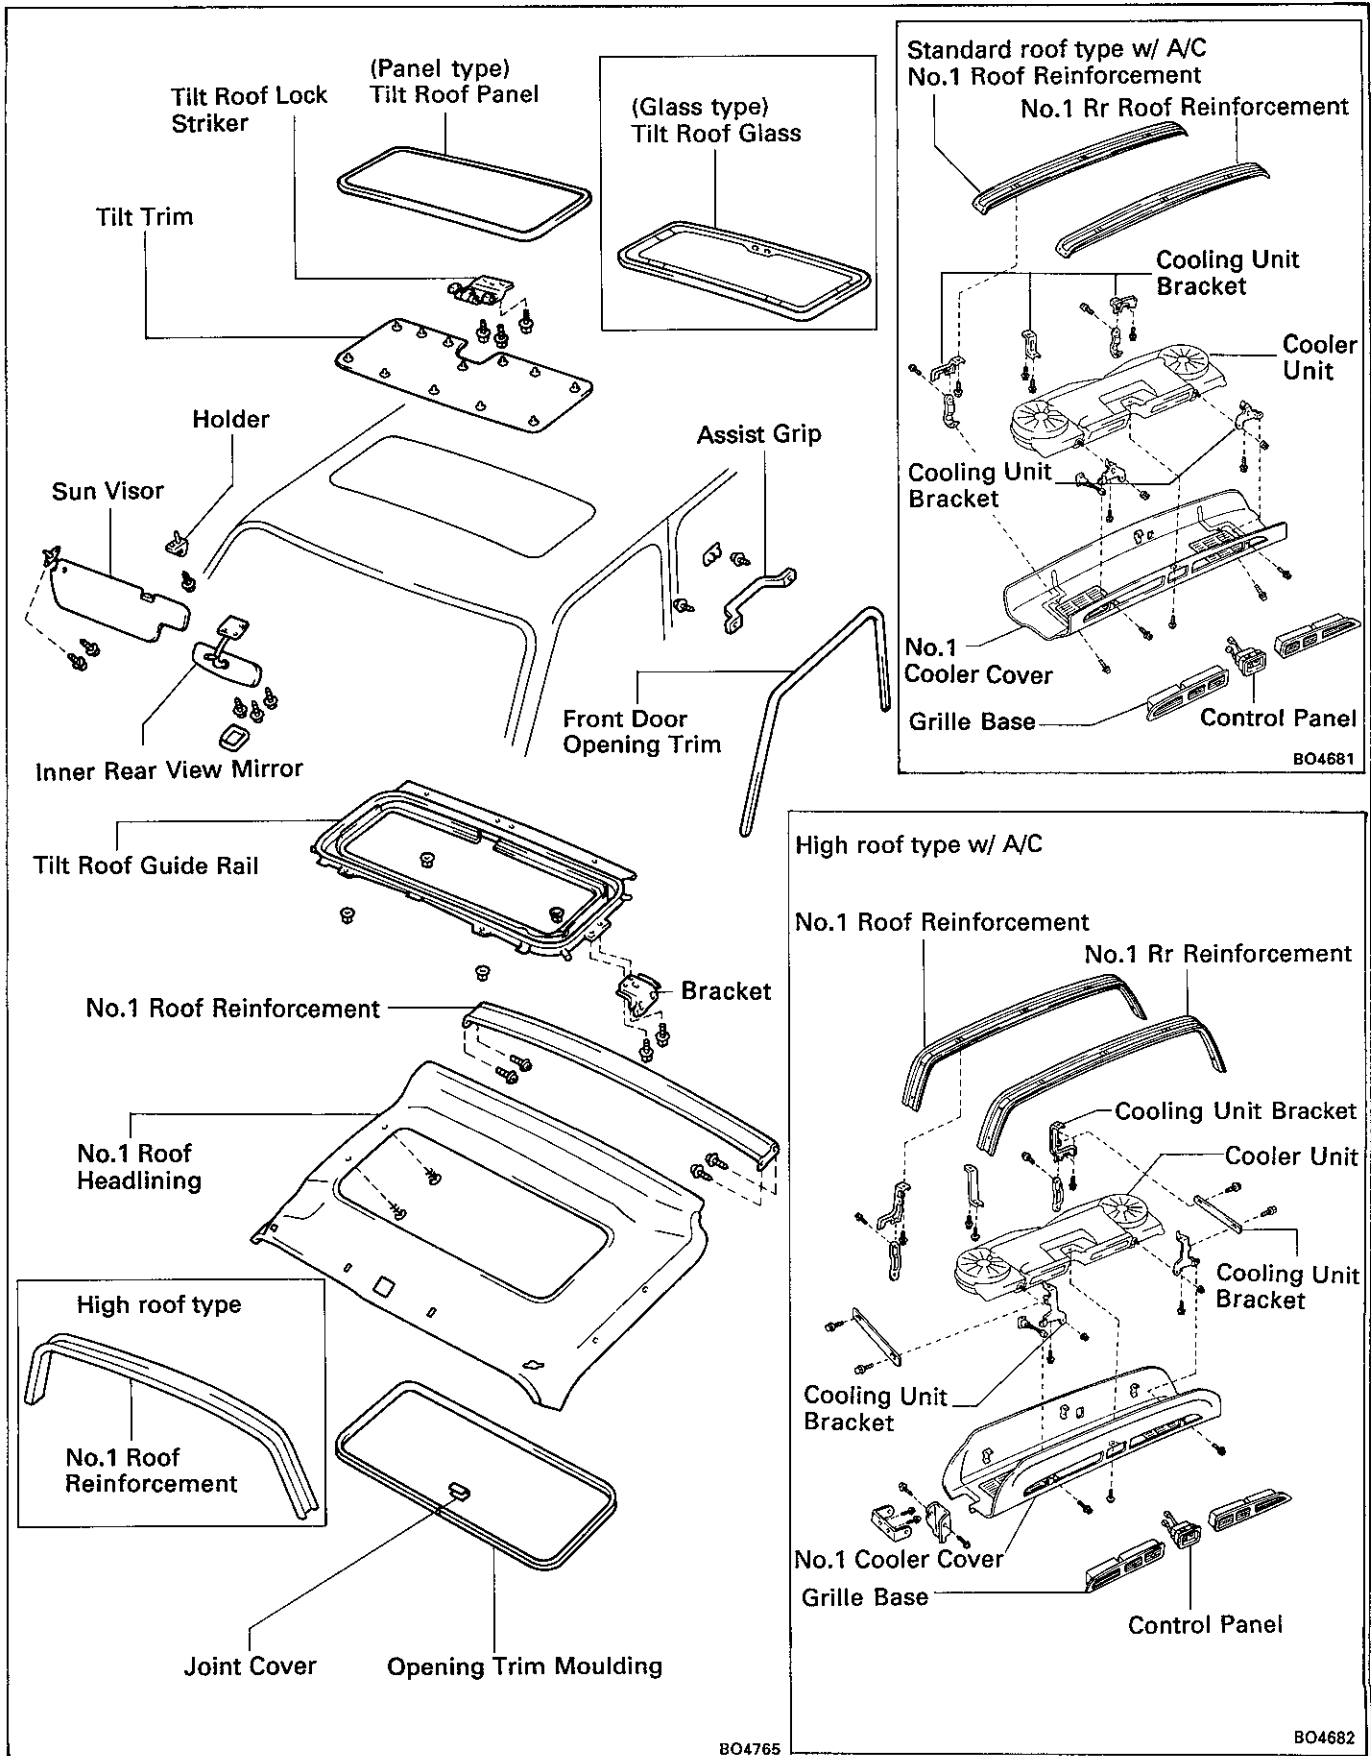


TILT ROOF COMPONENTS



REMOVAL OF TILT ROOF

(See page BO-43)

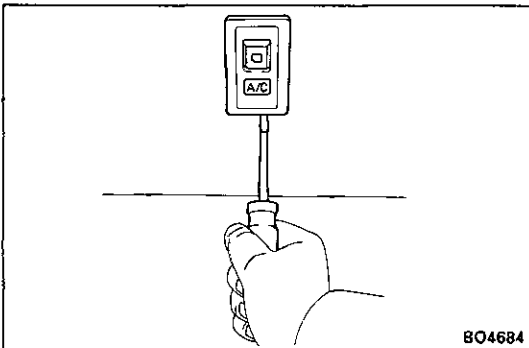
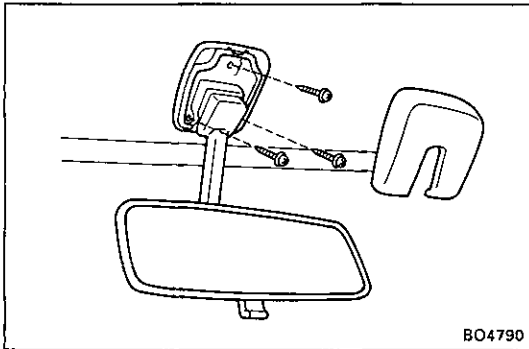
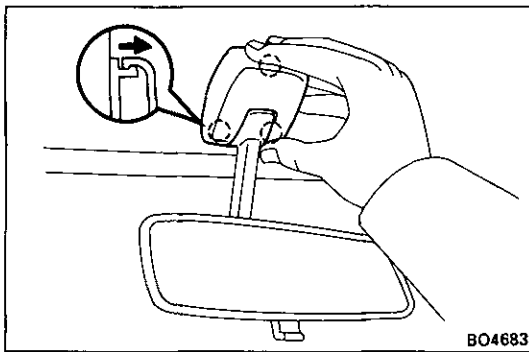
1. REMOVE FOLLOWING PARTS:

- Assist grip
- Sun visor and holder

2. REMOVE INNER REAR VIEW MIRROR

(a) Pry out the cover with your hand.

(b) Remove three screws and the mirror.



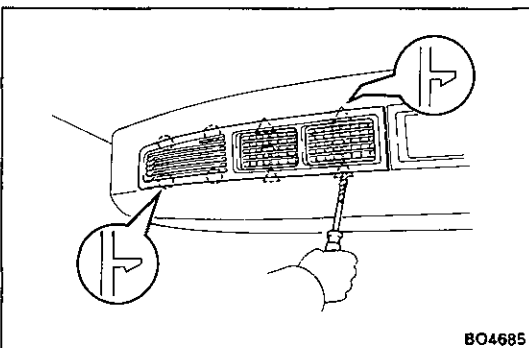
(w/ A/C)

3-1. REMOVE CONTROL SWITCH

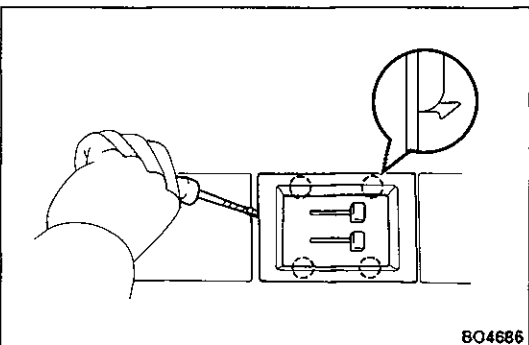
(a) Using a screwdriver, pry out the switch.

HINT: Tape the screwdriver tip before use.

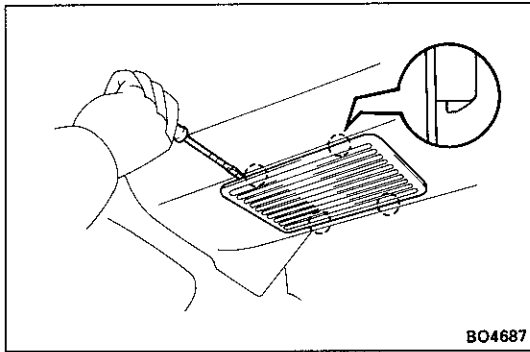
(b) Disconnect the connector.

**3-2. REMOVE GRILLE BASE**

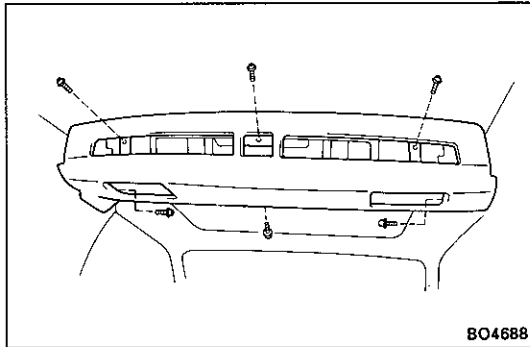
Using the screwdriver, pry out the grille base.

**3-3. REMOVE CONTROL PANEL**

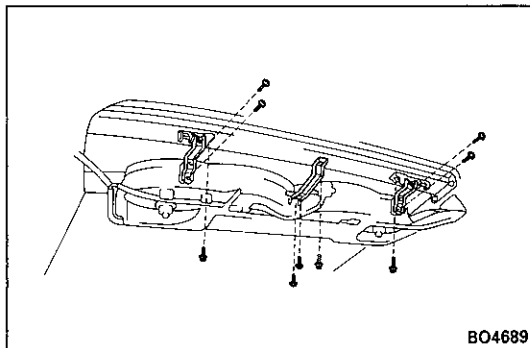
Using the screwdriver, pry out the control panel.

**3-4. REMOVE AIR INLET GRILLE**

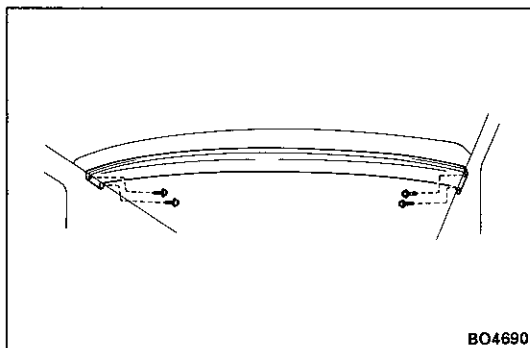
Using the screwdriver, pry out the inlet grille.

**3-5. REMOVE NO.1 COOLER COVER**

Remove six screws and the No.1 cooler cover.

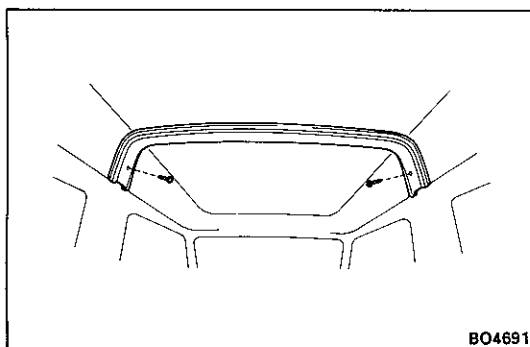
**3-6. REMOVE COOLING UNIT BRACKET**

Remove nine screws and the three brackets.

**4. REMOVE NO.1 ROOF PANEL REINFORCEMENT**

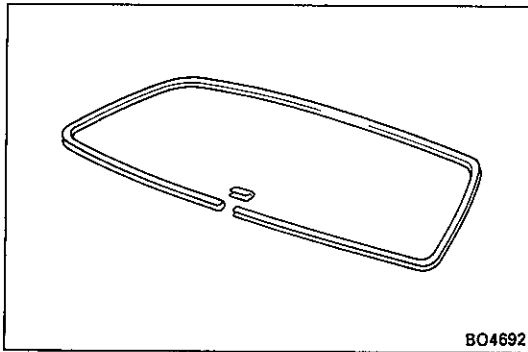
(Standard roof type)

(a) Remove four screws and the reinforcement.

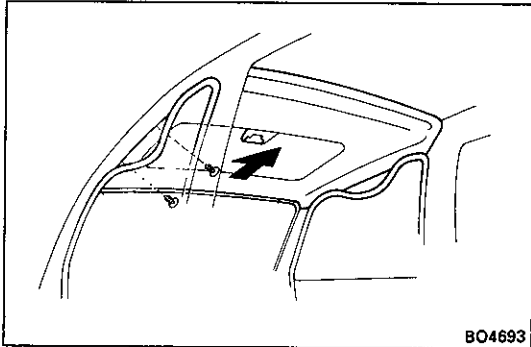


(High roof type)

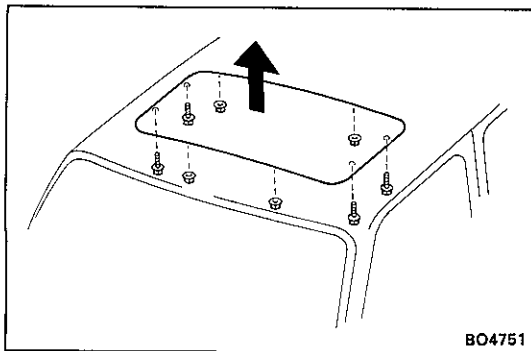
(b) Remove two screws and the reinforcement.

**5. REMOVE OPENING TRIM MOULDING**

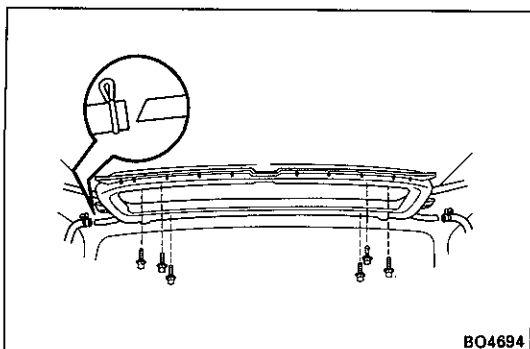
- (a) Remove the joint cover.
- (b) Pull the moulding with hand to remove it.

**6. REMOVE NO.1 ROOF HEADLINING**

- (a) Disconnect the upper side of the front door opening trim.
- (b) Using a clip remover, remove two clips.
- (c) Slide the headlining rearward.

**7. REMOVE TILT ROOF**

- (a) With the tilt roof opened, remove four nuts and four screws.
 - (b) Slide the tilt roof panel upward to remove it.
- HINT: During removal, be careful not to damage the thread of each bolt.

**8. REMOVE TILT ROOF LOCK STRIKER**

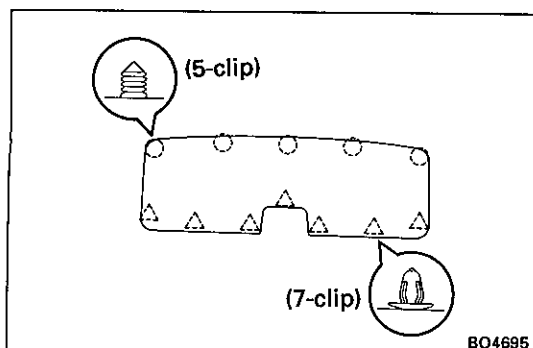
Remove three bolts and the tilt roof lock striker.

9. REMOVE BRACKET

Remove four screws and the brackets.

10. REMOVE TILT ROOF GUIDE RAIL

- (a) Disconnect four drain hoses.
- (b) Remove six bolts and the tilt roof guide rail.



(w/ Tilt Roof Panel)

DISASSEMBLY OF TILT ROOF PANEL**1. REMOVE WEATHERSTRIP**

Remove the weatherstrip with the hand.

2. REMOVE TILT TRIM

Using a clip remover, pry out the trim.

(w/ Tilt Roof Panel)
ASSEMBLY OF TILT ROOF PANEL

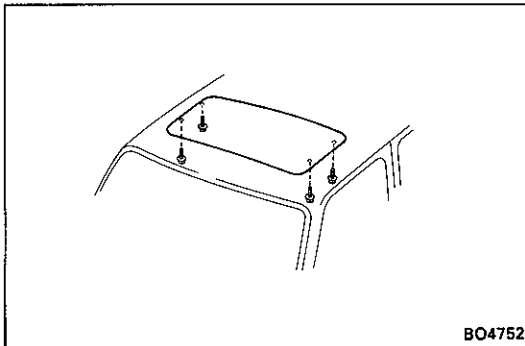
1. INSTALL TILT TRIM
2. INSTALL WEATHERSTRIP

INSTALLATION OF TILT ROOF

(See page BO-43)

1. **INSTALL TILT ROOF GUIDE RAIL**
 - (a) Install six bolts and the tilt roof guide rail.
 - (b) Connect four drain hoses.

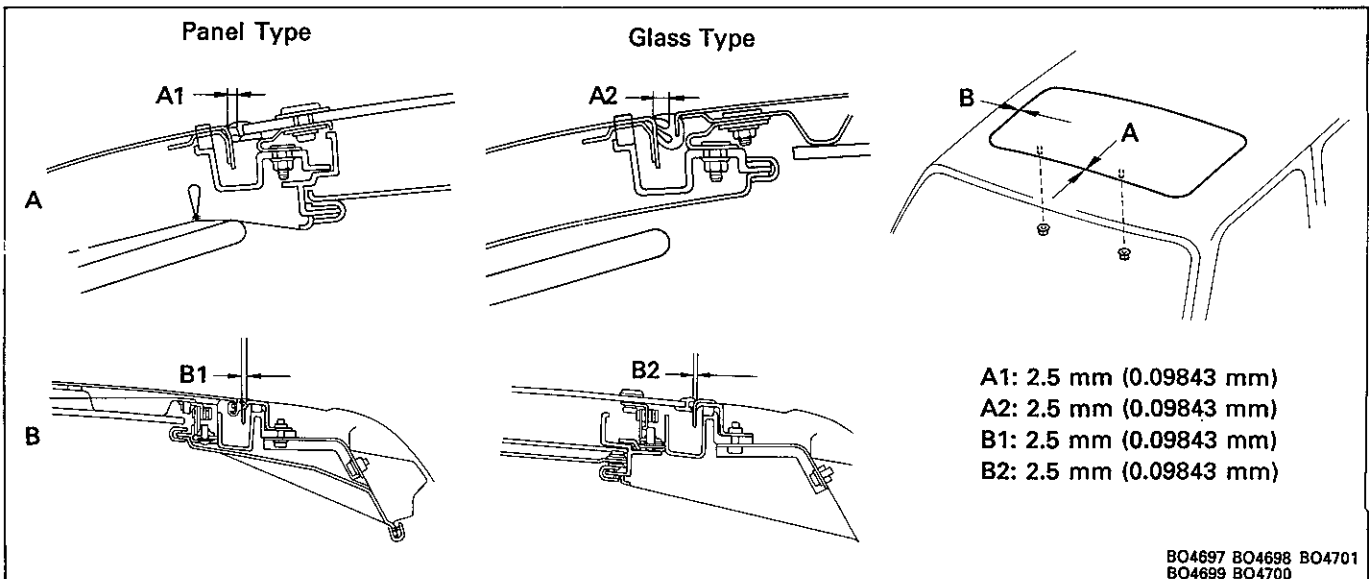
HINT: Place the knobs of clips to upper side.
2. **INSTALL BRACKET**
 Install four bolts and the two brackets.
3. **INSTALL TILT ROOF LOCK STRIKER**
 Install three screws and the tilt roof lock striker.

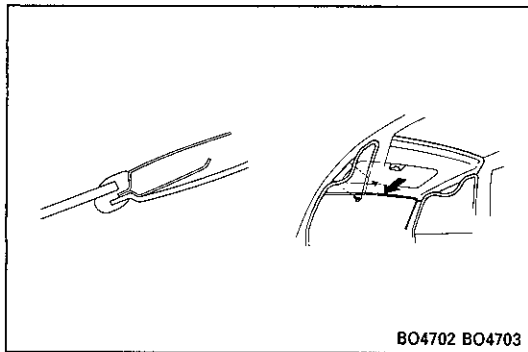


4. **ADJUST AND INSTALL TILT ROOF**
 - (a) Install four screws.

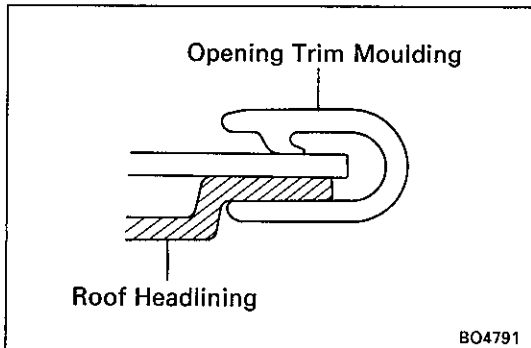
(b) Close the panel and check the clearance between the weatherstrip of the tilt roof panel and the body flange as shown.

(c) Install four nuts.



**5. INSTALL NO.1 ROOF HEADLINING**

- (a) Insert the No.1 headlining to the weatherstrip.
- (b) Connect the upper side of the front door opening trim.

**6. INSTALL OPENING TRIM MOULDING****7. INSTALL NO.1 ROOF PANEL REINFORCEMENT**

Install four screws and the reinforcement.

(w/ A/C)

8. INSTALL FOLLOWING PARTS:

- Cooling unit bracket
- No.1 cooler cover
- Air inlet grille
- Control panel
- Grille base
- Control switch

9. INSTALL FOLLOWING PARTS:

- Inner rear view mirror
- Assist grip
- Sun visor and holders