



# FUEL TANK AND LINE COMPONENTS

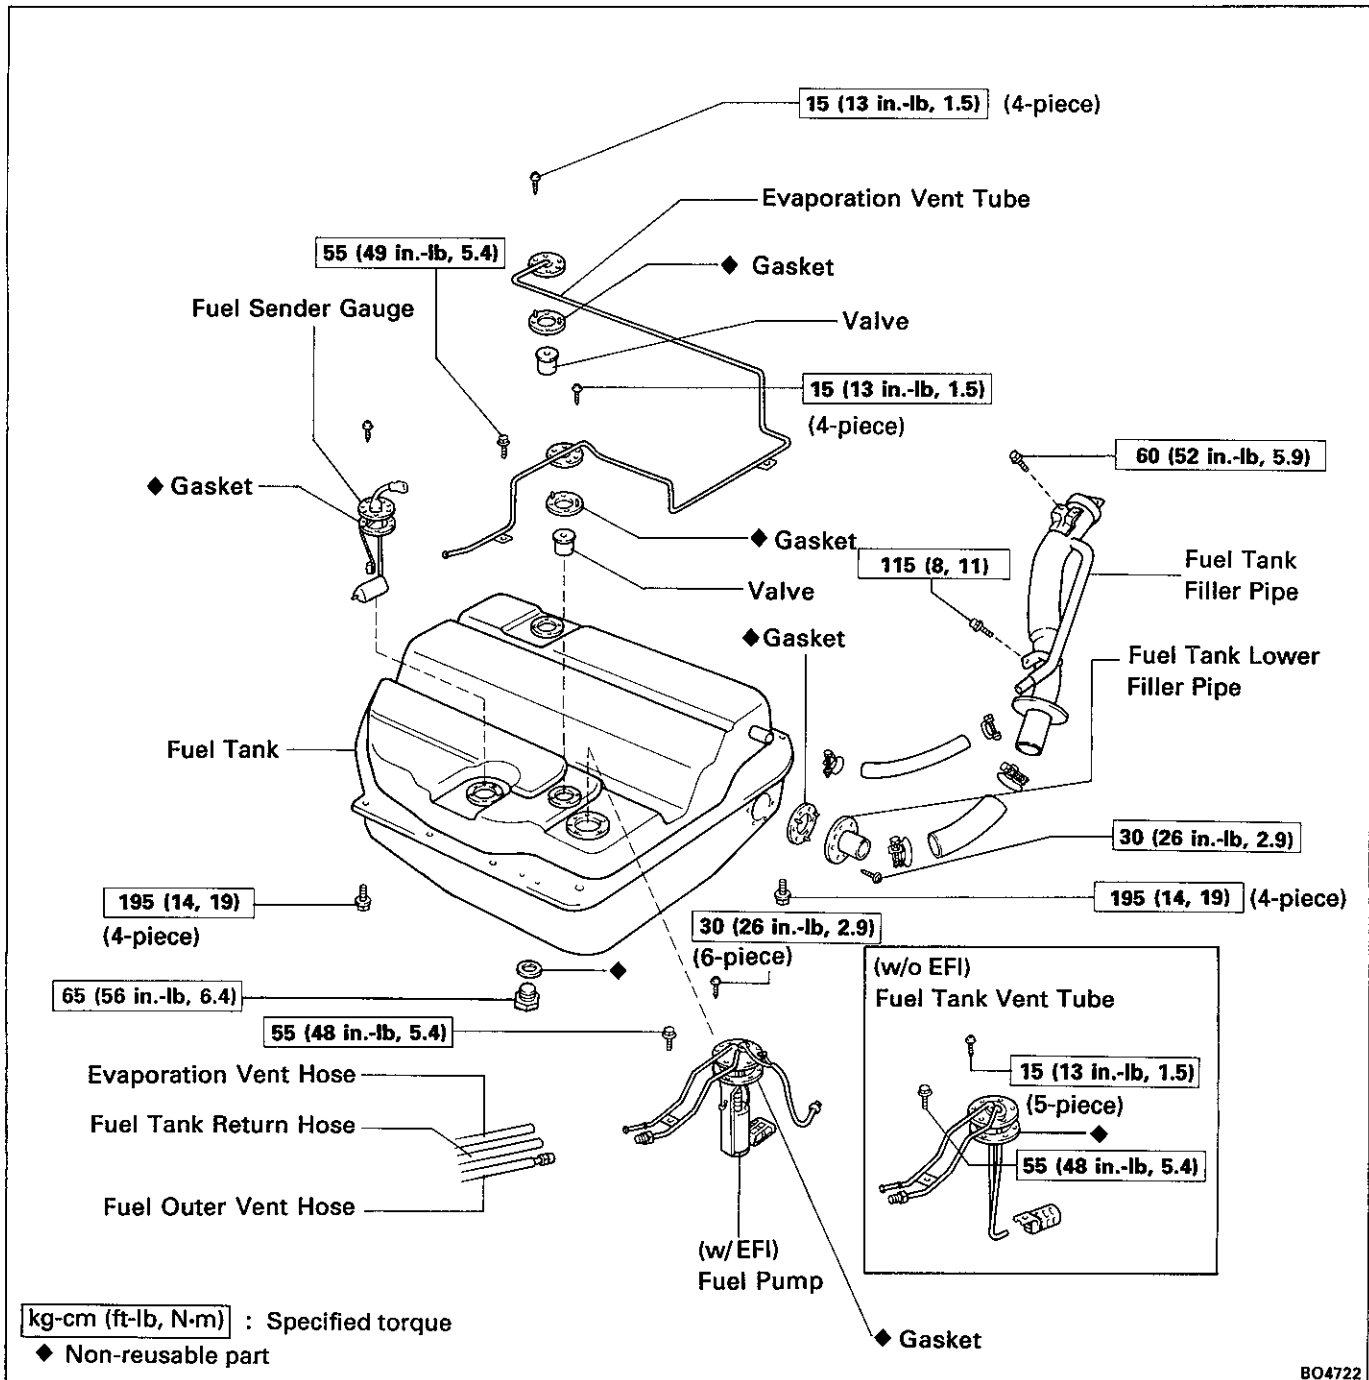


BO4722

## The location of fuel tank cushion


The upper side

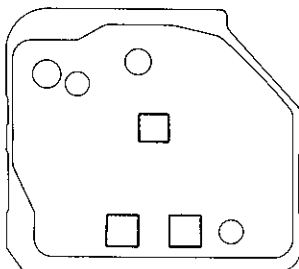

The lower side

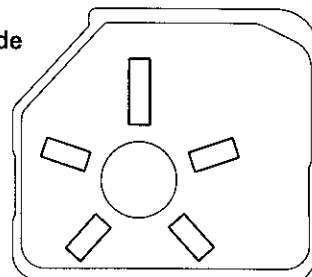

BO4723 BO4724

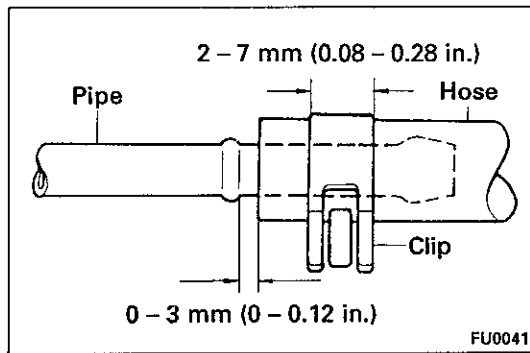

## PRECAUTIONS

1. Always use new gaskets when replacing the fuel tank or components parts.
2. When re-installing , be sure to include the rubber protectors on the upper surfaces of the fuel tank and tank band.
3. Apply the proper torque to all tightening parts.

## INSPECT FUEL LINES AND CONNECTIONS

- (a) Inspect the fuel lines and connections for cracks, leakage or deformation.
- (b) Inspect the fuel tank vapor vent system hoses and connectors for looseness, sharp bends or damage.
- (c) Inspect the fuel tank for deformation, cracks, fuel leakage or tank band looseness.
- (d) Inspect the filler neck for damage or fuel leakage.
- (e) Hose and tube connections are as shown in the illustration.

If problem is found, repair or replace parts as necessary.