



FRONT DOOR COMPONENTS

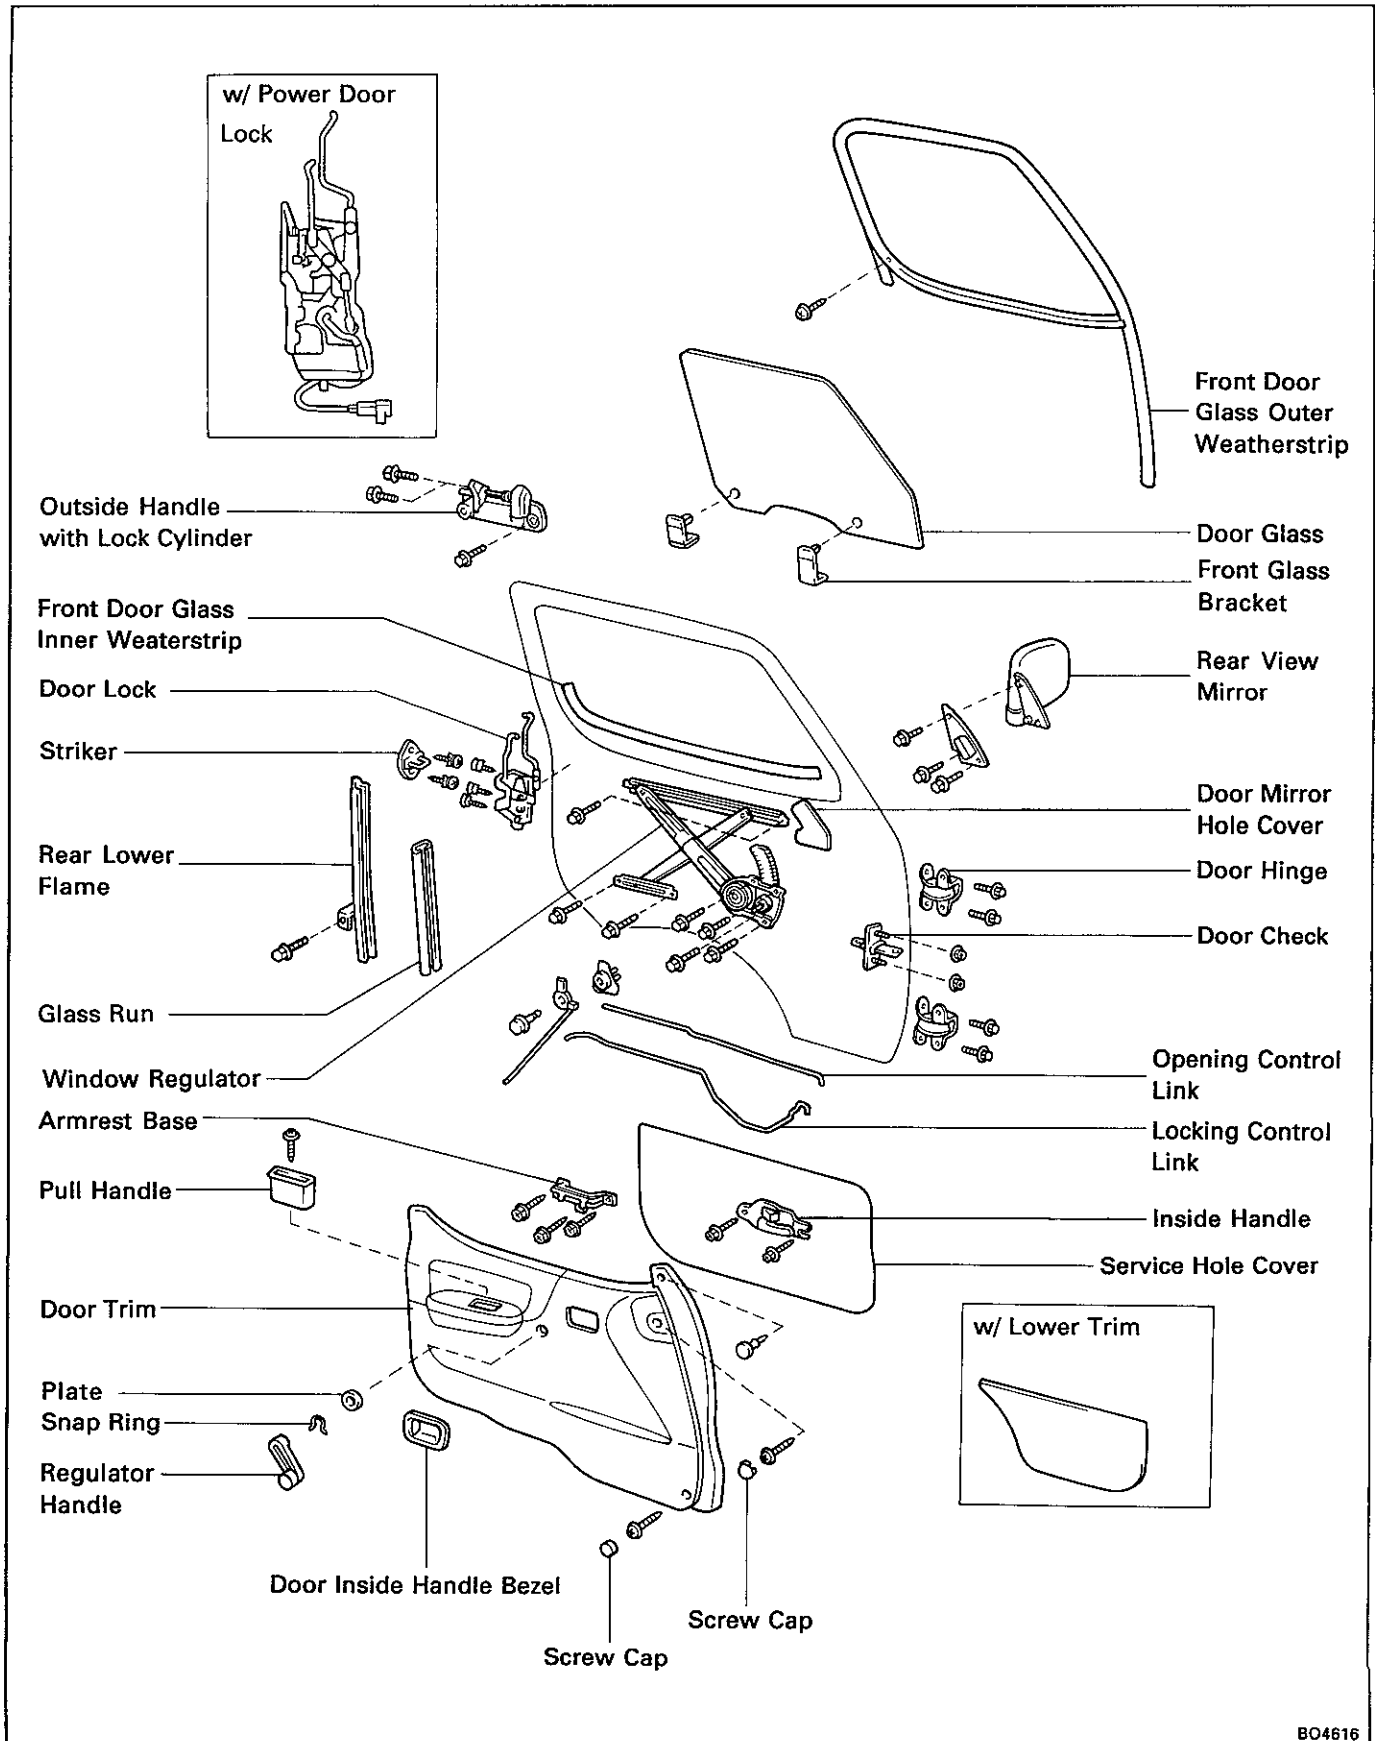

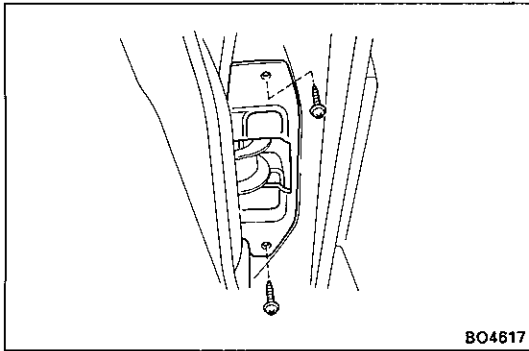


ADJUSTMENT OF FRONT DOOR

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS


(a) Remove two screws and the cover.

(b) Adjust the door by loosening the body side hinge bolts.

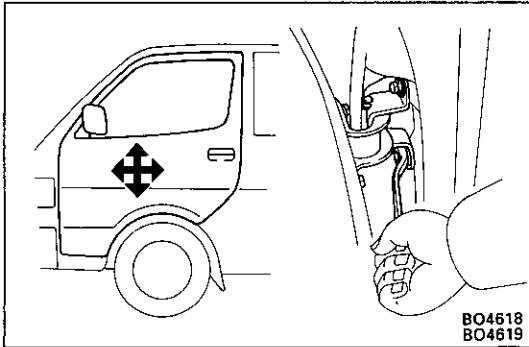

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS


Loosen the door hinge bolts to adjust.

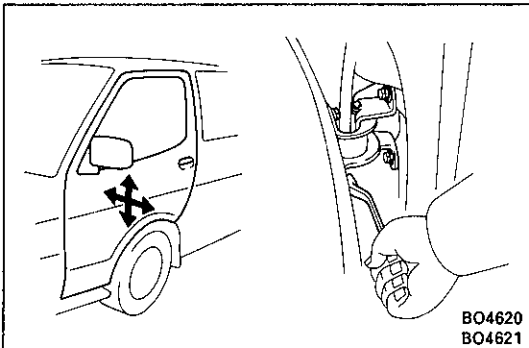

3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Loosen the striker mounting screws to adjust.

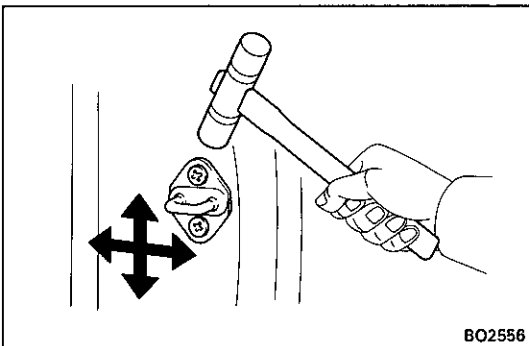



DISASSEMBLY OF FRONT DOOR

(See page BO-3)

1. REMOVE REGULATOR HANDLE


Pull off the snap ring with a shop rag and remove the regulator handle and plate.

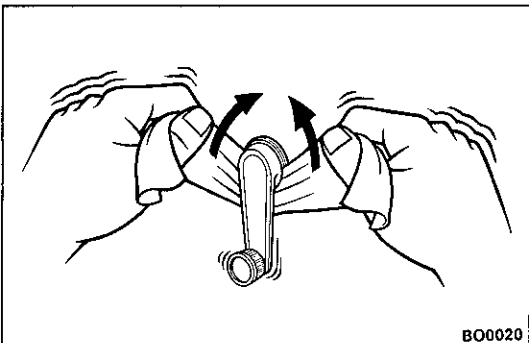

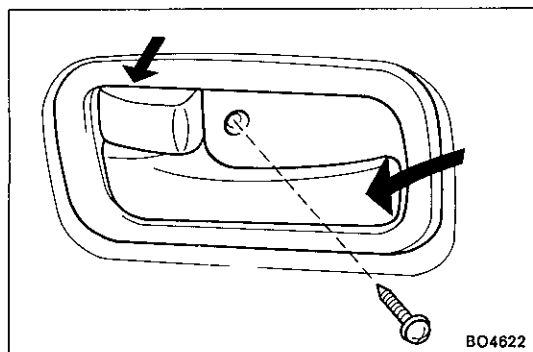


2. REMOVE DOOR INSIDE HANDLE BEZEL

Remove the screw, and slide the bezel forward.

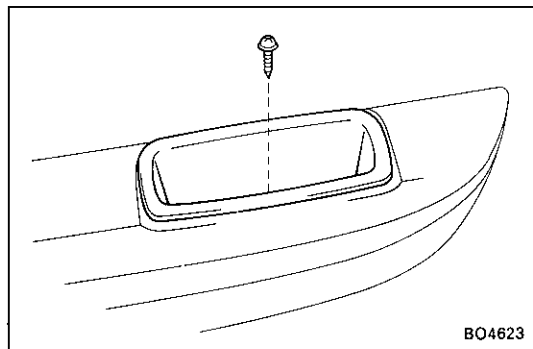

3. REMOVE PULL HANDLE

Remove the screw and the handle.

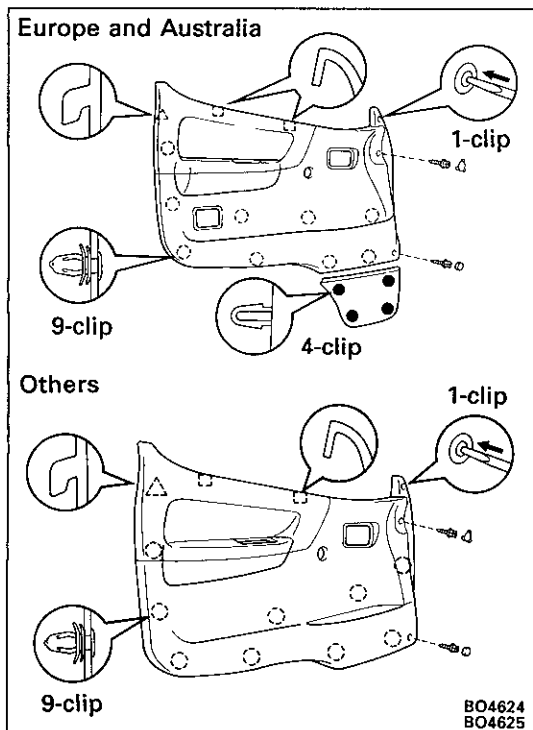

4. REMOVE DOOR TRIM

(a) Using a screwdriver, remove the two screw caps and the clip.

HINT: Tape the screwdriver tip before use.


(b) Remove two screws.

(c) Insert the screwdriver between the door panel and door trim to pry out the trim.

(d) Slide the door trim upward.

(e) (Europe and Australia)
Disconnect the connector.


(f) (Europe and Australia)
Insert the screwdriver between the door panel and the lower trim to remove it.

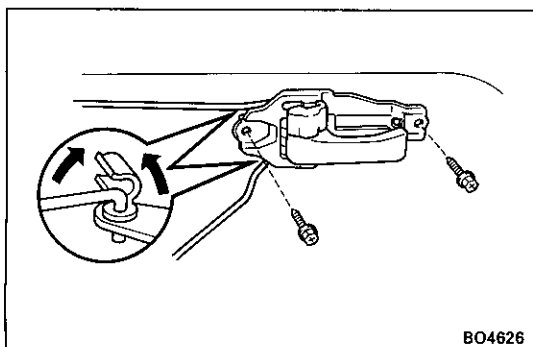


5. REMOVE DOOR INSIDE HANDLE

(a) Remove two bolts.

(b) Disconnect the handle from the two links, and remove the handle.

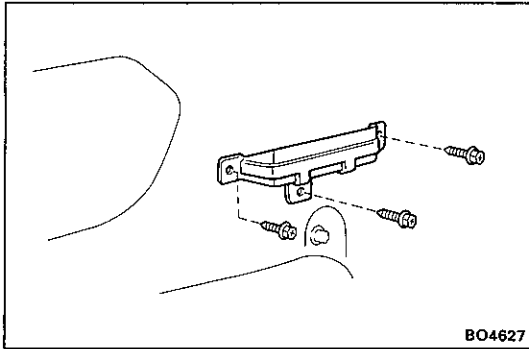
**6. REMOVE ARMREST BASE**

Remove three bolts and the base.

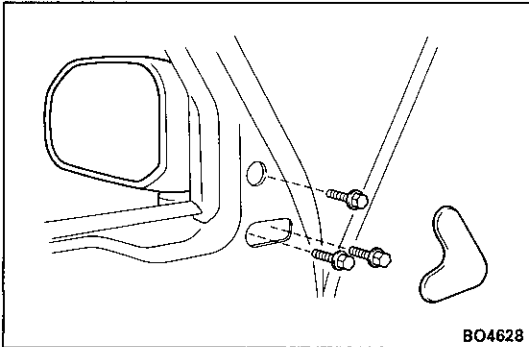7. REMOVE SERVICE HOLE COVER**8. REMOVE DOOR MIRROR HOLE COVER AND REAR VIEW MIRROR**

(a) Remove door mirror hole cover.

(b) Remove three bolts and the mirror.

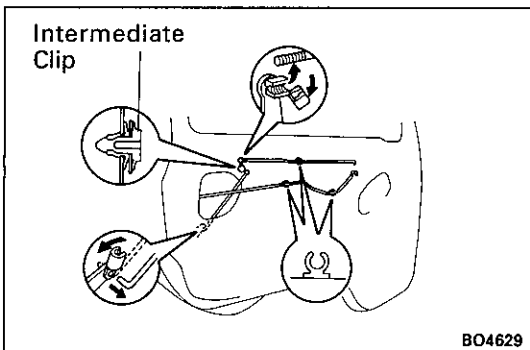
**9. DISCONNECT OPENING CONTROL LINK AND LOCKING LINK**

(a) Remove the intermediate clip of the inside locking link.

(b) Remove the clip joining the inside locking link and door lock, and remove the inside locking link.

(c) Pull the opening control link out of the intermediate clip and remove the door lock clip.

(d) Disconnect the opening control link from the door lock.

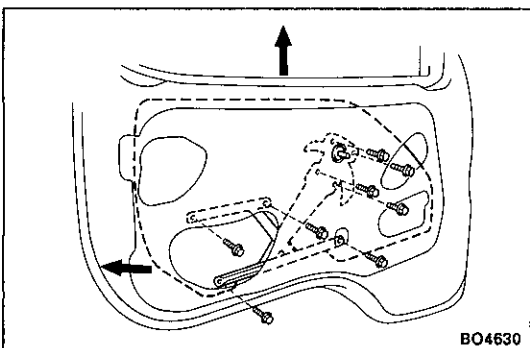
**10. REMOVE DOOR GLASS AND WINDOW REGULATOR**

(a) Remove two glass mounting bolts and pull the door glass upward.

(b) Remove four regulator mounting bolts.

(c) Remove two equalizer arm bracket mounting bolts.

(d) Remove the regulator through the service hole.

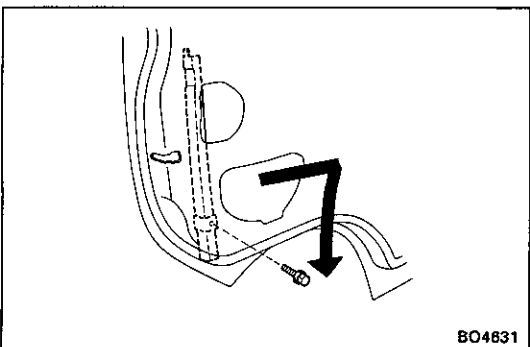
**11. REMOVE REAR LOWER FRAME**

(a) Remove the bolt.

(b) Remove front door glass outer weatherstrip from rear lower frame.


(c) Remove rear lower frame through the service hole.

(d) Remove glass run from the frame.

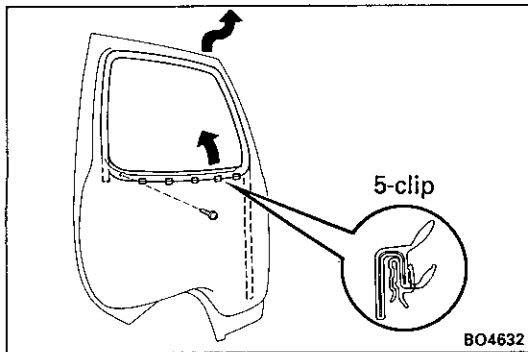


12. REMOVE FRONT DOOR GLASS OUTER WEATHER-STRIP

- (a) Remove the screw.
- (b) Pry loose the clips from the edge of the panel.
- (c) Remove the weatherstrip.

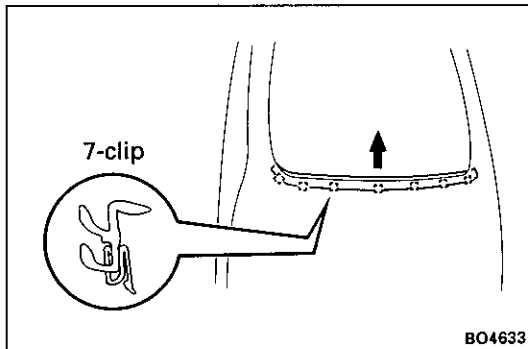


13. REMOVE FRONT DOOR GLASS INNER WEATHER-STRIP

Remove the weatherstrip upward.

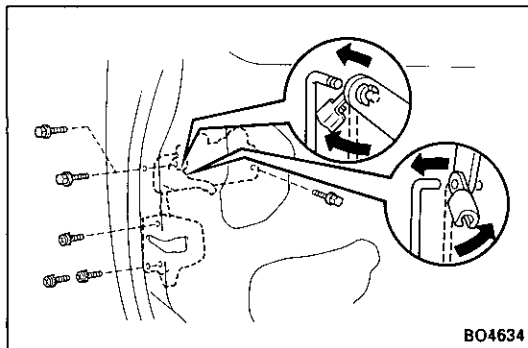


14. REMOVE DOOR LOCK AND OUTSIDE HANDLE WITH LOCK CYLINDER

- (a) Disconnect links from the outside handle with lock cylinder.
- (b) (w/Power door lock)
Disconnect the connector.
- (c) Remove three screws and the door lock.
- (d) Remove three bolts and the outside handle with lock cylinder.

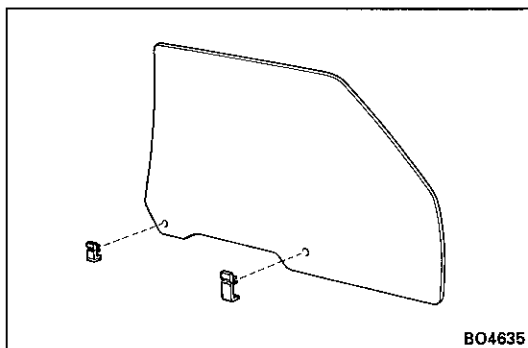

REPLACEMENT OF GLASS

REMOVE AND INSTALL FRONT GLASS BRACKETS

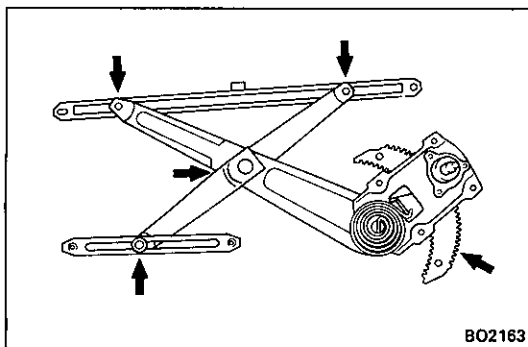


ASSEMBLY OF FRONT DOOR

(See page BO-3)


1. BEFORE INSTALLING PARTS, COAT THEM WITH MP GREASE

- (a) Apply MP grease to the sliding surface and gears of the window regulator.

NOTICE: Do not apply MP grease to the spring of the window regulator.

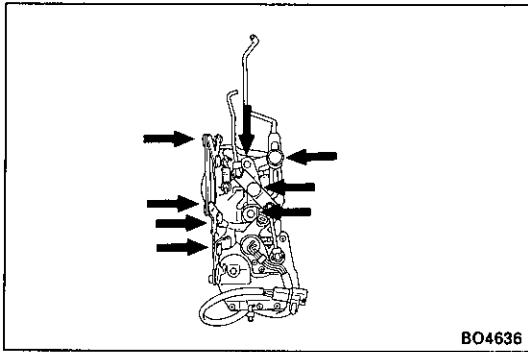


- (b) Apply MP grease to the sliding surface of the door lock.

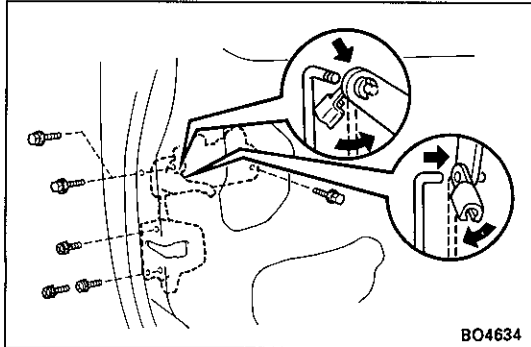


2. INSTALL OUTSIDE HANDLE WITH LOCK CYLINDER AND DOOR LOCK

- Install the handle and lock cylinder with three bolts.
- Install the door lock with three screws.
- (w/ Power door lock)
Connect the connector.
- Install links to the outside handle with lock cylinder.

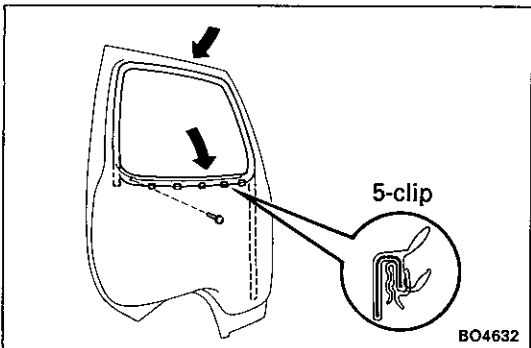


3. INSTALL FRONT DOOR GLASS OUTER WEATHER-STRIP

Install two screws and the weatherstrip.

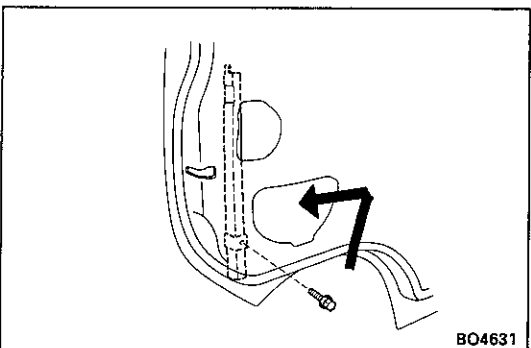


4. INSTALL REAR LOWER FRAME

- Install the glass run to the frame.
- Install front door glass outer weatherstrip to rear lower frame.
- Install the screw and the lower frame.

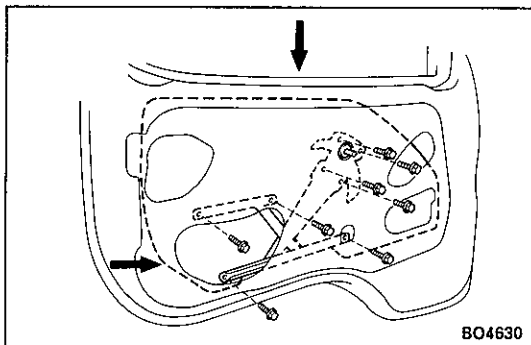


5. INSTALL DOOR GLASS AND WINDOW REGULATOR

- Place the regulator through the service hole.
- Install two equalizer arm bracket mounting bolts.
- Install four regulator mounting bolts.
- Install the glass to the regulator with two mounting bolts.

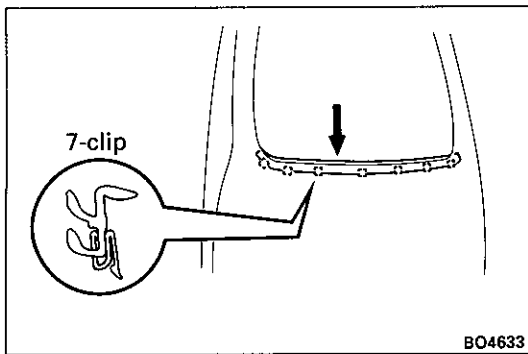


6. INSTALL FRONT DOOR GLASS INNER WEATHERSTRIP

Install the weatherstrip downward.

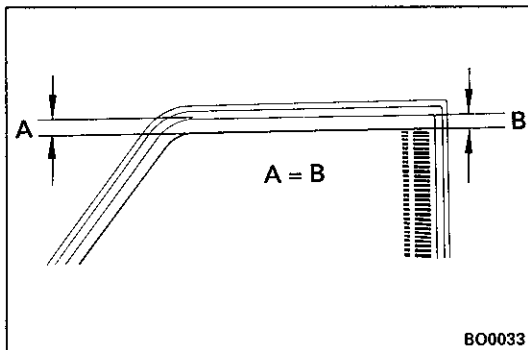


7. ADJUST DOOR GLASS

Adjust the equalizer arm up or down and tighten it where dimensions A and B, as shown, are equal.

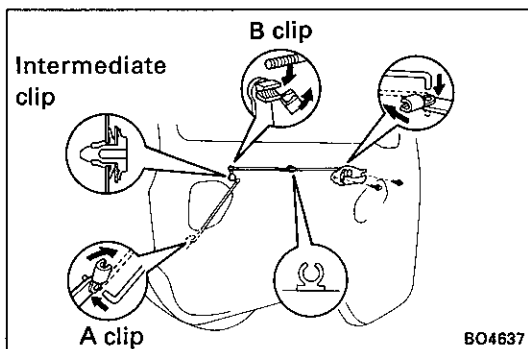


8. INSTALL DOOR LOCKING CONTROL LINK

- Connect the link with the inside handle.
- Install two screws and the inside handle.
- Connect the link A clip.
- Put the lock button of the inside handle in lock position.
- Install the intermediate clip to the link.
- Pull the door lock on lock with a B clip and fix in place the locking link.
- Check that lock operation occurs smoothly.

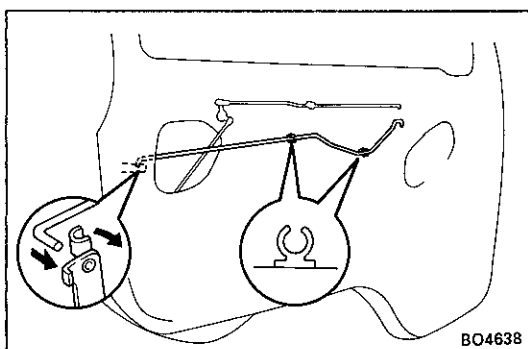


9. INSTALL OPENING CONTROL LINK


Connect the link to door lock with the clip.

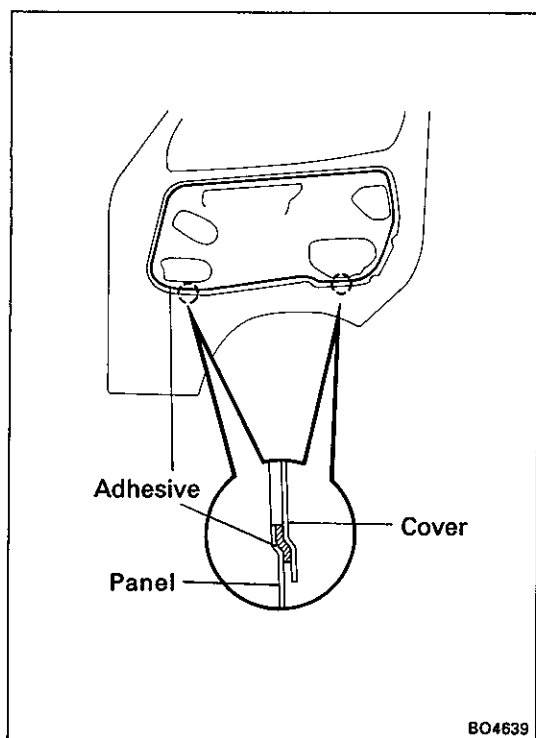**10. INSTALL SERVICE HOLE COVER**


- (a) Seal the service hole cover with adhesive.
- (b) Insert the lower edge of the service hole cover into the panel slit.

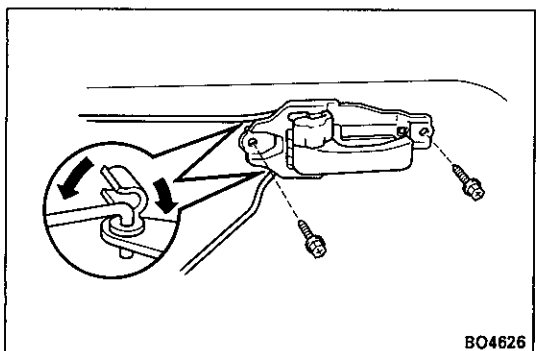**11. INSTALL DOOR INSIDE HANDLE**


- (a) Connect the two links to the handle.
- (b) Install two bolts and the handle.
- (c) Check that operation occurs smoothly.

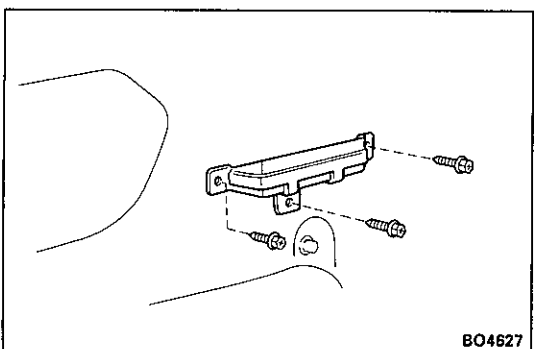**12. INSTALL ARMREST BASE**


Install three bolts and the base.

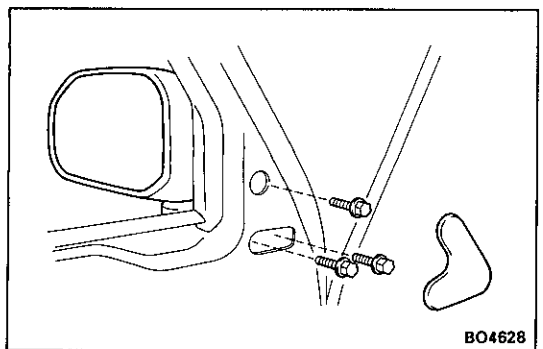**13. INSTALL DOOR MIRROR HOLE COVER AND REAR VIEW MIRROR**


- (a) Install three bolts and mirror.
- (b) Install the door mirror hole cover.

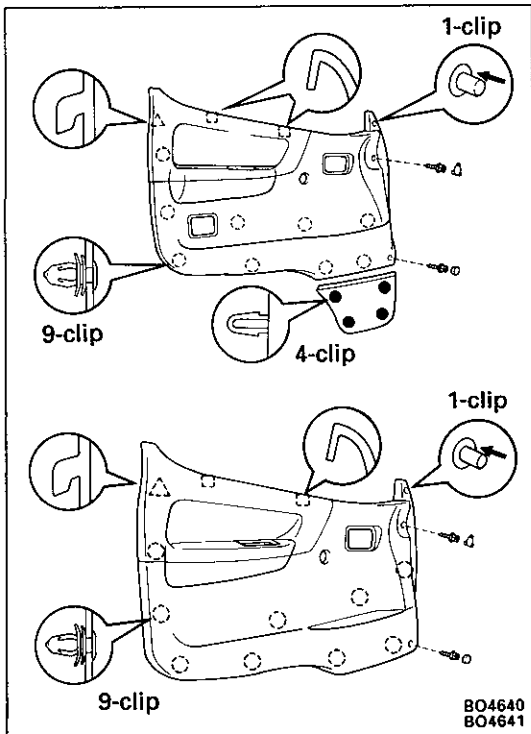**14. INSTALL DOOR TRIM**


- (a) (Europe and Australia)
Install the lower trim with clips to the door panel by tapping.
- (b) (Europe and Australia)
Connect the connector.
- (c) Slide the door trim downward.
- (d) Install the door trim with clips to the door panel by tapping.
- (e) Install two screws and the screw caps.
- (f) Install the clip and the trim.

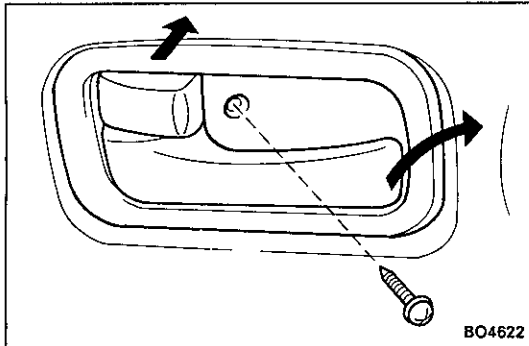**15. INSTALL DOOR INSIDE HANDLE BEZEL**

Install the screw and the bezel.

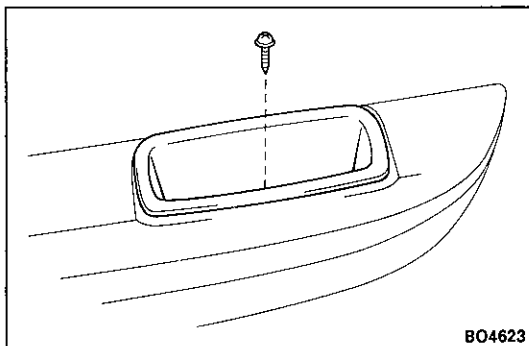**16. INSTALL PULL HANDLE**

Install the screw and the handle.

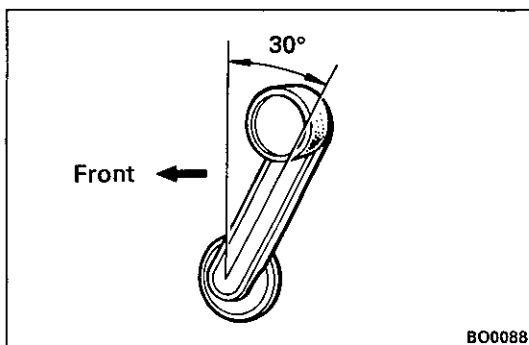**17. INSTALL REGULATOR HANDLE**

With the door window fully closed, install the plate and regulator with a snap ring as shown.