


MOULDING

Windshield Moulding


COMPONENTS

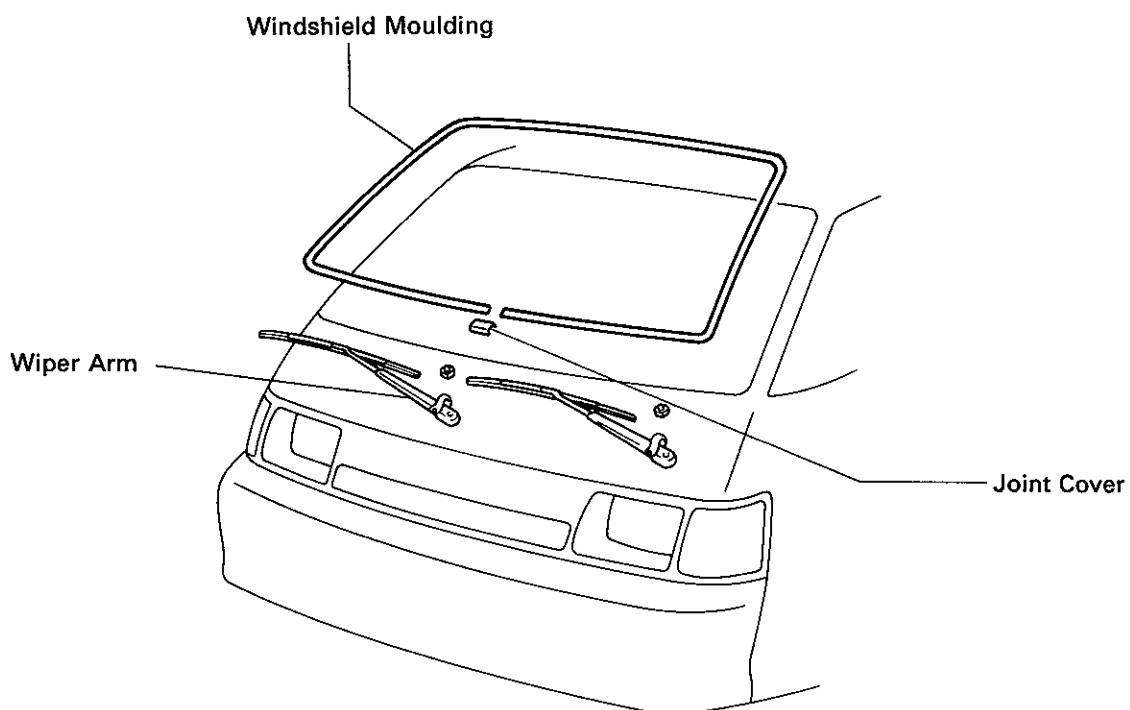


BO4739

REMOVAL OF WINDSHIELD MOULDING

1. REMOVE WIPER ARMS

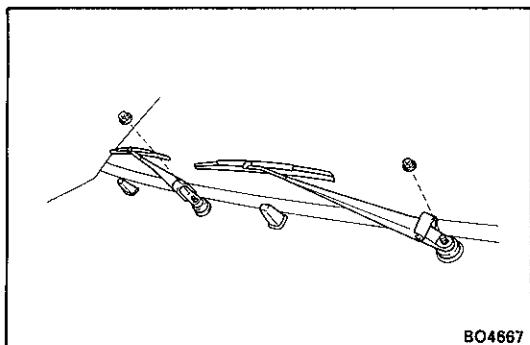


BO4867

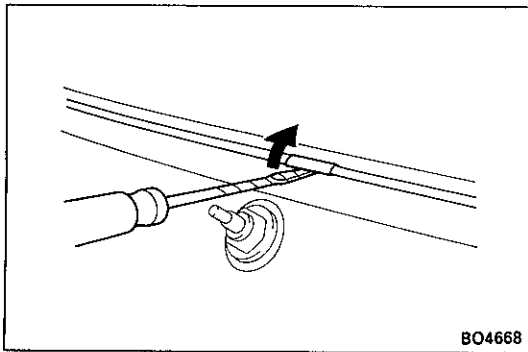

2. REMOVE JOINT COVER

Insert a screwdriver between the weatherstrip and joint cover to pry it out.



HINT: Tape the screwdriver tip before use.

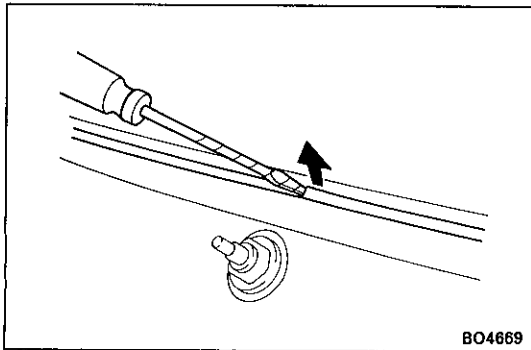

3. REMOVE WINDSHIELD MOULDING

- (a) Remove the windshield moulding from the end with the screwdriver or similar tool.

- (b) Pull the windshield moulding with your hand.

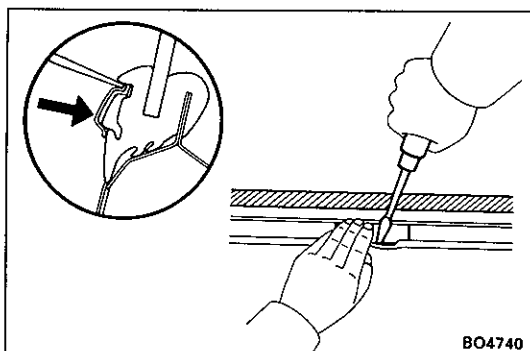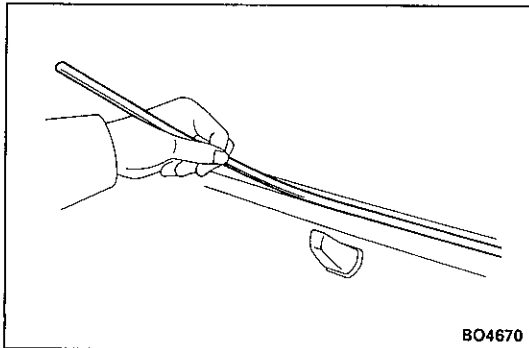

INSTALLATION OF WINDSHIELD MOULDING

(See page BO-23)

INSTALL MOULDING AND JOINT COVER

- (a) Coat the soapy water to the weatherstrip and the moulding.
- (b) Insert the edge of the moulding onto the weatherstrip.
- (c) Using a screwdriver, install the moulding and the joint cover.

HINT: Tape the screwdriver tip before use.