


## Body Outside Moulding COMPONENTS

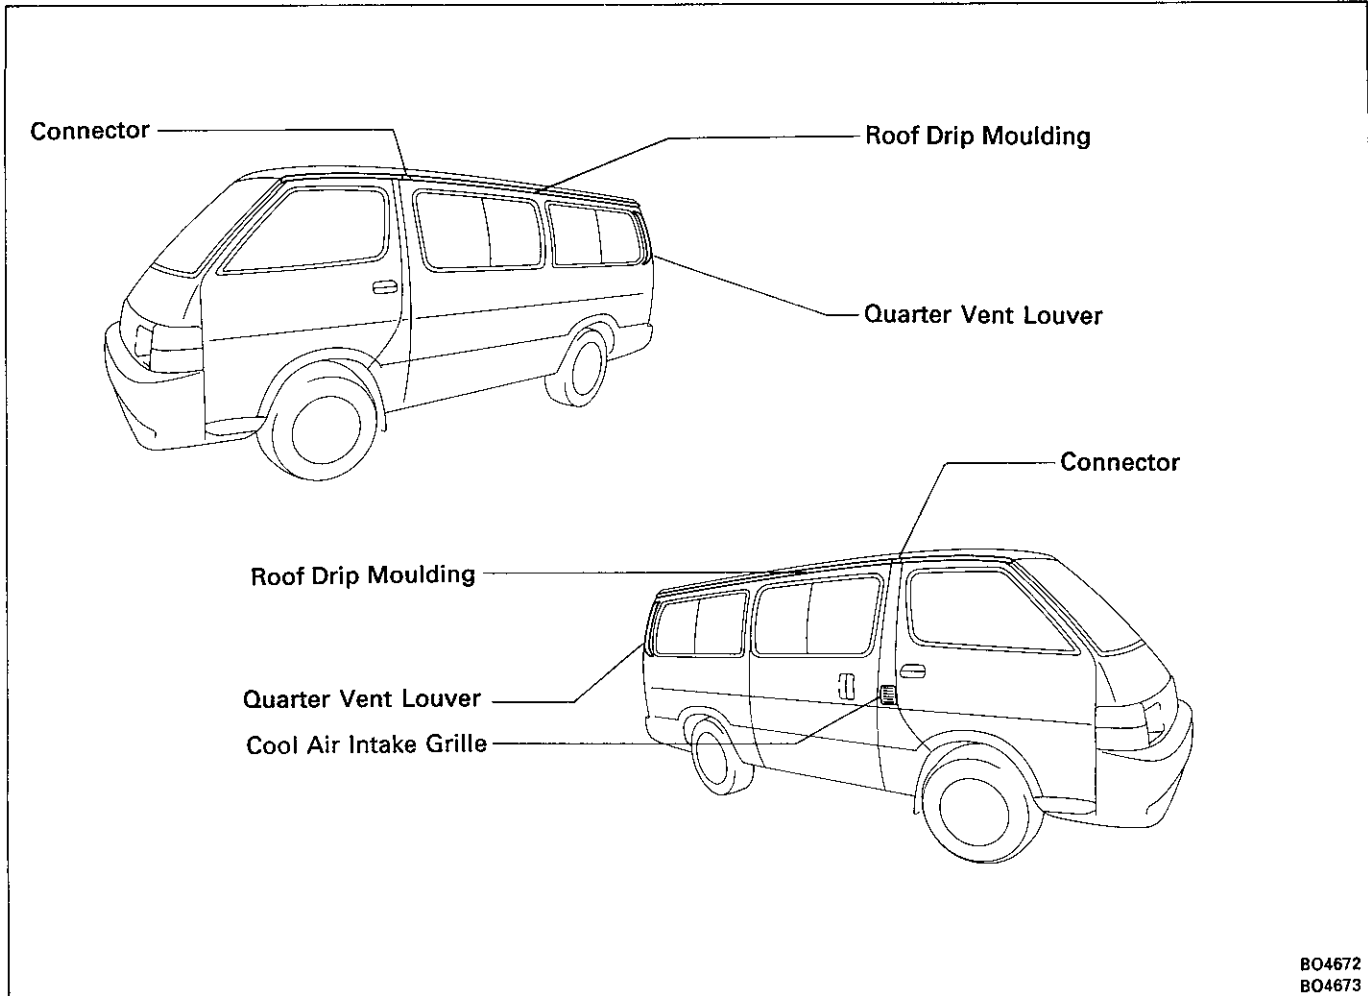

BO4672  
BO4673


### REMOVAL AND INSTALLATION OF BODY OUTSIDE MOULDING

#### Roof Drip Moulding

##### 1. REMOVE ROOF DRIP MOULDING CONNECTOR

Insert the SST to the bottom side of the connector and remove it.


SST 09806-30010

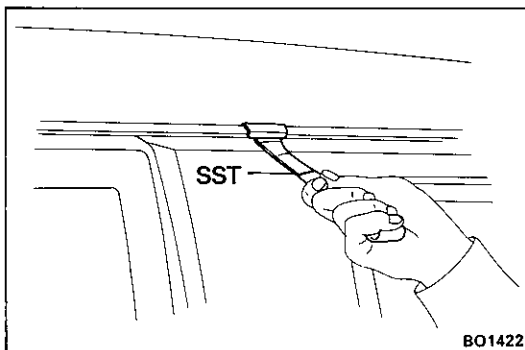


##### 2. REMOVE MOULDING

Latch the SST to the bottom side of the moulding and remove it.


SST 09806-30010

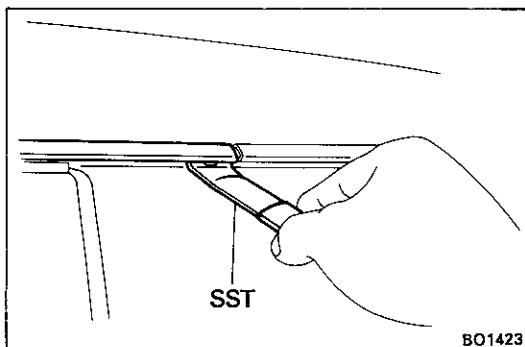

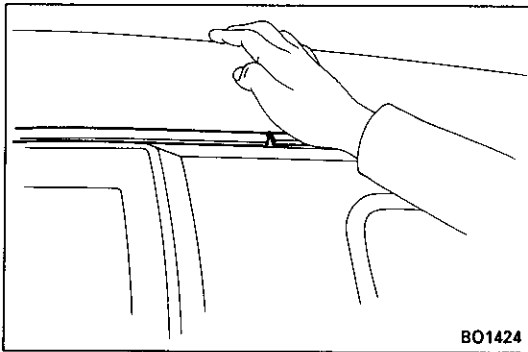


### 3. INSTALL MOULDING

Suspend the upper side of the moulding to the roof drip and tap it on by hand.

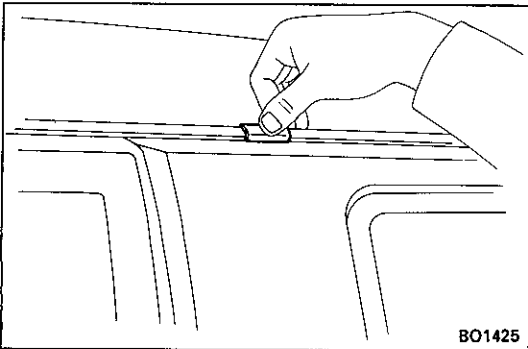

### 4. INSTALL CONNECTOR

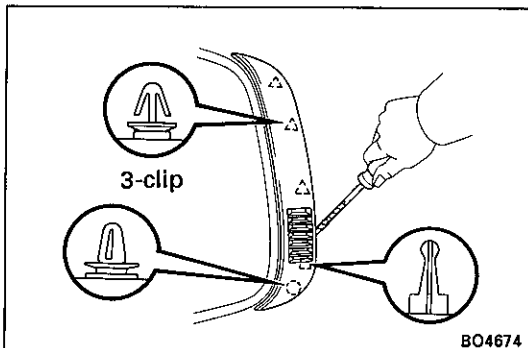


## Quarter Vent Louver

### 1. REMOVE QUARTER VENT LOUVER

Insert a screwdriver between the body panel and the vent louver to pry out it.

HINT: Tape the screwdriver tip before use.

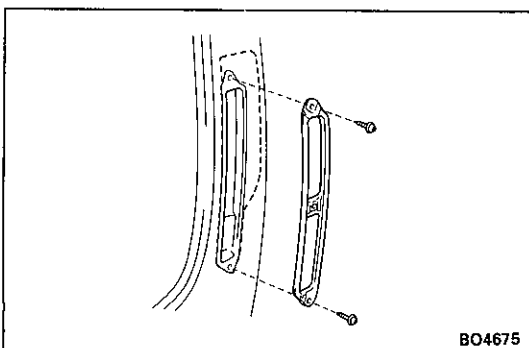

### 2. REMOVE QUARTER VENT RETAINER

Remove two screws and the vent retainer.

### 3. REMOVE QUARTER VENT DUCT

Remove the duct through the hole.


### 4. INSTALL QUARTER VENT DUCT

### 5. INSTALL QUARTER VENT RETAINER

Install two screws and the vent retainer.

### 6. INSTALL QUARTER VENT LOVER

Install the quarter vent lover with clips outside body panel by tapping.

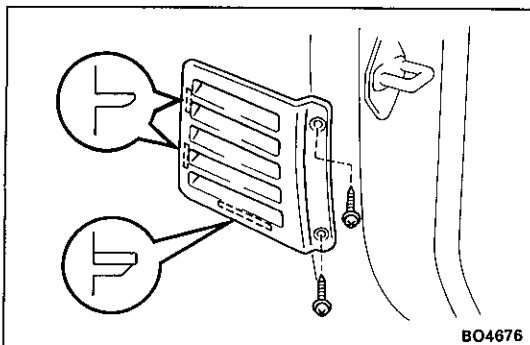

## Cool Air Intake Grille

### REMOVE COOL AIR INTAKE GRILLE

Remove two screws and the grille.

### INSTALL COOL AIR INTAKE GRILLE

Install two screws and the grille.