

## REMOVAL

### 1. REMOVE WIPER ARM

Remove 2 nuts and 2 wiper arm.

### 2. REMOVE VISOR

Remove 4 screws and 2 visors.

### 3. REMOVE VISOR HOLDER

Remove 2 screws and 2 visor holders.

### 4. REMOVE INNER REAR VIEW MIRROR

Remove the cover, 3 screws and the inner rear view mirror.

### 5. REMOVE ASSIST GRIP

Remove 4 covers, 4 screws and 2 assist grips.

### 6. REMOVE LOWER OUTSIDE MOULDING

Using a screwdriver, remove moulding clips and the windshield moulding.

HINT:


Tape the screwdriver tip before use.

### 7. REMOVE UPPER OUTSIDE MOULDING

Using a knife, cut off the moulding as shown.

**NOTICE:**

**Do not damage the body with the knife.**

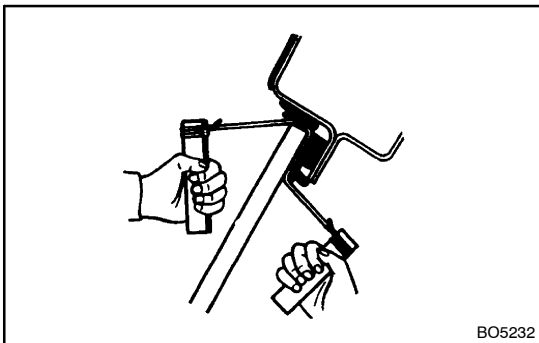

### 8. REMOVE WIND SHIELD GLASS

(a) Push piano wire through between the body and glass from the interior.

(b) Tie both wire ends to wooden block or a similar object.

HINT:

Apply adhesive tape to the outer surface to keep the surface from being scratched.

**NOTICE:**

**When separating the glass, take care not to damage the paint and interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.**

(c) Cut the adhesive by pulling the piano wire around it.

(d) Remove the glass.

**NOTICE:**

**Leave as much of the adhesive on the body as possible when cutting off the glass.**

