


QUARTER WINDOW GLASS

PREPARE ITEMS LISTED

(See page BO-36)

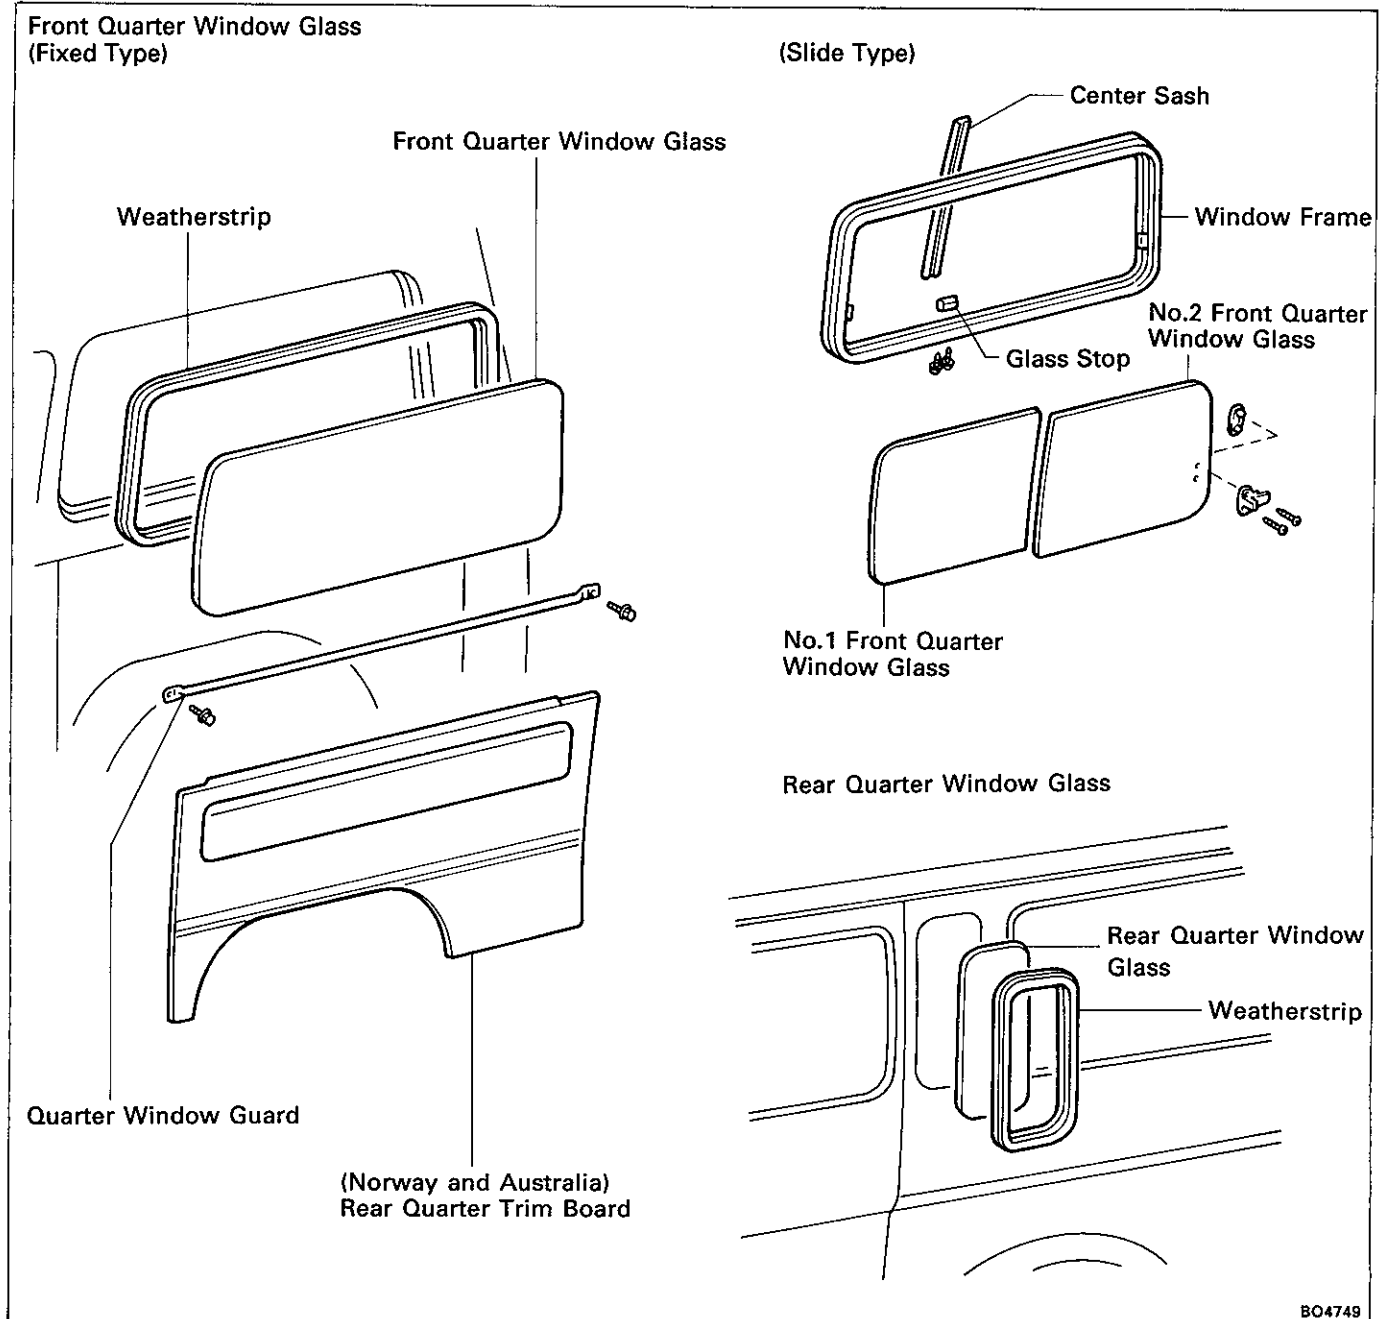

Front Quarter Window Glass

REMOVAL AND INSTALLATION OF QUARTER WINDOW GLASS

HINT: Remove and install the front quarter window glass in the same manner as the windshield glass.
(See pages BO-32 to 35)

Rear Quarter Window Glass

(See page BO-40)

REMOVAL OF QUARTER WINDOW GLASS

Fixed Type

Remove the glass in the same manner as the windshield. (See step 5 on page BO-33)

Slide Type

1. (Norway and Australia)

REMOVE REAR QUARTER TRIM BOARD

Using a screwdriver, pry loose the clips and remove the board.

HINT: Tape the screwdriver tip before use.

2. REMOVE QUARTER WINDOW GLASS WITH WINDOW FRAME

(See step 4 on page BO-37)

DISASSEMBLY OF QUARTER WINDOW GLASS (Slide Type)

(See steps 1 to 3 on page BO-37 to 38)

ASSEMBLY OF QUARTER WINDOW GLASS (Slide Type)

(See steps 1 to 3 on page BO-38)

INSTALLATION OF QUARTER WINDOW GLASS (Slide Type)

1. INSTALL QUARTER WINDOW GLASS ASSEMBLY (See steps 1 to 3 on pages BO-38 to 39)

2. (Norway and Australia) INSTALL REAR QUARTER TRIM BOARD

