

EVAPORATOR (Front A/C and Rear A/C)

(See page AC-42 or 45)

INSPECTION OF EVAPORATOR


1. CHECK EVAPORATOR FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

NOTICE: Never use water to clean the evaporator.

2. CHECK FITTINGS FOR CRACKS OR SCRATCHES

Repair as necessary.

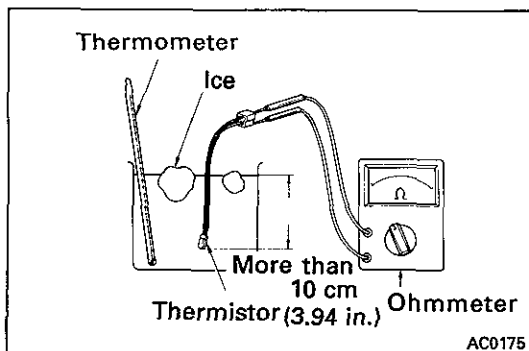

THERMISTOR (Front A/C and Rear A/C)

(See page AC-42 or 45)

INSPECTION OF THERMISTOR

Inspect thermistor resistance.

- (a) Measure the resistance between terminals at 25°C (77°F).

Resistance: 1,500 Ω at 25°C (77°F)

- (b) Place the thermistor in cold water. While varying the temperature of the water, measure the resistance at the connector and at the same time, measure the temperature of the water with a thermometer.

- (c) Compare the two readings on the chart.

If the resistance value is not as specified, replace the thermistor.

