

## MOTORS

### Blower Motors

(See page AC-11 or 12)

#### INSPECTION OF BLOWER MOTORS

##### (Front Blower Motor)

##### INSPECT BLOWER MOTOR

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operation is smooth.

If operation is not as specified, replace the motor.

##### (Rear Heater Blower Motor)


##### INSPECT BLOWER MOTOR

Check the motor the same way as for the front blower motor.

##### (Rear A/C Blower Motor)

##### INSPECT BLOWER MOTOR

Check the motor the same way as for the front blower motor.

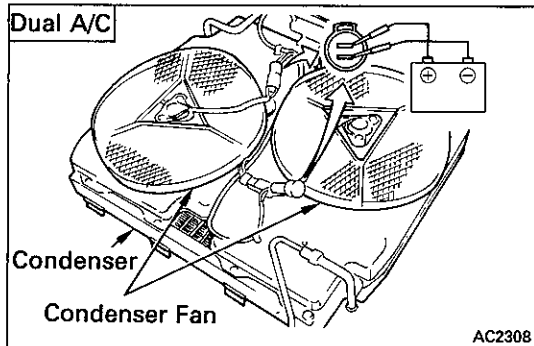

### Condenser Fan Motors

(See page AC-10 or 11)

#### INSPECTION OF CONDENSER FAN MOTORS

##### INSPECT CONDENSER FAN MOTOR

- Using the wire harness, apply battery voltage to the connector.
- Confirm smooth rotation of the motor within the specified current flow.

**Standard current:**  $6.5 \pm 0.7 \text{ A}$

If current is not as specified, replace the motor.

