 



BLOWER RESISTORS

INSPECTION OF BLOWER RESISTORS

(Front Blower Resistor)

INSPECT BLOWER RESISTOR CONTINUITY


 
 
 
 
	Terminal Condition	1	3	2	4
	Constant				

H-4-2

If continuity is not as specified, replace the blower resistor.

(Rear Heater Blower Resistor)

INSPECT BLOWER RESISTOR CONTINUITY

 
 
Connector "A"	Connector "B"	Terminal Condition	Connector "A"				Connector "B"	
			3	4	1	2	1	2
		Constant						

H-4-2 H-2-1

If continuity is not as specified, replace the blower resistor.

(Rear A/C Blower Resistor)

INSPECT BLOWER RESISTOR CONTINUITY

	Terminal Condition	3	1	2
	Constant			

H-3-2

If continuity is not as specified, replace the blower resistor.