

Condenser Fan Main Relay (with Dual A/C)

INSPECTION OF RELAY

INSPECT RELAY CONTINUITY

Check the relay the same way as for the rear blower relay.

Condenser Fan Relay (with Single A/C)

INSPECTION OF RELAY

INSPECT RELAY CONTINUITY

Check the relay the same way as for the heater relay.

Condenser Fan Relay No.1 (with Dual A/C)

INSPECTION OF RELAY

INSPECT RELAY CONTINUITY

Check the relay the same way as for the heater relay.

Condenser Fan Relay No.2 (with Dual A/C)

INSPECTION OF RELAY

INSPECT RELAY CONTINUITY

Check the relay the same way as for the condenser fan main relay

Condenser Fan Speed Control Relay (with Dual A/C)

INSPECTION OF RELAY

INSPECT RELAY CONTINUITY

Check the relay the same way as for the A/C cut-off relay.

FUSES

INSPECTION OF FUSES

INSPECT FUSE CONTINUITY

See General Information of BE Section on page BE-4.

CIRCUIT BREAKER

INSPECTION OF CIRCUIT BREAKER

INSPECT CIRCUIT BREAKER CONTINUITY

See General Information of BE Section on page BE-4.