


(Rear A/C Blower Switch)

INSPECT SWITCH CONTINUITY

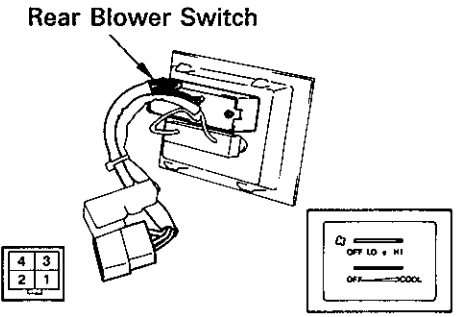


Rear Blower Switch

AC2324

Terminal Switch Position	1	2	3	4
OFF				○
LO			○	○
■		○	○	○
HI	○		○	○

If continuity is not as specified, replace the switch.

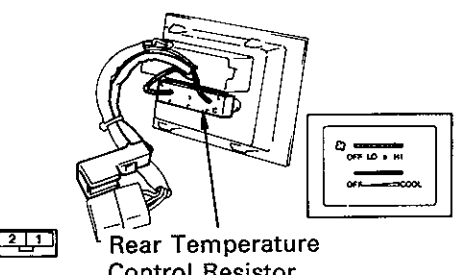

Rear Temperature Control Resistor

AC2323

Rear A/C Temperature Control Switch

INSPECTION OF SWITCH


INSPECT SWITCH RESISTANCE

Set the switch lever to COOL position, then measure the resistance between terminals.

Standard resistance: 1.7 kΩ

If resistance value is not as specified, replace the switch.

RHD LHD

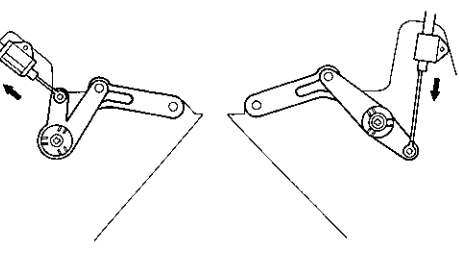

AC2325


A/C CONTROL LEVERS

ADJUSTMENT OF CONTROL CABLES

1. ADJUST AIR INLET DAMPER CONTROL CABLE

Set the air inlet damper and the air inlet control lever to "FRESH", then install the control cable and lock the clamp.


RHD LHD

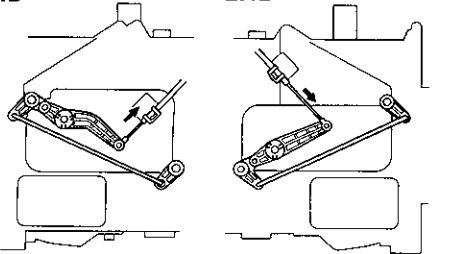

AC2326


2. ADJUST AIR MIX DAMPER CONTROL CABLE

Set the air mix damper and the temperature control lever to "COOL", then install the control cable and lock the clamp.

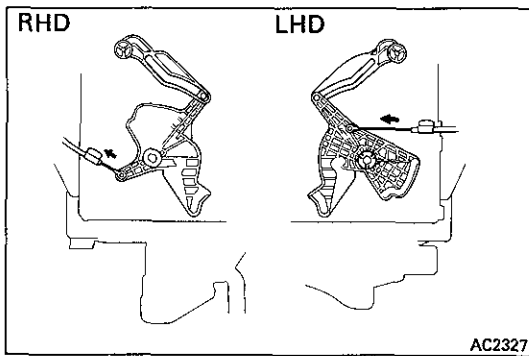



3. ADJUST MODE DAMPER CONTROL CABLE

Set the mode damper and the mode control lever to "VENT", then install the control cable and lock the clamp.

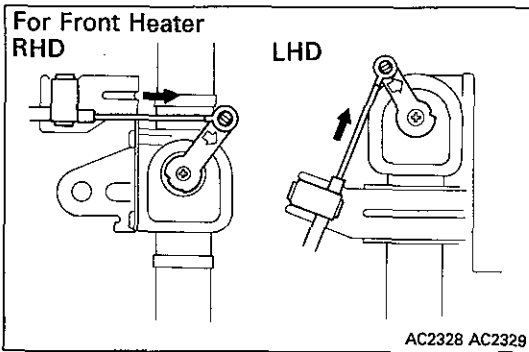

4. ADJUST WATER VALVE CONTROL CABLE

Set the water valve and the temperature control lever to "COOL", then install the control cable and lock the clamp.

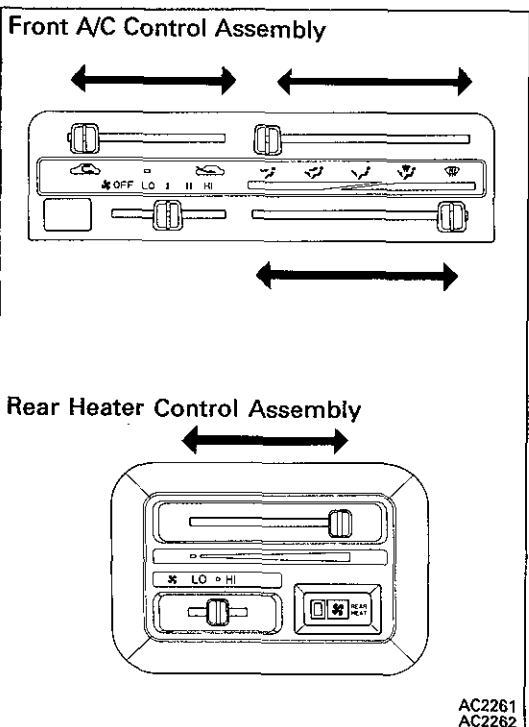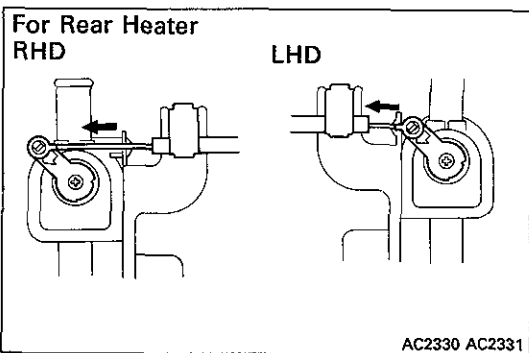

INSPECTION OF A/C CONTROL LEVERS

INSPECT LEVERS OPERATION

Move the control levers left and right and check for stiffness and binding through the full range of levers.

If operation is not as specified, replace the A/C control assembly.