
 
 
 
 










 
 

 
 





 




[illegible]



 
 

 



 


 

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			CL	MT	AT	TF	PR	SA			BR	SR	BO	Note
Part Name		Front												
Part No.		2WD						4WD	Rear					
Illustration														
	09308-00010	Oil Seal Puller		●		●		●	●	●				
	09308-10010	Oil Seal Puller		●	●	*			●	●				* Front case oil seal
	09309-36010	Transmission Rear Bearing Replacer									●			AISIN type tandem booster
	09313-30021	Detent Ball Plug Socket				●								
	09316-60010	Transmission & Transfer Bearing Replacer		●		●				●				
	(09316-00010)	(Replacer Pipe)		●		●				●				
	(09316-00020)	(Replacer "A")				●				●				
	(09316-00030)	(Replacer "B")								●				Ex. 2RZ w/MT, 2RZ-E (4WD)
	(09316-00040)	(Replacer "C")								●				For 2RZ w/MT, 2RZ-E (4WD)
	(09316-00050)	(Replacer "D")								●				
	(09316-00060)	(Replacer "E")				●								
	(09316-00070)	(Replacer "F")				●								
	09325-20010	Transmission Oil Plug		●	●	*1	*2							*1 Front case oil seal *2 2WD rear propeller shaft and 4WD front propeller shaft
	09326-22011	Output Shaft Bearing Lock Nut Wrench						●						Strut bar lock nut



 







 
 


SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			CL	MT	AT	TF	PR	SA			BR	SR	BO	Note
Part Name		Front												
Part No.		2WD						4WD	Rear					
Illustration														
	09330-00021	Companion Flange Holding Tool					●	●		●	●			
	09332-25010	Universal Joint Bearing Remover & Replacer						●						
	09333-00013	Clutch Diaphragm Spring Aligner		●										
	09350-20015	TOYOTA Automatic Transmission Tool Set				●								
	(09397-22020)	(One-way Clutch Test) Tool Set				●								
	09504-00011	Differential Side Bearing Adjusting Nut Wrench									●			
	09504-22011	Differential Side Washer Remover & Replacer									●			
	09506-30012	Differential Drive Pinion Bearing Cone Replacer					●			●	●			
	09506-35010	Differential Drive Pinion Rear Bearing Replacer			●									
	09515-30010	Rear Wheel Bearing Replacer					●							Planetary gear
	09521-25011	Rear Axle Shaft Puller									●			
	09527-20011	Rear Axle Shaft Bearing Remover							●					
	09550-10012	Replacer Set "B"					●				●			
	(09252-10010)	(No. 1 Replacer Handle)					*	●			●			* Planetary gear

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			CL	MT	AT	TF	PR	SA			BR	SR	BO	Note
Part Name								Front						
Part No.								2WD	4WD	Rear				
Illustration														
	(09557-10010)	(Differential Drive Pinion Front Bearing Replacer)				*							* Planetary gear	
	(09558-10010)	(Rear Axle Shaft Oil Seal Replacer)												
	09550-22011	Rear Axle Bearing & Differential Tool Set												
	(09550-00020)	(Handle)												
	(09550-00031)	(Replacer)												
	09554-30011	Differential Oil Seal Replacer												
	09555-55010	Differential Drive Pinion Bearing Replacer												
	09556-22010	Drive Pinion Front Bearing Remover												
	09557-22022	Companion Flange Remover & Replacer												
	(09557-22030)	(No. 1 Bolt)												
	(09557-22050)	(No. 3 Bolt)												
	09602-35011	Front Axle Inner Bearing Puller												
	09607-60020	Front Wheel Adjusting Nut Wrench												
	09608-10010	Steering Knuckle Oil Seal Replacer												









 

 


 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			CL	MT	AT	TF	PR	SA			BR	SR	BO	Note
Part Name		Front												
Part No.		2WD						4WD	Rear					
Illustration														
	09608-20012	Front Hub & Drive Pinion Bearing Tool Set									●			
	(09608-00040)	(Replacer)									●			Vacuum pump
	(09608-03020)	(Handle)									●			Vacuum pump
	09608-30012	Front Hub & Drive Pinion Bearing Tool Set						●		●		●		
	(09608-00060)	(Drive Pinion Front Bearing Cap Replacer)						●						
	(09608-04020)	(Handle)								●				
	(09608-04030)	(Front Hub Inner Bearing Cone Replacer)										●		
	(09608-04060)	(Front Hub Outer Bearing Cup Replacer)						●						
	(09608-04070)	(Front Hub Inner Bearing Cup Replacer)								●				
	(09608-04100)	(Drive Pinion Front Bearing Cup Replacer)						●						
	09608-35014	Axle Hub & Drive Pinion Bearing Tool Set							●	●				
	(09608-06020)	(Handle)							●	●				
	(09608-06090)	(Front Hub Outer & Steering Worm Bearing Replacer)							●					
	(09608-06100)	(Front Hub Outer Replacer)								●				

SST (SPECIAL SERVICE TOOLS) (Cont'd)

[illegible]

 


 
 







 

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			CL	MT	AT	TF	PR	SA			BR	SR	BO	Note
Part Name		Front						Rear						
Part No.		2WD							4WD					
Illustration														
	(09617-10010)	(Steering Pinion Bearing Adjusting Screw Lock Nut Wrench)									●			
	(09628-10020)	(Ball Joint Lock Nut Wrench)									●			
	09612-24014	Steering Gear Housing Overhaul Tool Set									●			
	(09612-10022)	(Hexagon Wrench)									●			
	(09612-10050)	(Steering Rack Shaft Bushing Replacer)									●			
	(09617-24011)	(Steering Rack Wrench)									●			
	(09617-24020)	(Steering Pinion Bearing Adjusting Screw Lock Nut Wrench)									●			
	(09617-24030)	(Steering Rack End Wrench)									●			
	09616-00010	Steering Worm Bearing Adjusting Socket									●			
	09617-26010	Lock Nut Wrench									●			
	09620-30010	Steering Gear Box Replacer Set									●			
	(09627-30010)	(Steering Sector Shaft Bushing Replacer)									●			
	(09631-00020)	(Handle)									●			
	09628-30011	Ball Joint Remover						●						




 


 
 



 
 
 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

[illegible]


 

 
 
 
 
SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			CL	MT	AT	TF	PR	SA			BR	SR	BO	Note
Part Name		Front												
Part No.		2WD						4WD	Rear					
Illustration														
	09650-17011	Hub Bolt Remover								●				
	09703-30010	Brake Shoe Return Spring Tool								●				
	09709-29017	LSPV Gauge Set								●				
	09710-26010	Front Suspension Bushing Tool Set						●						
	(09710-05020)	(Handle)						●						
	(09710-05030)	(Remover)						●						
	(09710-05040)	(Gate)						●						
	(09710-05050)	(Remover)						●						
	(09710-05060)	(Replacer)						●						
	(09710-05070)	(Front Base)						●						
	(09710-05080)	(Rear Base)						●						
	09718-00010	Shoe Hold Down Spring Driver								●				
	09726-12022	Lower Suspension Arm Bushing Remover & Replacer							●					
	(09726-01030)	(Spacer)							●					

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			CL	MT	AT	TF	PR	SA			BR	SR	BO	Note
Part Name		Front												
Part No.		2WD						4WD	Rear					
Illustration														
	09726-27011	Front Suspension Arm Bushing Remover & Replacer							●	●				
	(09726-02030)	(No. 1 Base)							●					
	(09726-02040)	(Replacer)							●	●				
	(09726-02050)	(Remover & Replacer)							●	●				
	(09726-02060)	(No. 2 Base)							●	●				
	09726-35010	Front Lower Arm Bushing Remover & Replacer								●				LSD only
	09737-00010	Brake Booster Push Rod Gauge									●			
	09751-36011	Brake Tube Union Nut 10 x 12 mm Wrench		●					●		●	●		
	09753-00013	Brake Booster Overhaul Tool Set									●			
	09753-30011	Reaction Disc Hub Holding Tool									●			
	09753-30020	Oil Seal Replacer									●			
	09753-40010	Base Plate									●			
	09806-30010	Windshield Moulding Remover											●	
	09910-00015	Puller Set								●		●		

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			CL	MT	AT	TF	PR	SA			BR	SR	BO	Note
Part Name	Part No.	Illustration						Front		Rear				
								2WD	4WD					
	(09911-00011)	(Puller Clamp)							●		●			
	(09912-00010)	(Puller Slide Hammer)							●		●			
	(09914-00011)	(Rear Axle Shaft Puller Attachment)							●					
	09921-00010	Spring Tension Tool		*	*	*								* Speedometer driven gear oil seal
	09950-00020	Bearing Remover		●		●			●	●				
	09950-20017	Universal Puller				●			●	●		●		
	09992-00094	Oil Pressure Gauge Set			●									

NOTE: For reference to SSTs for the Air Conditioning System see page AC-16.