 
 
 




 

 
 
 


 
 
 
 
 
 

 

TRANSFER

SST (Special Service Tools)

PP20C-01

	09223-22010	Crankshaft Front Oil Seal Replacer	Oil seal
	09308-10010	Oil Seal Puller	Input shaft
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	Driven sprocket Rear output shaft
	(09316-00021)	Replacer "A"	Driven sprocket
	(09316-00031)	Replacer "B"	Rear output shaft
	09330-00021	Companion Flange Holding Tool	Transfer assembly
	09950-00020	Bearing Remover	Input shaft
	09950-40011	Puller B Set	
	(09951-04020)	Hanger 200	Transfer assembly Rear output shaft
	(09952-04010)	Slide Arm	Transfer assembly Rear output shaft
	(09953-04020)	Center Bolt 150	Transfer assembly

PREPARATION - TRANSFER

	(09953-04030) Center Bolt 200	Rear output shaft
	(09954-04010) Arm 25	Transfer assembly
	(09954-04030) Arm 150	Rear output shaft
	(09955-04050) Claw No.5	Transfer assembly Rear output shaft
	(09958-04010) Holder	Transfer assembly Rear output shaft
	09950-60020 Replacer Set No.2	Oil seal
	(09951-00720) Replacer 72	
	09950-70010 Handle Set	Oil seal
	(09951-07150) Handle 150	