


TE1 Terminal Circuit

CIRCUIT DESCRIPTION

The Engine & ECT ECU displays DTCs using the O/D OFF indicator light when terminals TE1 and E1 of the check connector are connected.

WIRING DIAGRAM

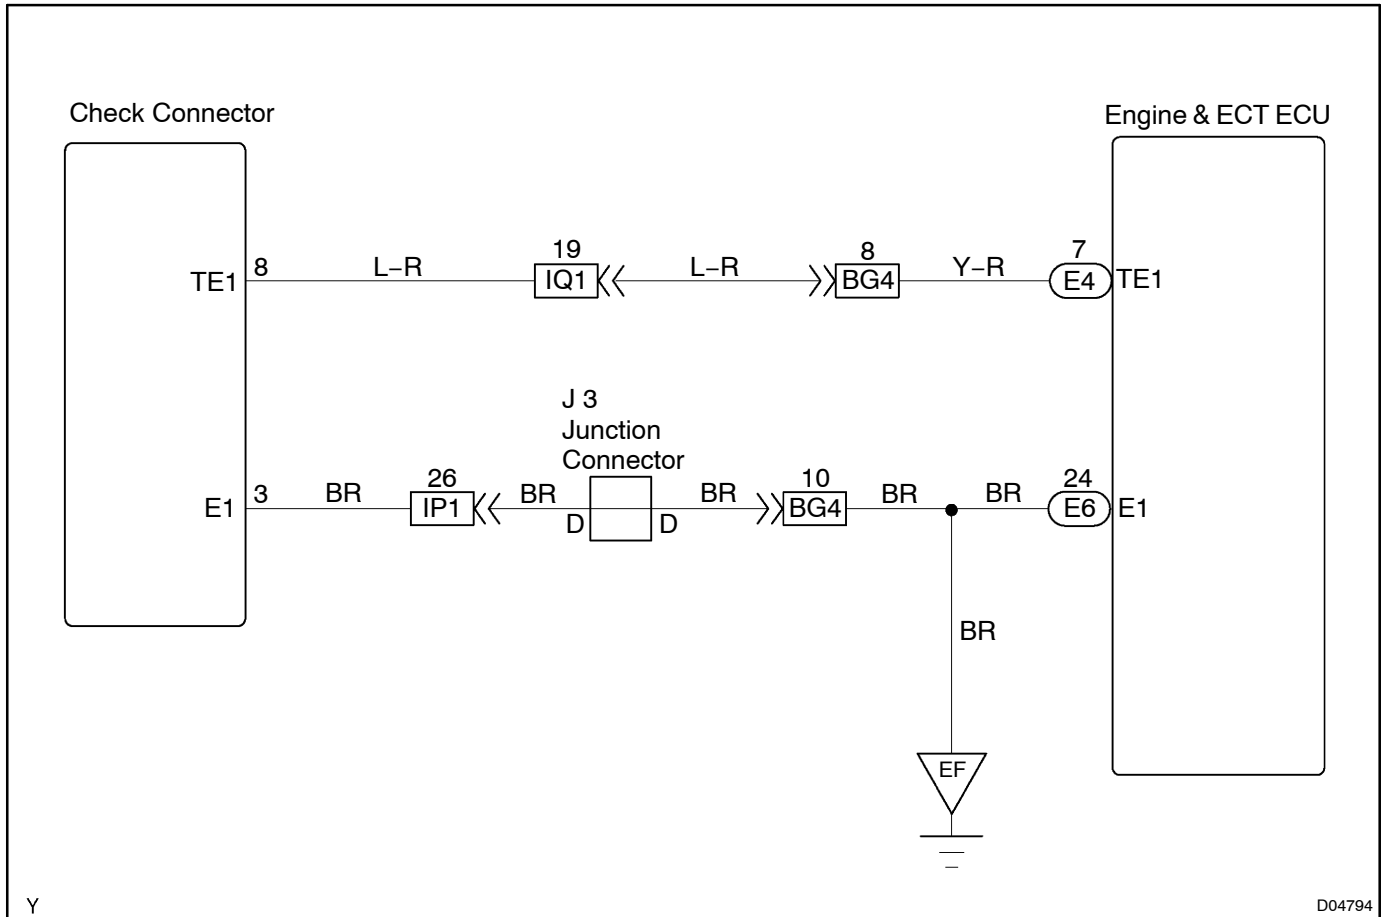


Y

D04794

INSPECTION PROCEDURE

1 Check voltage between terminals TE1 and E1 of check connector.

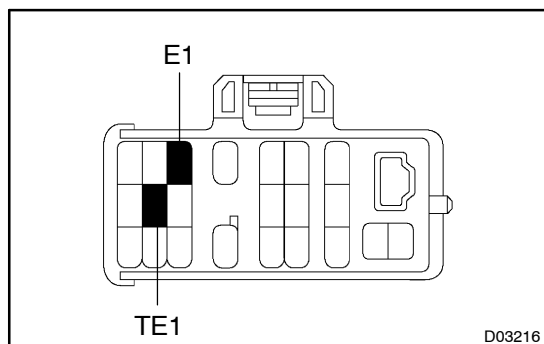**CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminals TE1 and E1 of the check connector.

OK:

Voltage: 9 – 14 V

OK

Proceed to next circuit inspection shown on matrix chart ([See page DI-16](#)).

NG

2 Check harness and connector between body ground and check connector, check connector and Engine & ECT ECU ([See page IN-30](#)).

NG

Repair or replace the harness or connector.

OK

Check and replace the Engine & ECT ECU ([See page IN-30](#)).