

DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the page given.

DTC No. (See Page)	Detection Item	Trouble Area	*1 D/D OFF Indicator Light Blink	*2 Memory
42 (DI-21)	No. 1 Speed Sensor Circuit (Back-up Sensor) Malfunction	<ul style="list-style-type: none"> • Open or short in No. 1 speed sensor circuit • No. 1 speed sensor faulty • Combination meter faulty • Engine & ECT ECU faulty 	○	○
61 (DI-24)	No. 2 Speed Sensor Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in No. 2 speed sensor circuit • No. 2 speed sensor (in ATM) faulty • Engine & ECT ECU faulty 	○	○
62 (DI-27)	No. 1 Solenoid Valve Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in No. 1 solenoid valve circuit • No. 1 solenoid valve faulty • Engine & ECT ECU faulty 	○	○
63 (DI-27)	No. 2 Solenoid Valve Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in No. 2 solenoid valve circuit • No. 2 solenoid valve faulty • Engine & ECT ECU faulty 	○	○
64 (DI-31)	Lock-up Solenoid Valve Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in lock-up solenoid valve circuit • Lock-up solenoid valve faulty • Engine & ECT ECU faulty 	X	○

*1: "○" mark means D/D OFF indicator light blinks once every 2 seconds. "X" mark means D/D OFF indicator light never blinks.

*2: "○" mark means the Engine & ECT ECU memorizes the malfunction code if the Engine & ECT ECU detects the DTC detection condition.