


## Tc Terminal Circuit

### CIRCUIT DESCRIPTION


Connecting terminals Tc and E<sub>1</sub> of the check connector causes the ABS ECU to display the DTC by flashing the ABS warning light.

### WIRING DIAGRAM

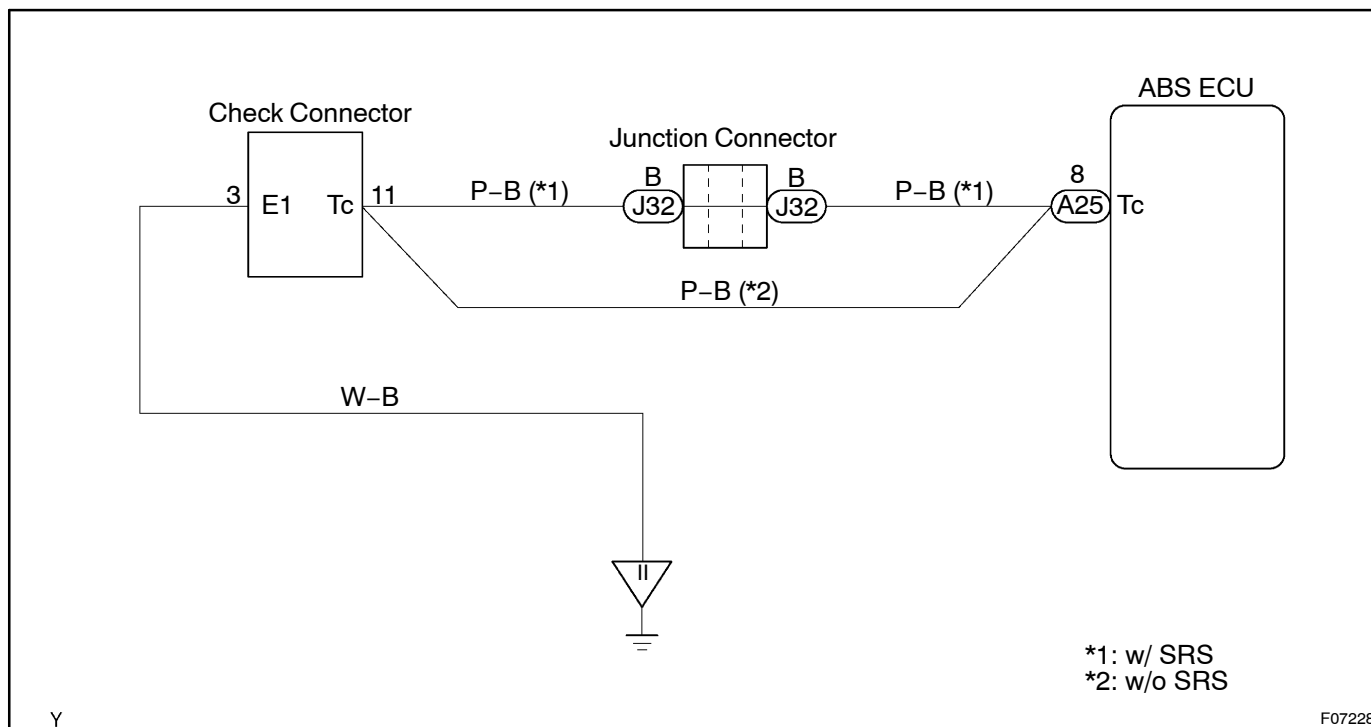

### INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E<sub>1</sub> of check connector.

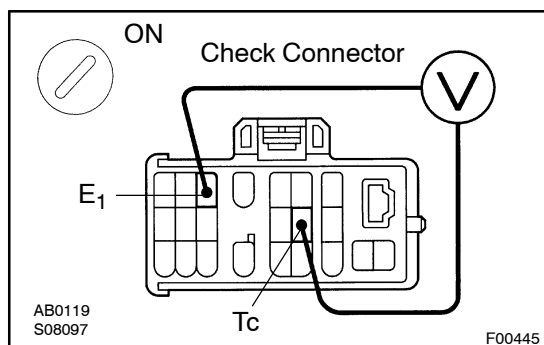

#### CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminals Tc and E<sub>1</sub> of check connector.

#### OK:

**Voltage: 10 – 14 V**

**OK**

**If ABS warning light does not blink even after Tc and E<sub>1</sub> are connected, the ABS ECU may be defective.**

**NG**

2. IG switch OFF, check for open and short circuit in harness and connector between ABS ECU and check connector, check connector and body ground (See [page N-30](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.