


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check.

Connecting terminals Ts and E₁ of the check connector in the engine compartment, starts the check.


WIRING DIAGRAM

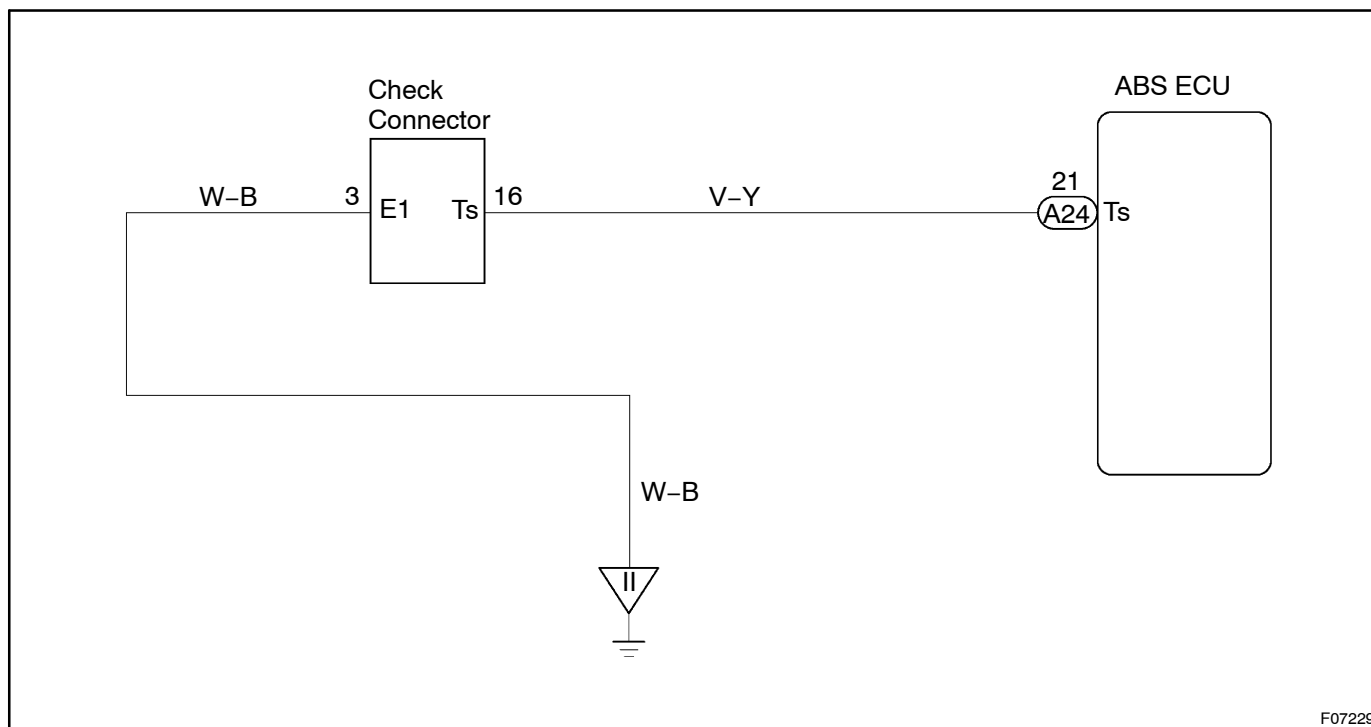

F07229

INSPECTION PROCEDURE

- 1 Check voltage between terminals Ts and E₁ of check connector.

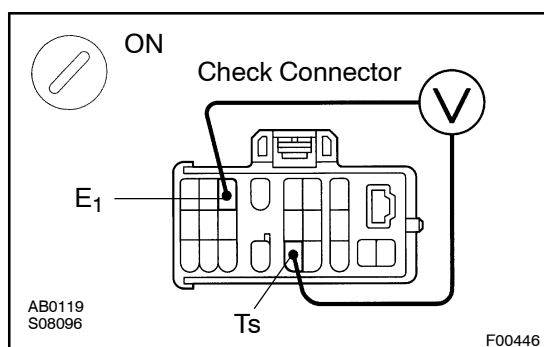

CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminals Ts and E₁ of check connector.

OK:

Voltage: 10 - 14 V

OK

If ABS warning light does not blink even after Ts and E₁ are connected, the ABS ECU may be defective.

NG

2	IG switch OFF, check for open and short circuit in harness and connector between ABS ECU and check connector, check connector and body ground (See page N-30).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.