


## TERMINALS OF ECU

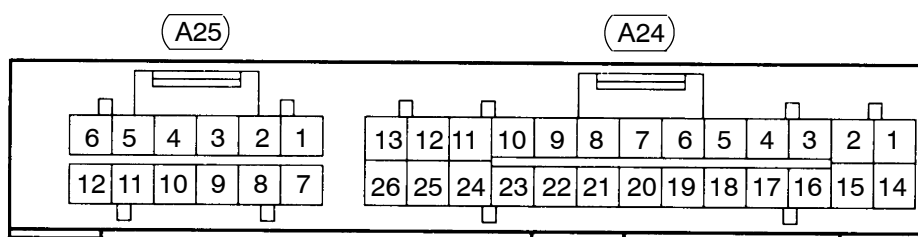

F02625

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
SFRR (A24-1) - GND (A24-12, 25)	B-Y ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SFRH (A24-2) - GND (A24-12, 25)	B-W ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
STP (A24-5) - GND (A24-12, 25)	G-W ↔ W-B	Stop light switch OFF	Below 2.0
		Stop light switch ON	8 - 14
Tc (A24-8) - GND (A24-12, 25)	P-B ↔ W-B	IG switch ON	10 - 14
RR+ (A24-10) - RR- (A24-23)	B ↔ W	IG switch ON, slowly turn right rear wheel	AC generation
WA (A24-11) - GND (A24-12, 25)	B ↔ W-B	IG switch ON, ABS warning light ON	Below 2.0
		IG switch ON, ABS warning light OFF	10 - 14
IG1 (A24-13) - GND (A24-12, 25)	B-R ↔ W-B	IG switch ON	10 - 14
Ts (A24-21) - GND (A24-12, 25)	V-Y ↔ W-B	IG switch ON	10 - 14
RL+ (A24-22) - RL- (A24-9)	R ↔ G	IG switch ON, slowly turn left rear wheel	AC generation
MR (A25-1) - R+ (A24-26)	B-Y ↔ B-O	IG switch ON	Below 1.0
FR+ (A25-3) - FR- (A25-9)	L ↔ P	IG switch ON, slowly turn right front wheel	AC generation
SFLH (A25-5) - GND (A24-12, 25)	B-R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SFLR (A25-6) - GND (A24-12, 25)	G-R ↔ B	IG switch ON, ABS warning light OFF	10 - 14
SR (A25-7) - R+ (A24-26)	B-L ↔ R-W	IG switch ON, ABS warning light OFF	9 - 14
FL+ (A25-8) - FL- (A25-2)	BR ↔ Y	IG switch ON, slowly turn left front wheel	AC generation
MT (A25-10) - GND (A24-12, 25)	B-O ↔ W-B	IG switch ON	Below 1.5
SRH (A25-11) - GND (A24-12, 25)	G-W ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRR (A25-12) - GND (A24-12, 25)	G ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14