



## REMOVAL

1. **REMOVE MASTER CYLINDER** (Refer to Pub. No. RM156E on BR section)

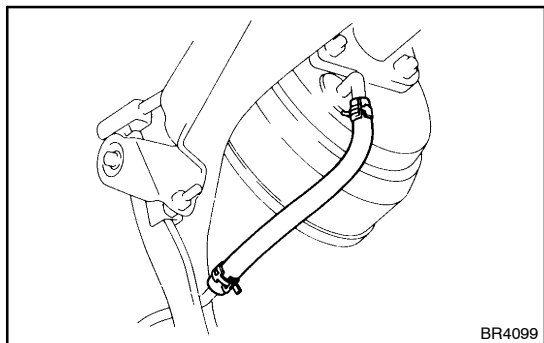

2. **DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER**

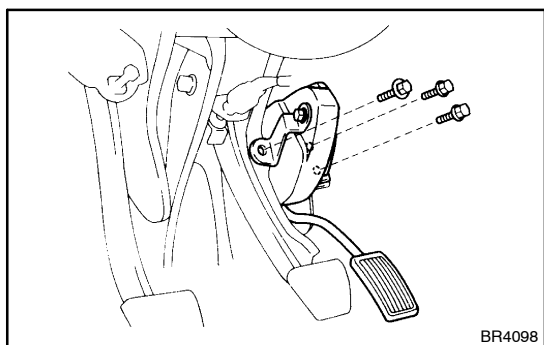


3. **REMOVE INSTALLATION BOLTS OF ACCELERATOR PEDAL ASSEMBLY**

Remove the 3 bolts from the accelerator pedal assembly.

HINT:

Do not disconnect the accelerator cable.

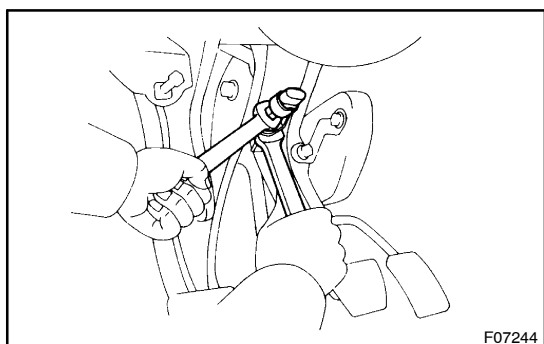


4. **REMOVE STOP LIGHT SWITCH**

- (a) Disconnect the connector.
- (b) Remove the lock nut and stop light switch from the pedal bracket.

5. **DISCONNECT BRAKE PEDAL FROM CLEVIS**

- (a) Remove the cotter pin.
- (b) Loosen the lock nut.
- (c) Remove the clevis pin.

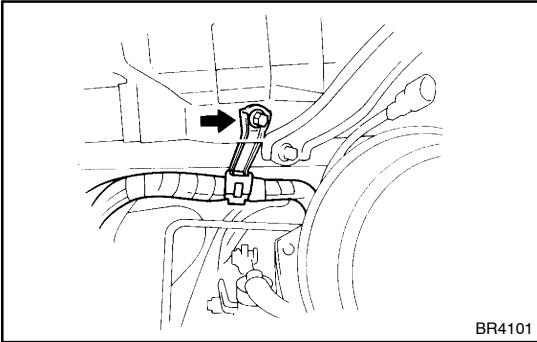


## 6. REMOVE WIRE HARNESS CLAMP INSTALLATION BOLT

Remove the bolt from the wire harness clamp.

HINT:

Do not remove the clamp from the wire harness.

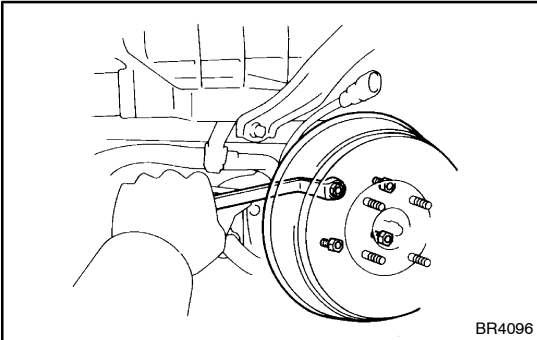

## 7. REMOVE BRAKE BOOSTER

- (a) Remove the 4 nuts.
- (b) Remove the clevis.
- (c) Pull out the brake booster to underside.