

INSTALLATION

Installation is in the reverse order of removal (See page BR-13).

HINT:

- After installation, fill brake reservoir with brake fluid and bleed brake system (Refer to Pub. No. RM156E on BR section).
- Check and adjust the fluid pressure (See page BR-9) and check for leaks.