



REMOVAL

1. REMOVE RADIATOR GRILLE (See page BO-1)
2. REMOVE HEADLIGHT ORNAMENT (See page BO-1)
3. REMOVE FRONT BUMPER COVER (See page BO-1)

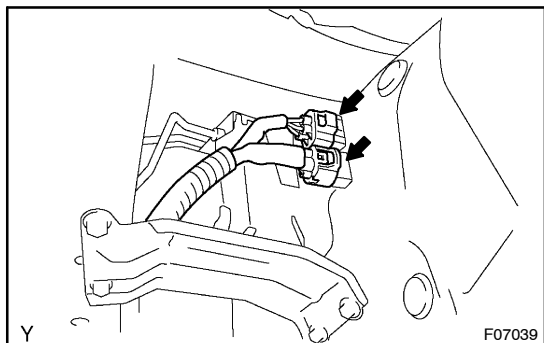

4. DISCONNECT CONNECTORS

Disconnect the 2 connectors from the actuator.

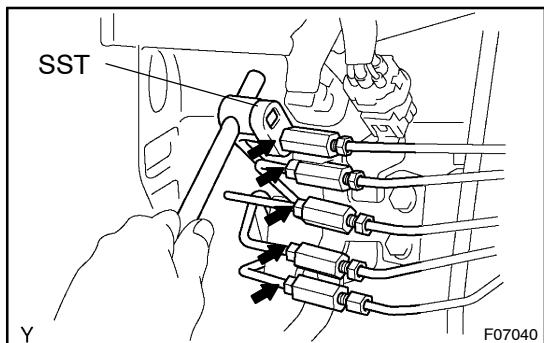

5. DISCONNECT BRAKE LINES

Using SST, disconnect the 5 brake lines.


SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

6. REMOVE ABS ACTUATOR

- (a) Remove the 4 bolts and ABS actuator assembly.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

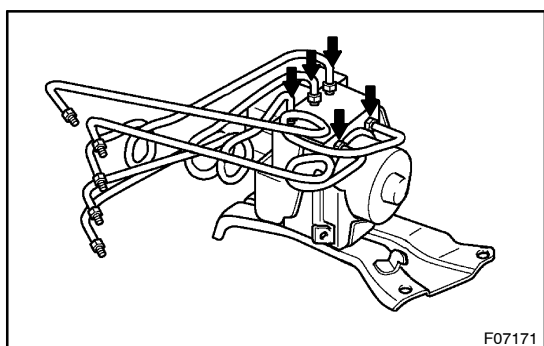

HIACE (SUP) (RM670E)

- (b) Using SST, disconnect the 5 brake lines from the actuator.
SST 09023-00100
Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)
- (c) Remove the 2 nuts and ABS actuator from the actuator bracket.
Torque: 5.4 N·m (55 kgf·cm, 4.8 ft·lbf)
- (d) Remove the 2 cushion bolts and 3 cushions from the ABS actuator.