


REMOVAL

1. DISCONNECT SPEED SENSOR CONNECTOR

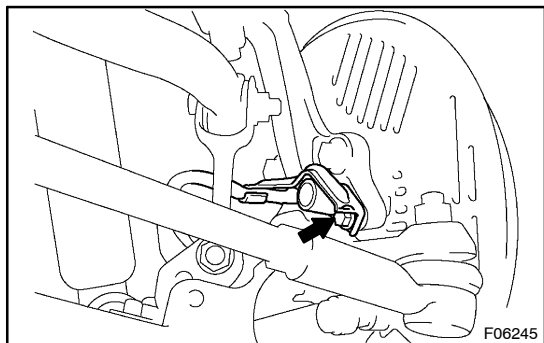

2. REMOVE SPEED SENSOR

- (a) Remove the 3 bolts holding the sensor harness from the body and upper arm.

Torque:

12 mm head bolt: 13 N·m (130 kgf·cm, 9 ft·lbf)

10 mm head bolt: 5.0 N·m (50 kgf·cm, 43 in·lbf)

- (b) Remove the bolt and speed sensor from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)