

## INSTALLATION

Installation is in the reverse order of removal (See page BR-23).

HINT:

After installation, check the speed sensor signal (See page DI-52).