


REMOVAL

1. DISCONNECT SPEED SENSOR CONNECTOR

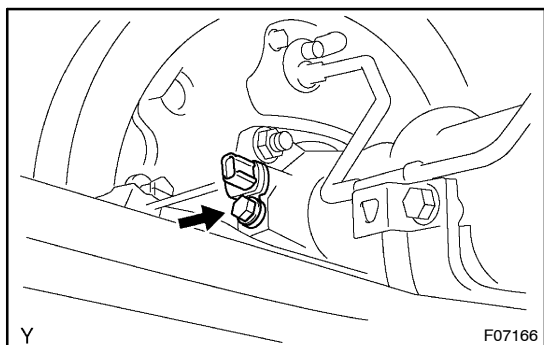

2. REMOVE SPEED SENSOR

Remove the bolt and speed sensor with O-ring from the axle housing.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)