

SRS AIRBAG OPERATION


RS0JJ-01

1. STEERING WHEEL PAD (with AIRBAG)

The inflator and bag of the SRS are stored in the steering wheel pad and cannot be disassembled. The inflator contains a squib, igniter charge, gas generator, etc., and inflates the bag when instructed by the airbag sensor assembly.

2. DISCONNECTION OF CONNECTORS FOR STEERING WHEEL PAD (with AIRBAG)

- Place a finger on the slider.
- Slide the slider to release lock.
- Disconnect the connector.

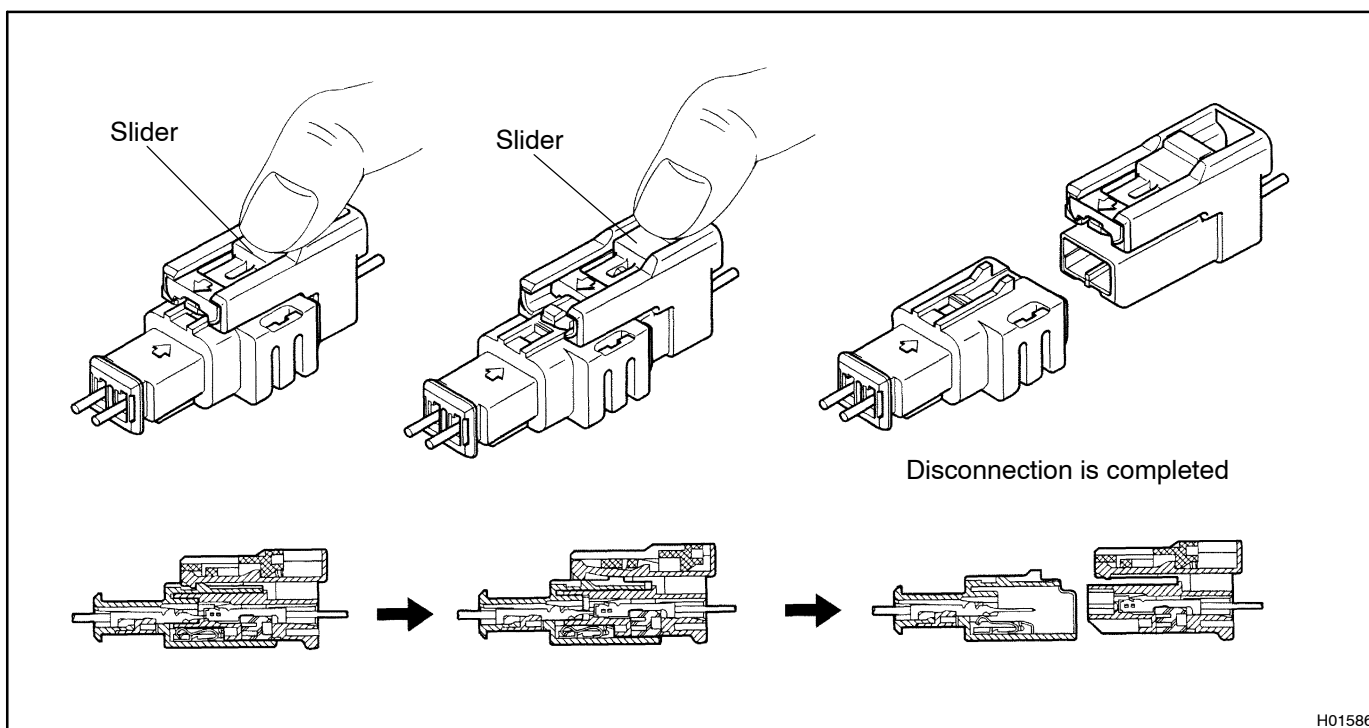


H01586

3. CONNECTION OF CONNECTORS FOR STEERING WHEEL PAD (with AIRBAG)

- (a) Align a lock part of male connector and a slider of female connector in the same direction as shown in the illustration, fit in them without rubbing.
- (b) Be sure to insert until they are locked. After fitting in pull them slightly to check that they are locked. (When locked, make sure that the outer returns to its original position and sound at the time of fitting in can be heard.)

HINT:

- As the slider slides, do not touch it.
- Be careful not to deform the release board. If the release board is deformed, replace it with a new one.

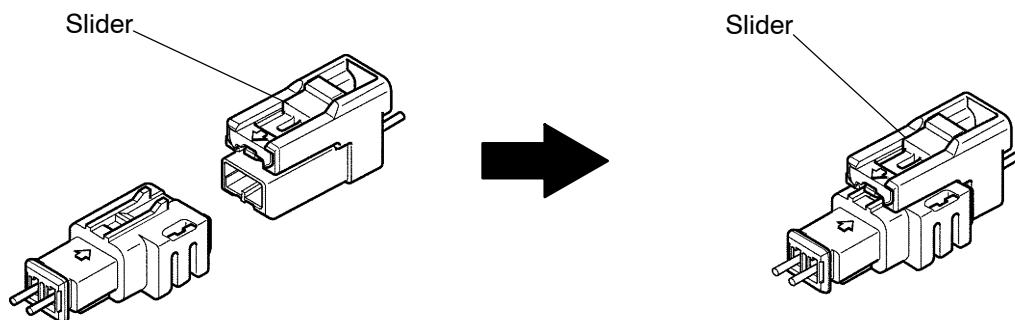

H01587