


REMOVAL


NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace with new parts.

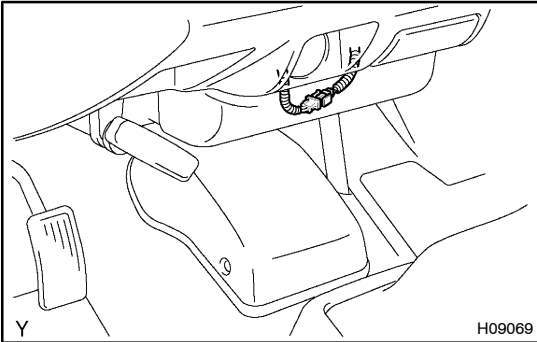

1. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the clamp and passenger airbag connector from the instrument panel to fender.

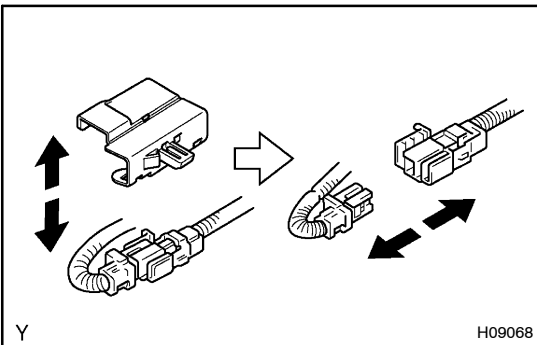

- (b) Disconnect the front passenger airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

2. REMOVE INSTRUMENT PANEL

(Refer to Pub. No. RM156E on BO section)

3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

Remove 3 bolts and passenger airbag.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment direction facing downward.
- Never disassemble the front passenger airbag assembly.