

## INSTALLATION

### NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

### 1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

Install the front passenger airbag assembly with 3 bolts.

### CAUTION:

- Make sure that no foreign objects are trapped between the airbag bag and the module.
- Do not damage the strap when installing the module.

### NOTICE:


If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

### 2. INSTALL INSTRUMENT PANEL

(Refer to Pub. No. RM156E on BO section)

### NOTICE:

- Make sure the front passenger airbag assembly is installed with the specified torque.
- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.
- When installing the instrument panel box, carefully pull out the airbag wire harness from the glove compartment upper hole.

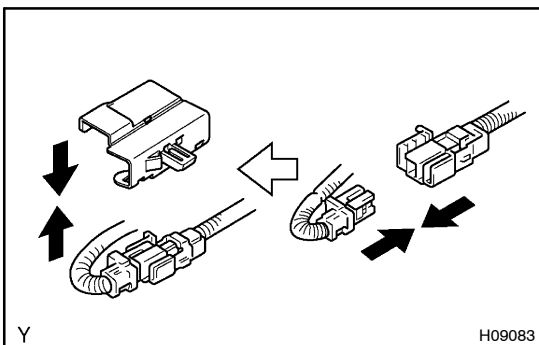

### 3. CONNECT AIRBAG CONNECTOR

- (a) Connect the front passenger airbag connector.
- (b) Install the clamp and passenger airbag connector.