

REMOVAL


NOTICE:

Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity)

1. REMOVE AIRBAG SENSOR COVER

Remove 2 screws and the airbag sensor cover.

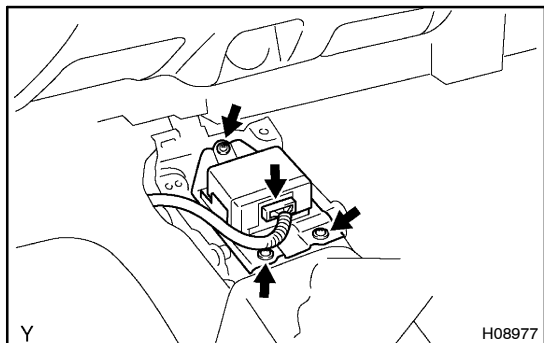

2. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the airbag sensor connector.

NOTICE:

Remove the connector with the airbag sensor assembly installed.

- (b) Using a torx wrench, remove the 3 screws and airbag sensor assembly.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)