


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

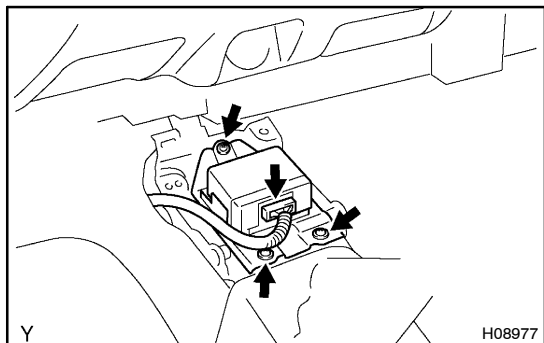

1. INSTALL AIRBAG SENSOR ASSEMBLY

- (a) Using a torx socket wrench, install the airbag sensor assembly with 3 screws.

Torx socket wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

- (b) Connect the airbag sensor connector.

NOTICE:

- Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, brackets or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installation, shake the sensor to check that there is no looseness.

2. INSTALL AIRBAG SENSOR COVER

Install the airbag sensor cover with 2 screws.