

## REPLACEMENT

### REPLACEMENT REQUIREMENTS

In the following cases, replace the wire harness or connector.

If any part of the SRS wire harness or any connector has been found to be faulty in troubleshooting.

If any part of the SRS wire harness or any connector has been found to be faulty during checking items (See [page RS-39](#)).

#### CAUTION:

- If the wire harness used in the SRS is damaged, replace the whole wire harness assembly.
- When the connector to the front airbag sensors can be repaired alone (when there is no damage to the wire harness), use the repair wire specially designed for this purpose.