



## REMOVAL

### REMOVE CLUTCH ACCUMULATOR WITH BRACKET

- (a) Using SST, disconnect 2 clutch lines from the accumulator.

SST 09023-00100

**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

- (b) Remove 2 bolts, accumulator and bracket.

**Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)**