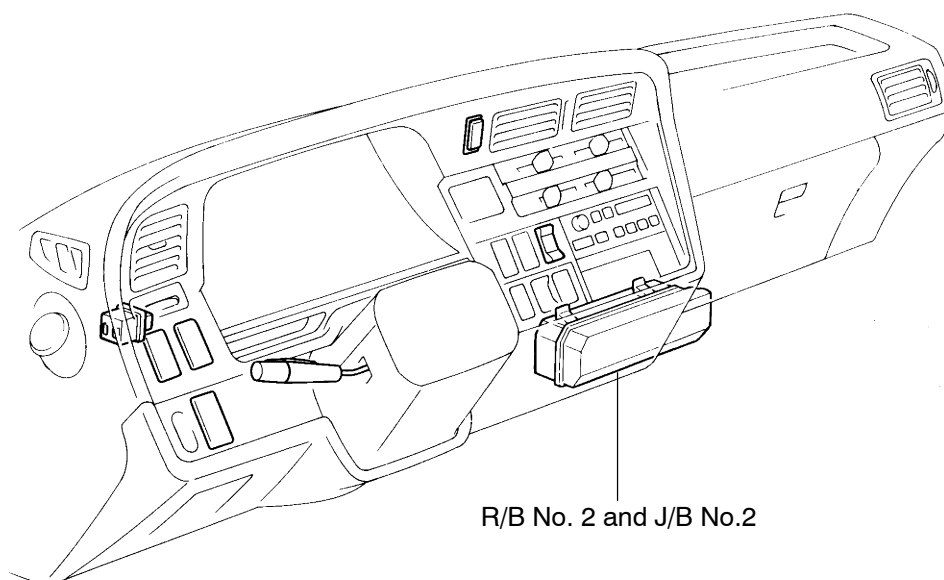
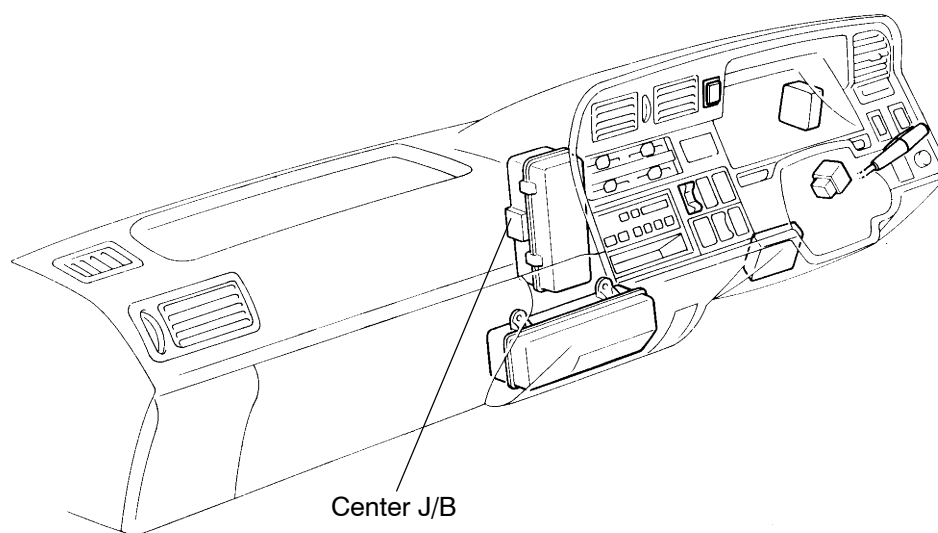



POWER SOURCE LOCATION

BE1CO-01

LHD Model:**RHD Model:**

110189

Center J/B (RHD models)

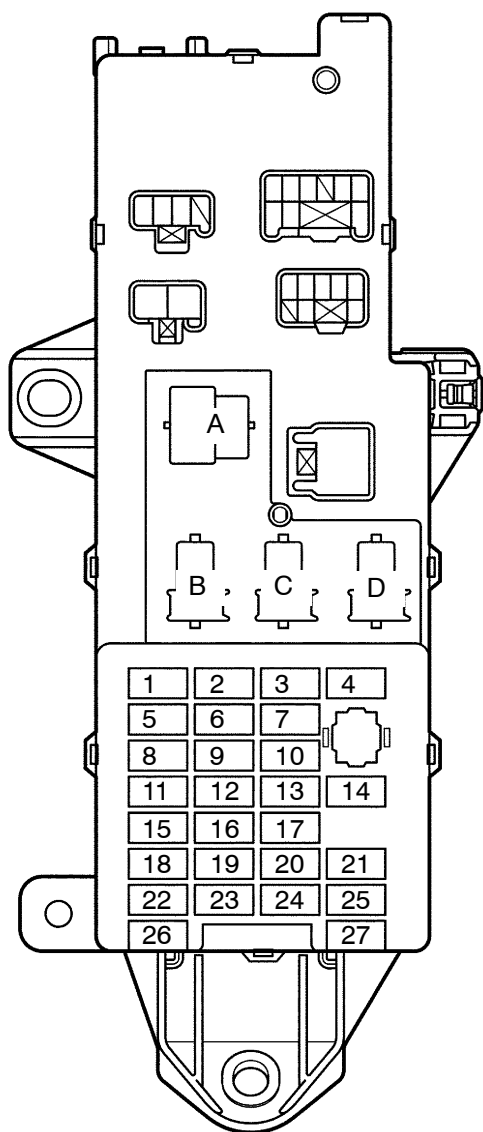


Fuses:

| | |
|-----------------|------|
| 1. W/ PUMP | 7.5A |
| 2. FOG | 15A |
| 3. CIG | 15A |
| 4. ECU-B | 15A |
| 5. ECU-IG | 15A |
| 6. RADIO | 10A |
| 7. RR HTR | 20A |
| 8. TURN | 10A |
| 9. ST | 5A |
| 10. RADIO NO. 2 | 15A |
| 11. WIP | 20A |
| 12. DEF | 20A |
| 13. OBD2 | 10A |
| 14. TAIL | 15A |
| 15. H-LP (RH) | 15A |
| 16. GAUGE | 15A |
| 17. AC100V | 15A |
| 18. H-LP (LH) | 15A |
| 19. A.C | 15A |
| 20. AM2 | 20A |
| 21. STOP | 15A |
| 22. IGN | 10A |
| 23. EFI: ECD | 15A |
| 24. DOME | 10A |
| 25. HAZ | 15A |
| 26. SPARE | 10A |
| 27. SPARE | 15A |

RELAYS:

- A. Headlight Relay
- B. Rear Deffoger Relay
- C. P/M Relay
- D. Rear Heater Relay

R/B NO.2 and J/B NO.2 (RHD models)

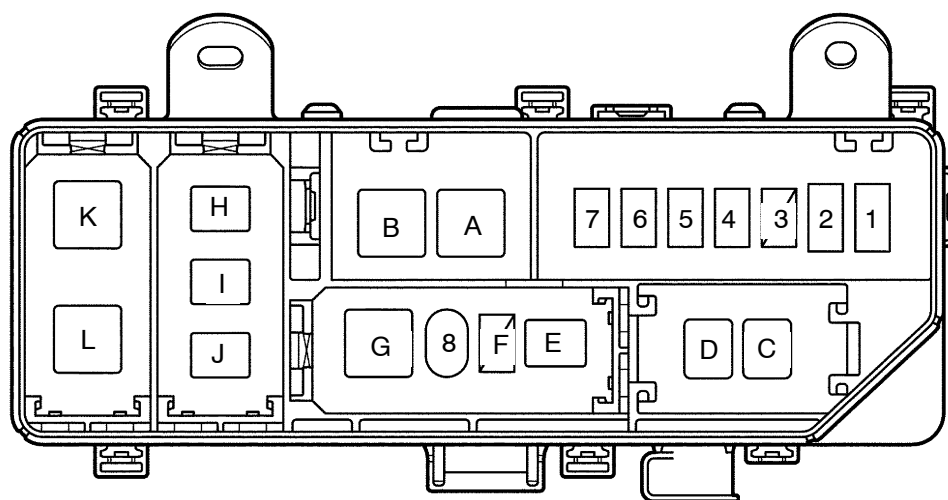

Fuses:

| | |
|----------------|------|
| 1. AM1 | 7.5A |
| 2. ABS | 15A |
| 3. - | |
| 4. A/C NO.2 | 15A |
| 5. HEAD | 15A |
| 6. CDS FAN | 10A |
| 7. FR HTR | 20A |
| 8. PWR RR DOOR | 10A |

RELAYS:

- A. Front Heater Relay
- B. ABS Solenoid Relay
- C. AC 100V Relay
- D. Front Fog Light Relay
- E. A/C Fan Relay
- F. -
- G. ABS Motor Relay
- H. EFI Main Relay (Gasoline Engine)
- I. Idle -Up Relay (Gasoline Engine)
- J. Circuit Opening Relay (Gasoline Engine)
- K. Engine Main Relay (Diesel Engine)
- L. I/C Relay (Diesel Engine)