

INSPECTION

1. LHD Models: INSPECT LIGHT CONTROL SWITCH


Switch position	Tester connection	Specified condition
OFF	–	No continuity
TAIL	14 – 16	Continuity
HEAD	13 – 14 – 16	Continuity

If continuity is not as specified, replace the switch.

2. LHD Models: INSPECT HEADLIGHT DIMMER SWITCH

Switch position	Tester connection	Specified condition
Flash	7 – 8 – 16	Continuity
Low beam	16 – 17	Continuity
Hi beam	7 – 16	Continuity

If continuity is not as specified, replace the switch.

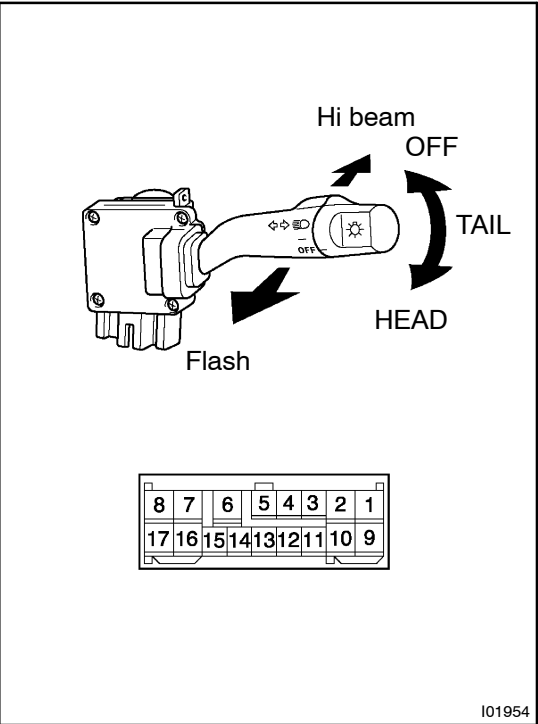

3. RHD Models: INSPECT LIGHT CONTROL SWITCH


Switch position	Tester connection	Specified condition
OFF	–	No continuity
TAIL	9 – 15	Continuity
HEAD	9 – 14 – 15	Continuity

If continuity is not as specified, replace the switch.

4. RHD Models: INSPECT HEADLIGHT DIMMER SWITCH

Switch position	Tester connection	Specified condition
Flash	1 – 2 – 9	Continuity
Low beam	9 – 10	Continuity
Hi beam	2 – 9	Continuity


If continuity is not as specified, replace the switch.

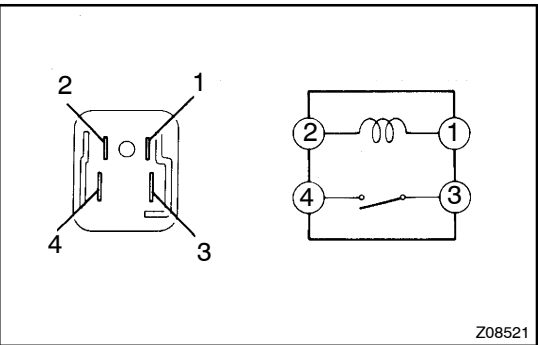

5. INSPECT HEAD RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B + between terminals 1 and 2.	3 – 4	Continuity

If continuity is not as specified, replace the relay.

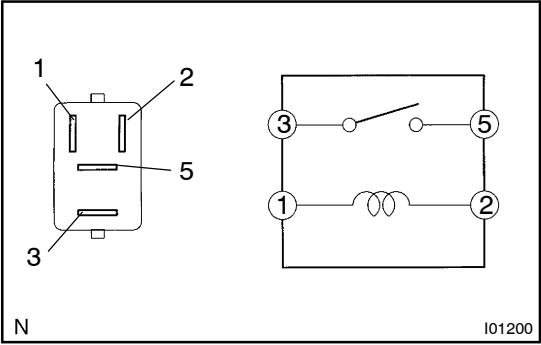

6. INSPECT TAIL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B + between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.