


INSPECTION

1. LHD Models: INSPECT REAR FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	6 – 7	Continuity


If continuity is not as specified, replace the switch.

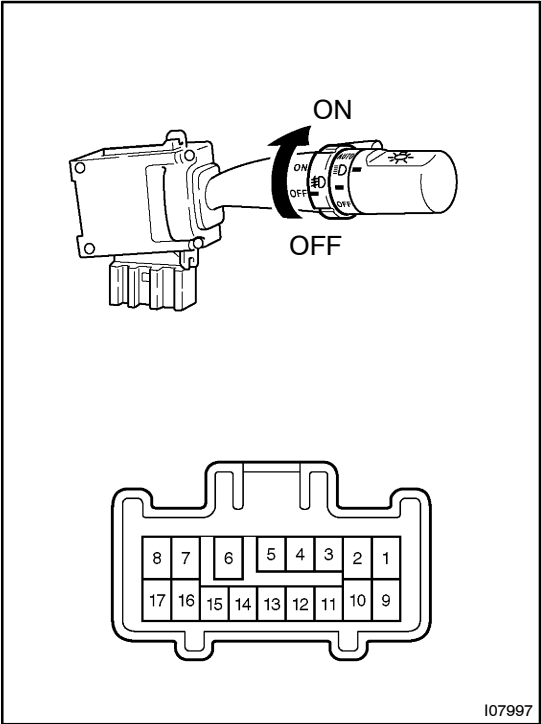

2. RHD Models: INSPECT FRONT FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	12 – 16	Continuity

If continuity is not as specified, replace the switch.

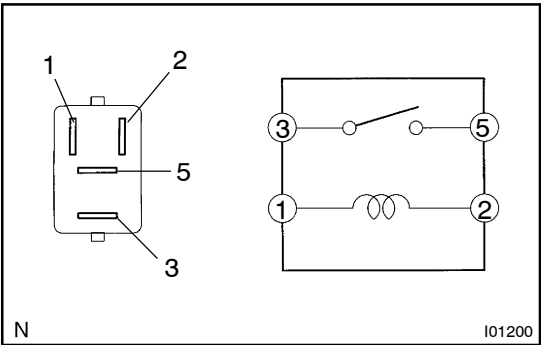

3. INSPECT FRONT FOG LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2	3 – 5	Continuity

If continuity is not as specified, replace the relay.